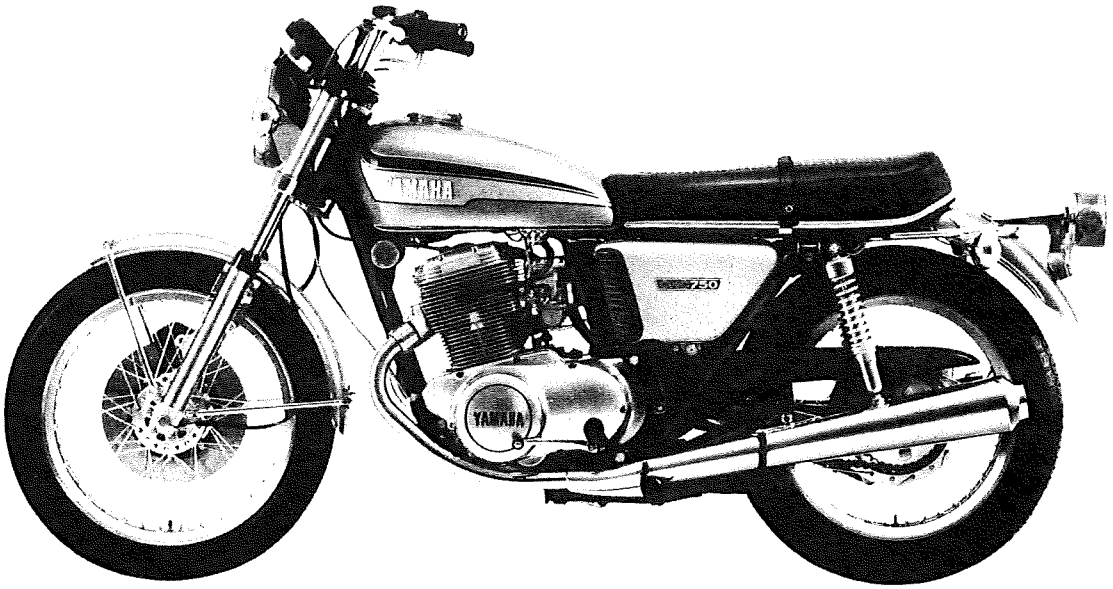
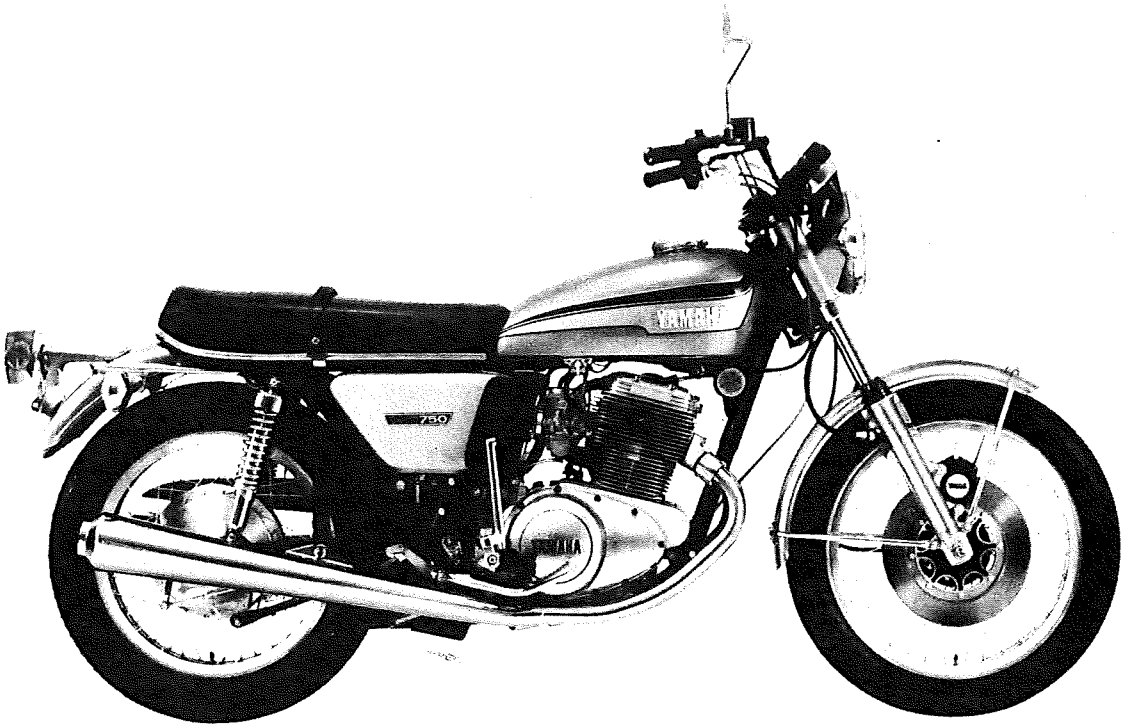
YAMAHA

PARTS LIST

MODEL TX750


YAMAHA
750
YAMAHA



YAMAHA
750
YAMAHA

FOREWORD

This Parts List relates to the parts in use for the Yamaha TX750. When you are ordering replacement parts for the TX750, refer to this Parts List and quote both part numbers and part names correctly.

1. Structure of Part No.

Yamaha parts are divided largely into two categories; general parts and standard parts, and each part No. has the following structure:

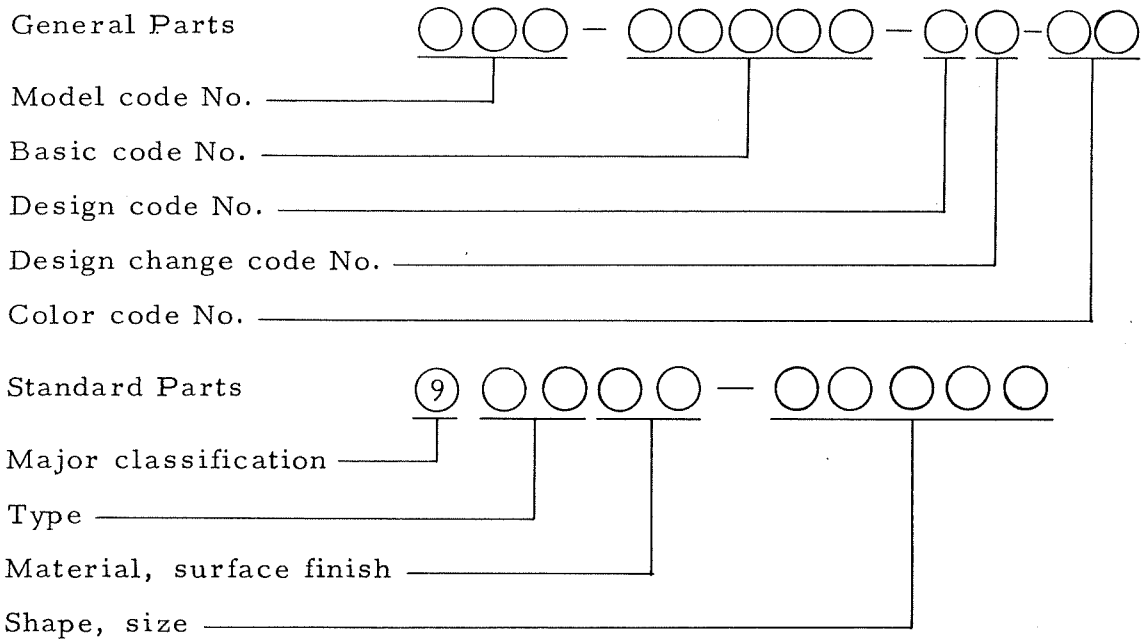

Note: Every standard No. begins with 9.

2. How to Use this Parts List

(1) Except for steel balls (whose size is indicated in inches), the size of all parts is indicated in millimeters in the following manner.

Pipe (rubber or vinyl) .... Inside diameter - length

O-ring ..... Section area - inside diameter

Washer, shim, collar ..... Inside diameter - outside diameter - thickness (length)

(2) Parts, which are to be supplied in the form of assemblies, are listed with an indention of one letter's space, and a dot (.) is put

against the name of each part. If any two different assemblies (e.g., right and left side components) consist of almost the same type components, these two assemblies are listed in two lines, and then the names of component parts are listed in the subsequent lines with an indention as mentioned earlier. The quantity of parts is given in the following manner; that is, in the case of parts being the same in type between the right and left, a total quantity of parts is given. On the other hand, if the right and left side parts are different in type, the quantity of part(s) on each side is given.

Example

Description	Q'ty
CARBURETOR ASS'Y, left	1
CARBURETOR ASS'Y, right	1
. JET, pilot	2
. NOZZLE, main	2
⋮	
. LEVER, starter, left	1
. LEVER, starter, right	1

(3) Key to Symbols

U.R. ..... Use size (thickness) and/or number as required

U.N. ..... Use as many as you need.

T ..... Number of teeth in a gear

V ..... Voltage for light bulbs

S ..... "S" type oil seal or "S" type circlip

SD ..... "SD" type oil seal

SO ..... "SO" type oil seal

SW ..... "SW" type oil seal

E ..... "E" type circlip

R ..... "R" type circlip

F/No. ..... Frame No. (Applicable machine No.)

(4) The right and left in relation to parts are determined on the basis of the rider facing toward the front.

(5) This Parts List is based on the model in the production line on Oct., 5, 1972. Accordingly, if any modifications which have been made to parts will be announced in the Yamaha Parts News. It is advisable that according to the Yamaha Parts News, You will make necessary corrections to the Parts List on hand to keep it up-to dated.

CONTENTS

ENGINE

Fig. 1	Cylinder Head Cover	1
Fig. 2	Valve · Rocker Arm	5
Fig. 3	Cylinder Head · Cylinder	7
Fig. 4	Crank · Piston	9
Fig. 5	Camshaft · Chain Tensioner	13
Fig. 6	Crank Balancer	15
Fig. 7	Starting Motor Unit	19
Fig. 8	Starting Motor	21
Fig. 9	A.C. Generator	23
Fig. 10	Contact Breaker · Governor	25
Fig. 11	Oil Pump	27
Fig. 12	Oil Cleaner	31
Fig. 13	Clutch	35
Fig. 14	Transmission	39
Fig. 15	Shifter 1	43
Fig. 16	Shifter 2	47
Fig. 17	Kick Starter	49
Fig. 18	Crankcase	51
Fig. 19	Crankcase Cover Left	55
Fig. 20	Crankcase Cover Right	57
Fig. 21	Intake	59
Fig. 22	Carburetor	61
Fig. 23	Exhaust	67

CHASSIS

Fig. 24	Frame	71
Fig. 25	Box · Side Cover Left	75
Fig. 26	Oil Tank · Side Cover Right	79

Fig. 27 Stand · Footrest · Brake Pedal 83
Fig. 28 Rear Arm · Rear Cushion · Chain Case 87
Fig. 29 Front Fender · Rear Fender 91
Fig. 30 Steering 95
Fig. 31 Front Fork 99
Fig. 32 Handle · Wire 103
Fig. 33 Master Cylinder · Brake Hose 105
Fig. 34 Fuel Tank 109
Fig. 35 Seat 113
Fig. 36 Front Wheel 115
Fig. 37 Disk Brake · Caliper 119
Fig. 38 Rear Wheel 121
Fig. 39 Head Lamp 125
Fig. 40 Speedometer · Tachometer 129
Fig. 41 Tail Lamp 133
Fig. 42 Flasher Lamp 135
Fig. 43 Electrical 1 137
Fig. 44 Electrical 2 141

ACCESORY PARTS


Fig. 45 Wind Shield · Bumper · Side Bag 147

NUMERICAL INDEX

ENGINE

YAMAHA
PARTS


Fig. 1 CYLINDER HEAD COVER

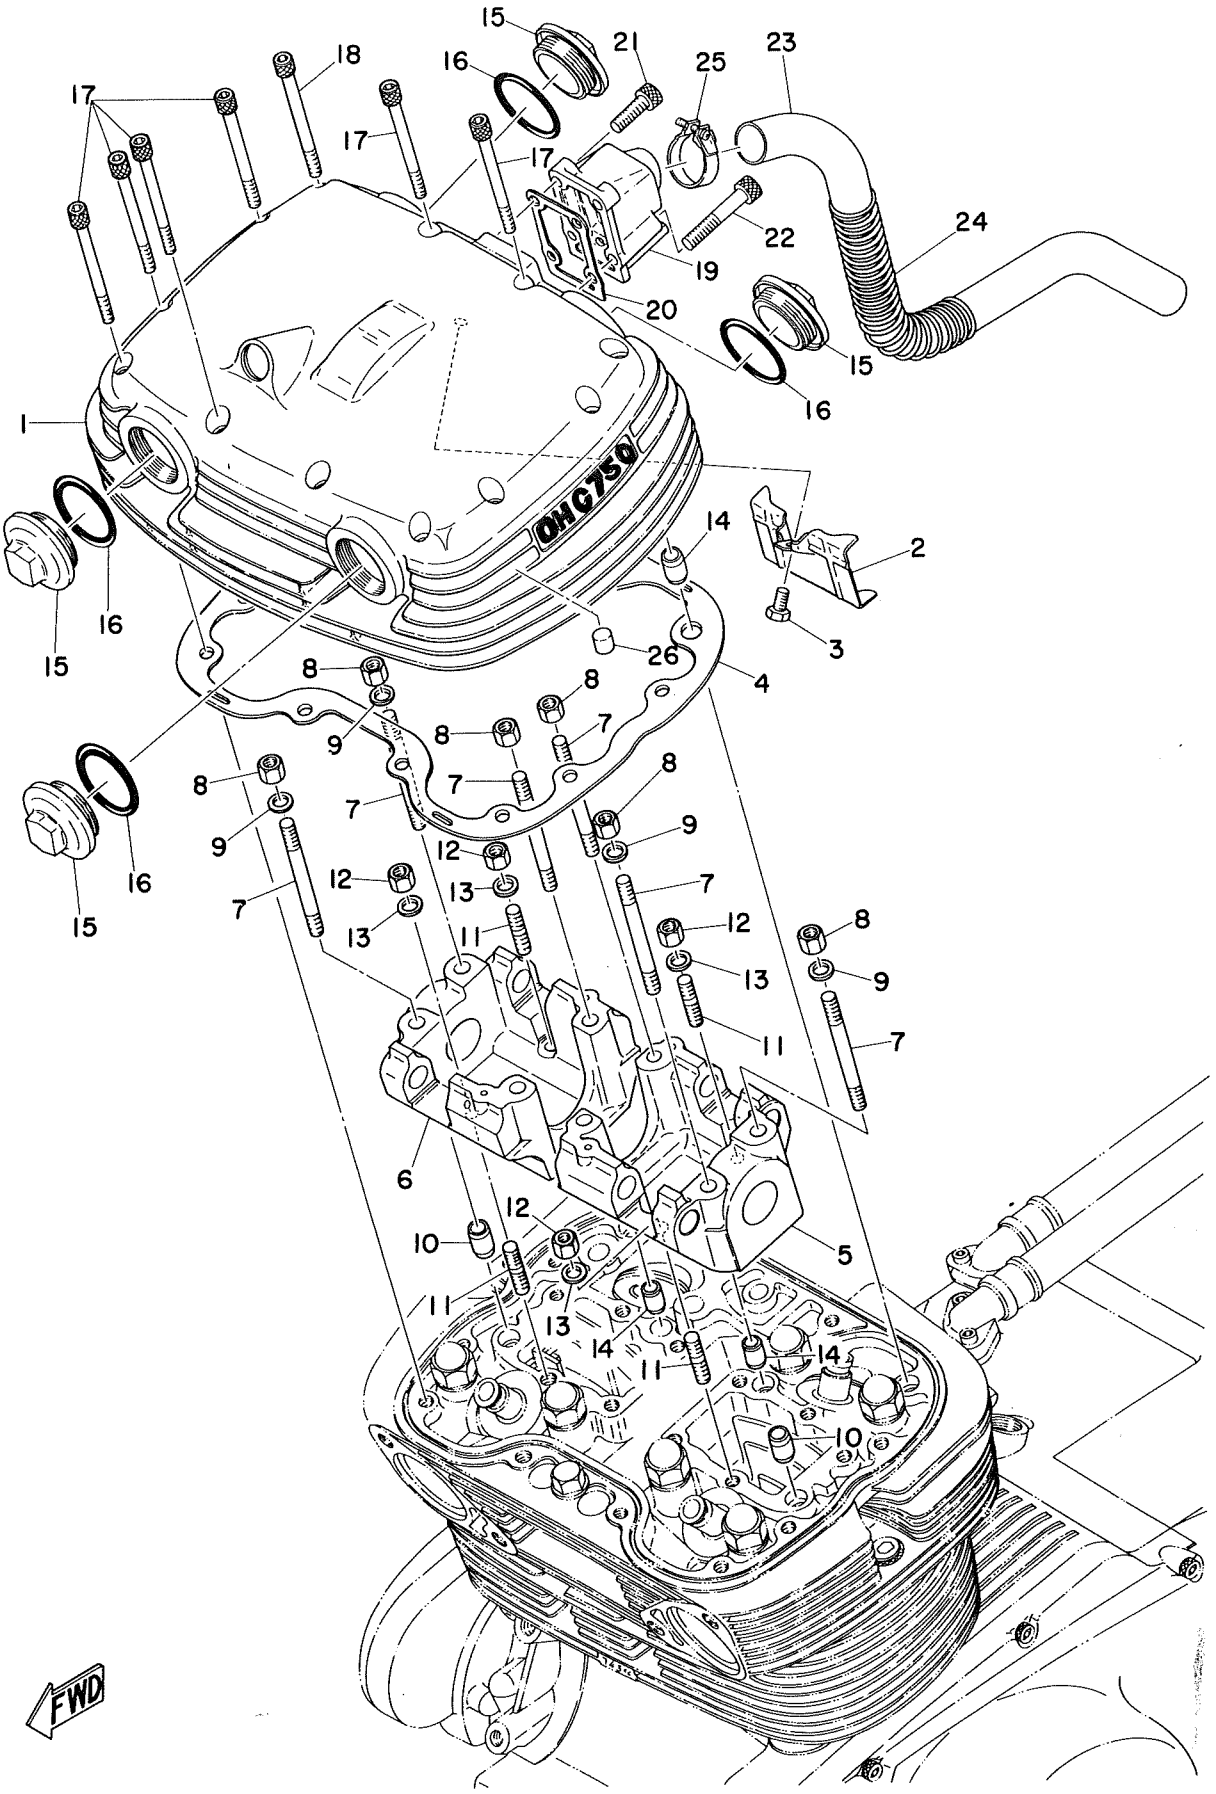

CYLINDER HEAD COVER

Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
1- 1	341-11191-01	COVER, cylinder head	1		
1- 2	341-11154-02	PLATE, cylinder head cover 1 ...	1		
1- 3	91201-06010	BOLT	1		
1- 4	341-11193-00	GASKET, cylinder head cover ...	1		
1- 5	341-11184-02	BRACKET, camshaft left	1		
1- 6	341-11183-02	BRACKET, camshaft right	1		
1- 7	341-11391-01	BOLT, stud 1	8		
1- 8	99801-08200	NUT	8		
1- 9	92901-08200	WASHER, plain	4		
1-10	91810-05016	PIN, dowel (8.4-12-16)	2		
1-11	341-11392-00	BOLT, stud 2	4		
1-12	98801-06200	NUT	4		
1-13	92901-06200	WASHER, plain	4		
1-14	91810-02014	PIN, dowel (6.4-10-14)	4		
1-15	341-11186-02	COVER, cylinder head side 1 ...	4		
1-16	93210-45191	O-RING (3.0-45)	4		
1-17	91316-06070	BOLT	10		
1-18	91316-06075	BOLT	2		
1-19	341-11160-01	BREATHER COVER ASS'Y	1		
1-20	341-11169-00	GASKET, breather cover	1		
1-21	91316-06020	BOLT	2		
1-22	91316-06040	BOLT	2		
1-23	341-11166-11	PIPE, breather 1	1		


Fig. 1 CYLINDER HEAD COVER

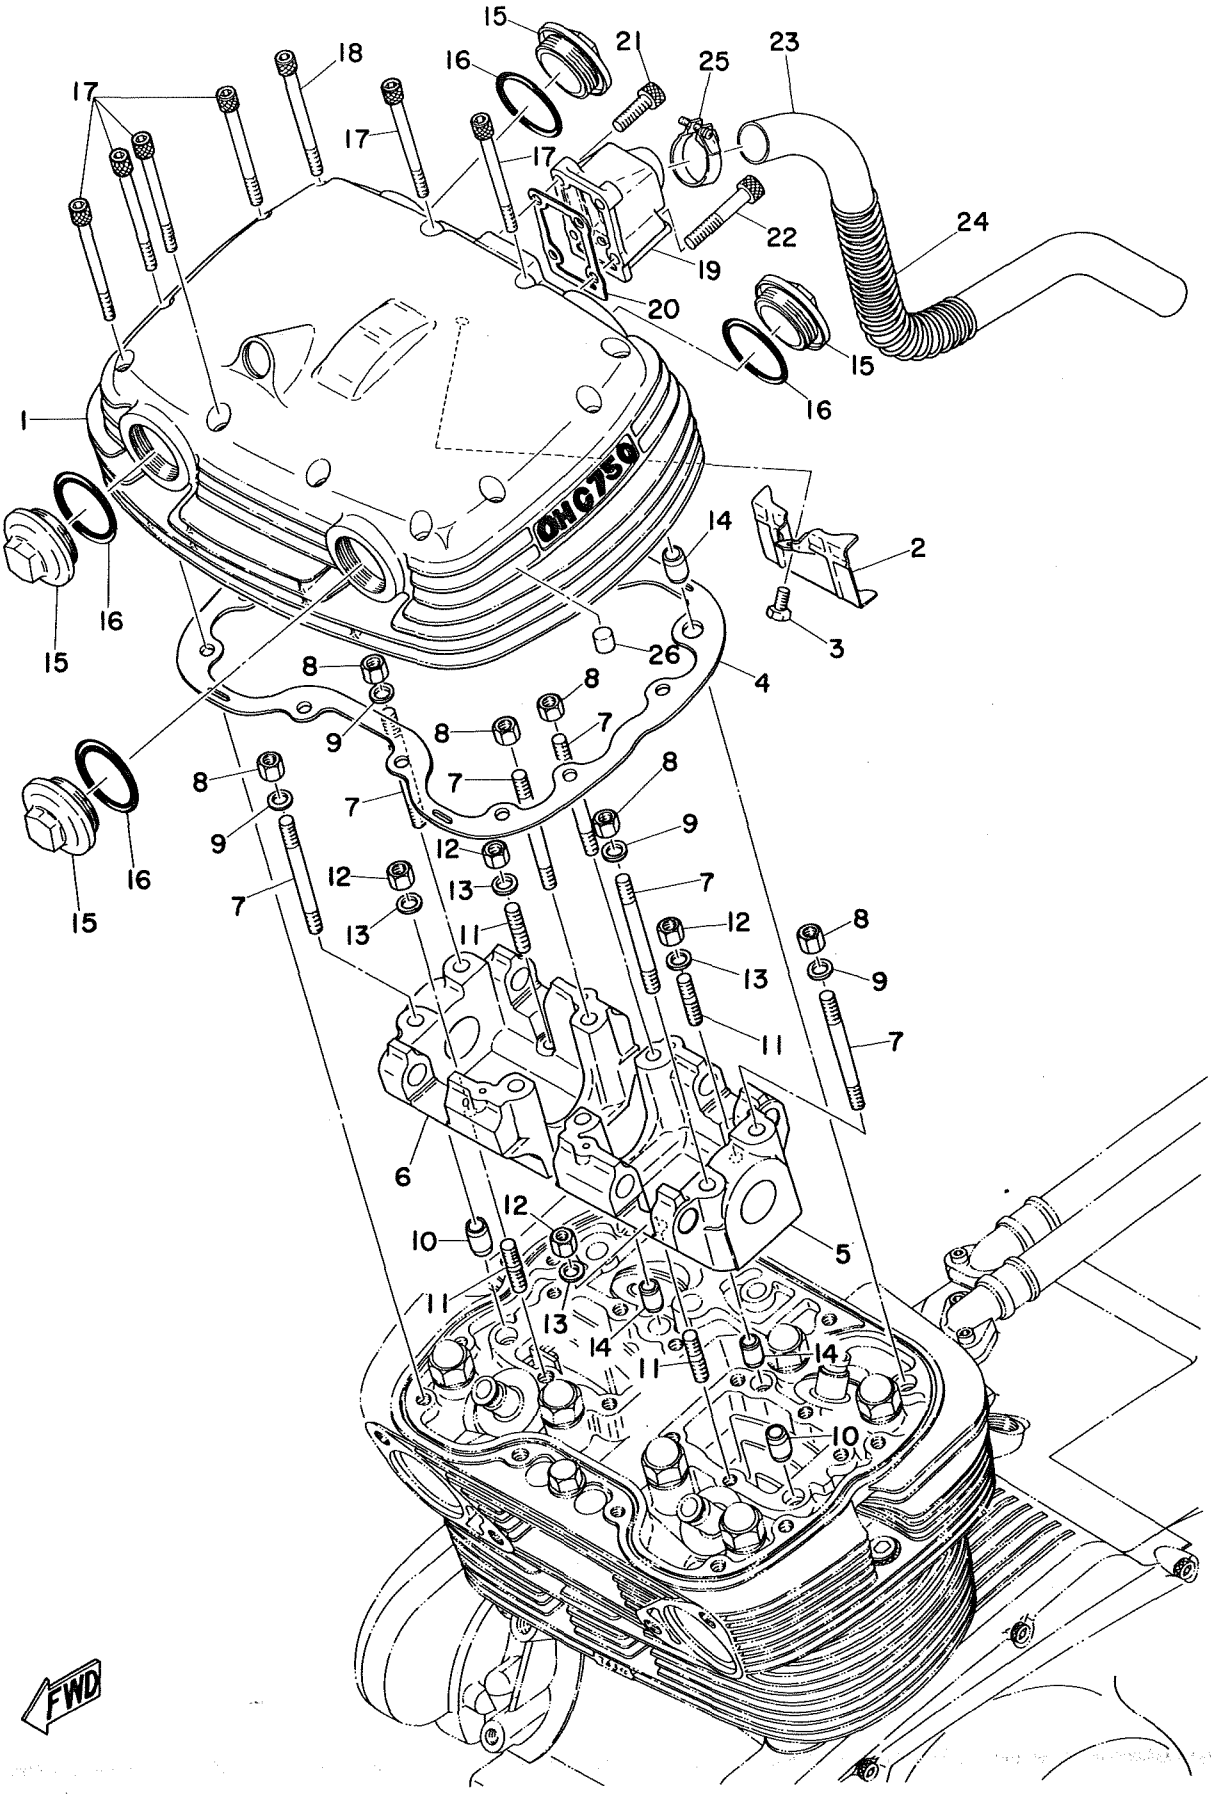

CYLINDER HEAD COVER

Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
1-24	341-11149-10	SPRING, protector	1		
1-25	341-11189-02	CLIP, pipe	1		
1-26	341-11161-00	ABSORBER	20		


Fig. 2 VALVE - ROCKER ARM

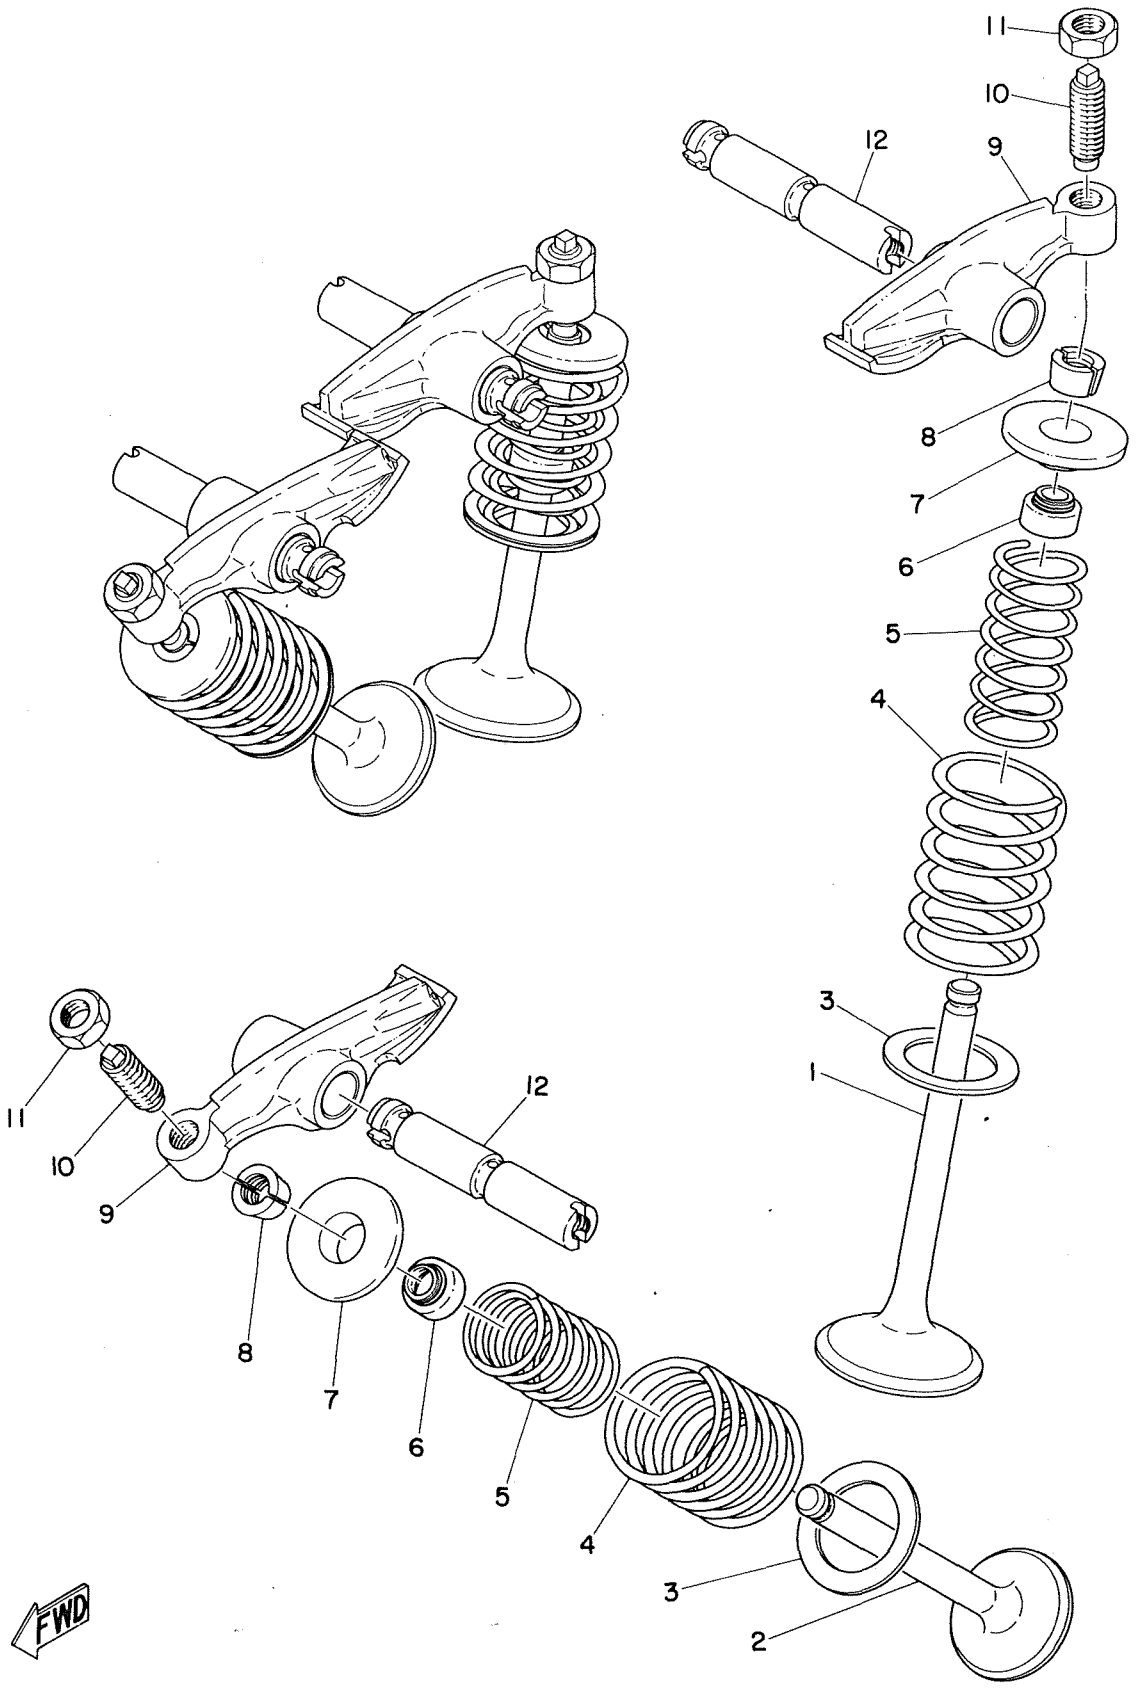

VALVE · ROCKER ARM

Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
2- 1	341-12111-01	VALVE, intake	2		
2- 2	341-12121-01	VALVE, exhaust	2		
2- 3	256-12116-01	SEAT, valve spring	4		
2- 4	341-12114-10	SPRING, compression outer ...	4		
2- 5	341-12113-00	SPRING, compression inner ...	4		
2- 6	341-12119-02	SEAL, valve stem oil	4		
2- 7	256-12117-00	RETAINER, valve spring	4		
2- 8	341-12118-00	LOCK, valve spring retainer ...	8		
2- 9	341-12151-00	ARM, valve rocker	4		
2-10	341-12159-01	SCREW, valve adjusting	4		
2-11	256-12158-00	NUT, lock	4		
2-12	341-12156-01	SHAFT, rocker	4		


Fig. 3 CYLINDER HEAD · CYLINDER

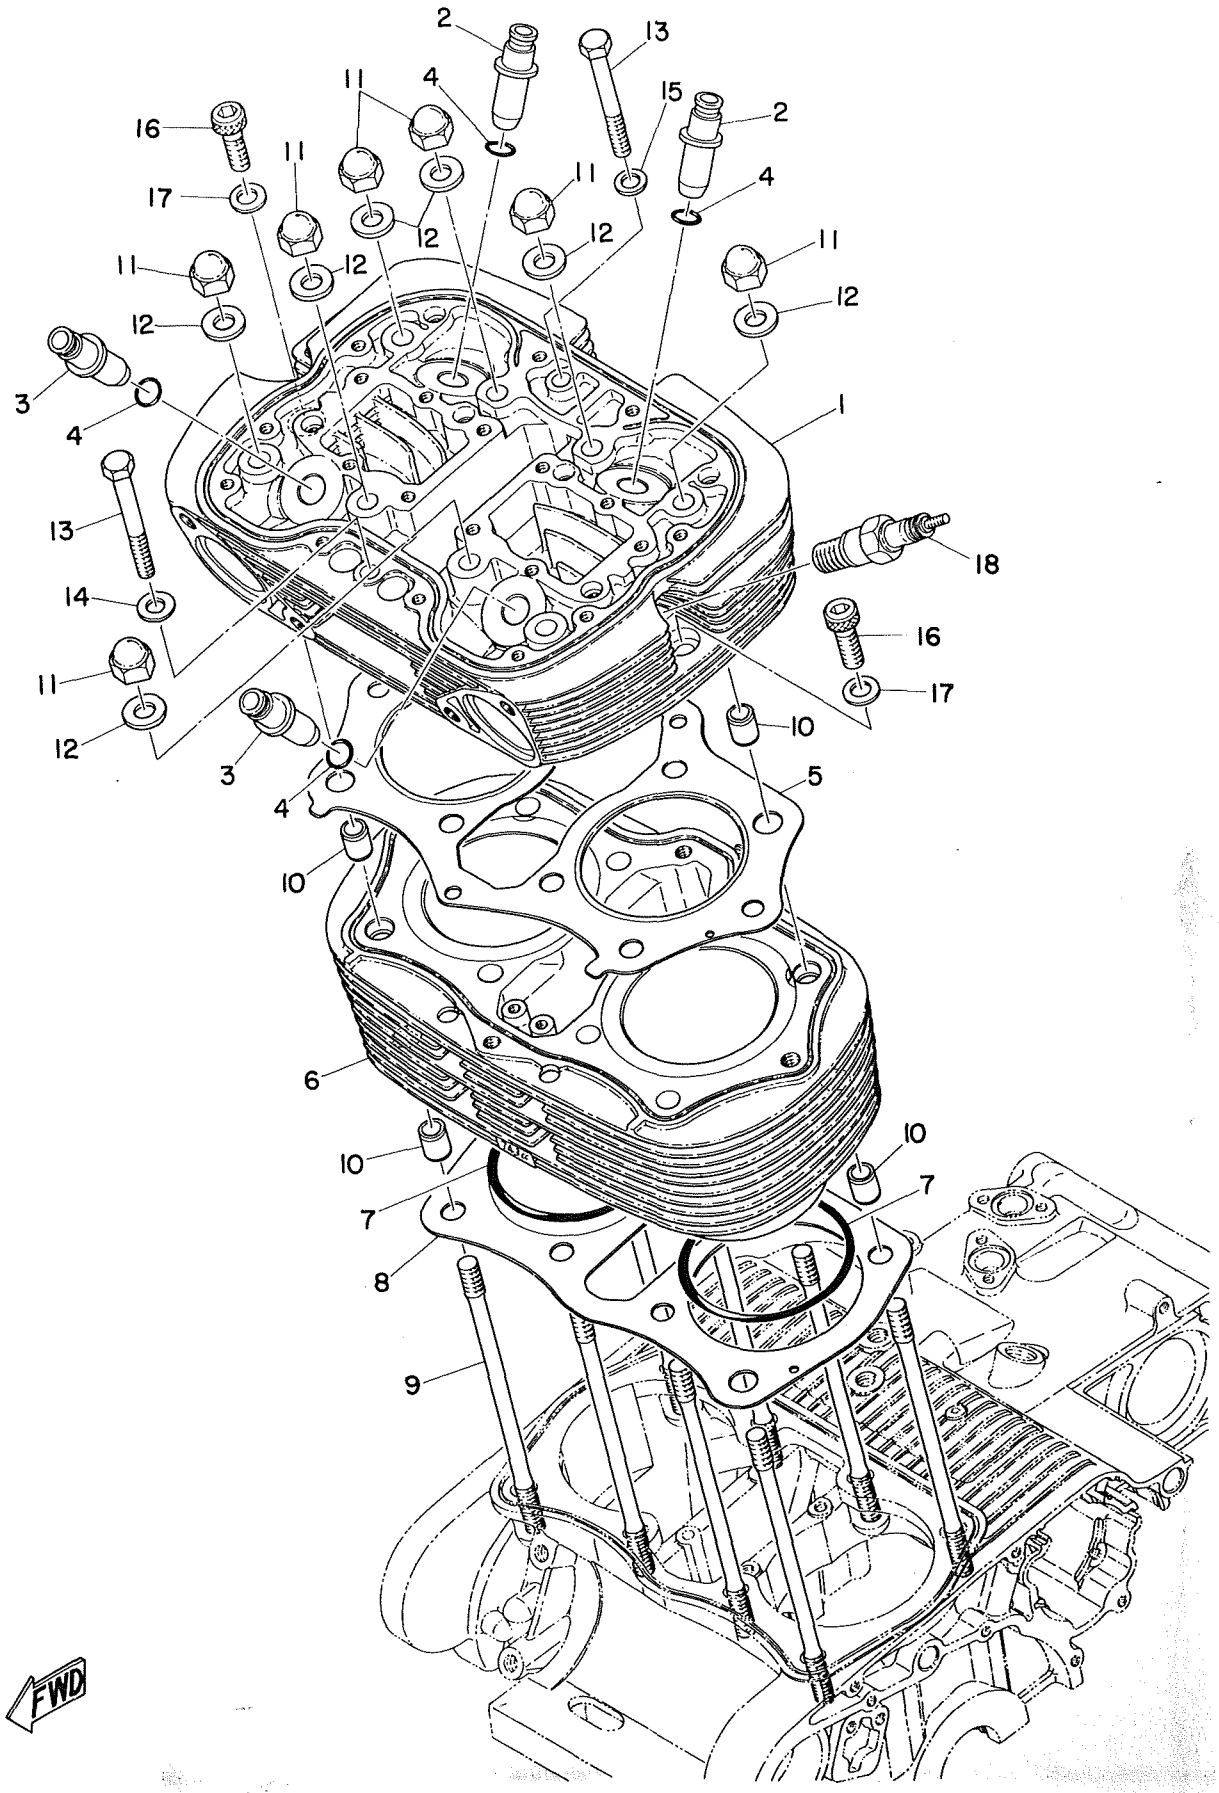

CYLINDER HEAD · CYLINDER

Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
3- 1	341-11111-01	HEAD, cylinder	1		
3- 2	256-11133-10	. BUSHING, valve guide intake (1st O.S)	2		Alternate Parts
	256-11133-20	. BUSHING, valve guide intake (2nd O.S)	2		Alternate Parts
3- 3	256-11134-10	. BUSHING, valve guide exhaust (1st O.S)	2		Alternate Parts
	256-11134-20	. BUSHING, valve guide exhaust (2nd O.S)	2		Alternate Parts
3- 4	93210-15151	. O-RING (1.5-14.5)	4		
3- 5	341-11181-00	X GASKET, cylinder head	1		
3- 6	341-11311-02	CYLINDER	1		
3- 7	93210-87176	O-RING (1.7-86.5)	2		
3- 8	341-11351-00	X GASKET, cylinder	1		
3- 9	341-11361-00	BOLT, cylinder holding	8		
3-10	91810-16016	PIN, dowel (10.5-14-16)	4		
3-11	256-11171-00	NUT, holding	8		
3-12	256-11174-00	WASHER, holding	8		
3-13	97111-08085	BOLT	2		
3-14	92901-08200	WASHER, plain	1		
3-15	341-11175-00	WASHER (8.2-15-1.6)	1		
3-16	341-11398-00	BOLT	2		
3-17	611-43133-00	WASHER (10.5-18-1.5)	2		
3-18	94701-00044	PLUG, spark (B-7ES)	2		

Fig. 4 CRANK · PISTON

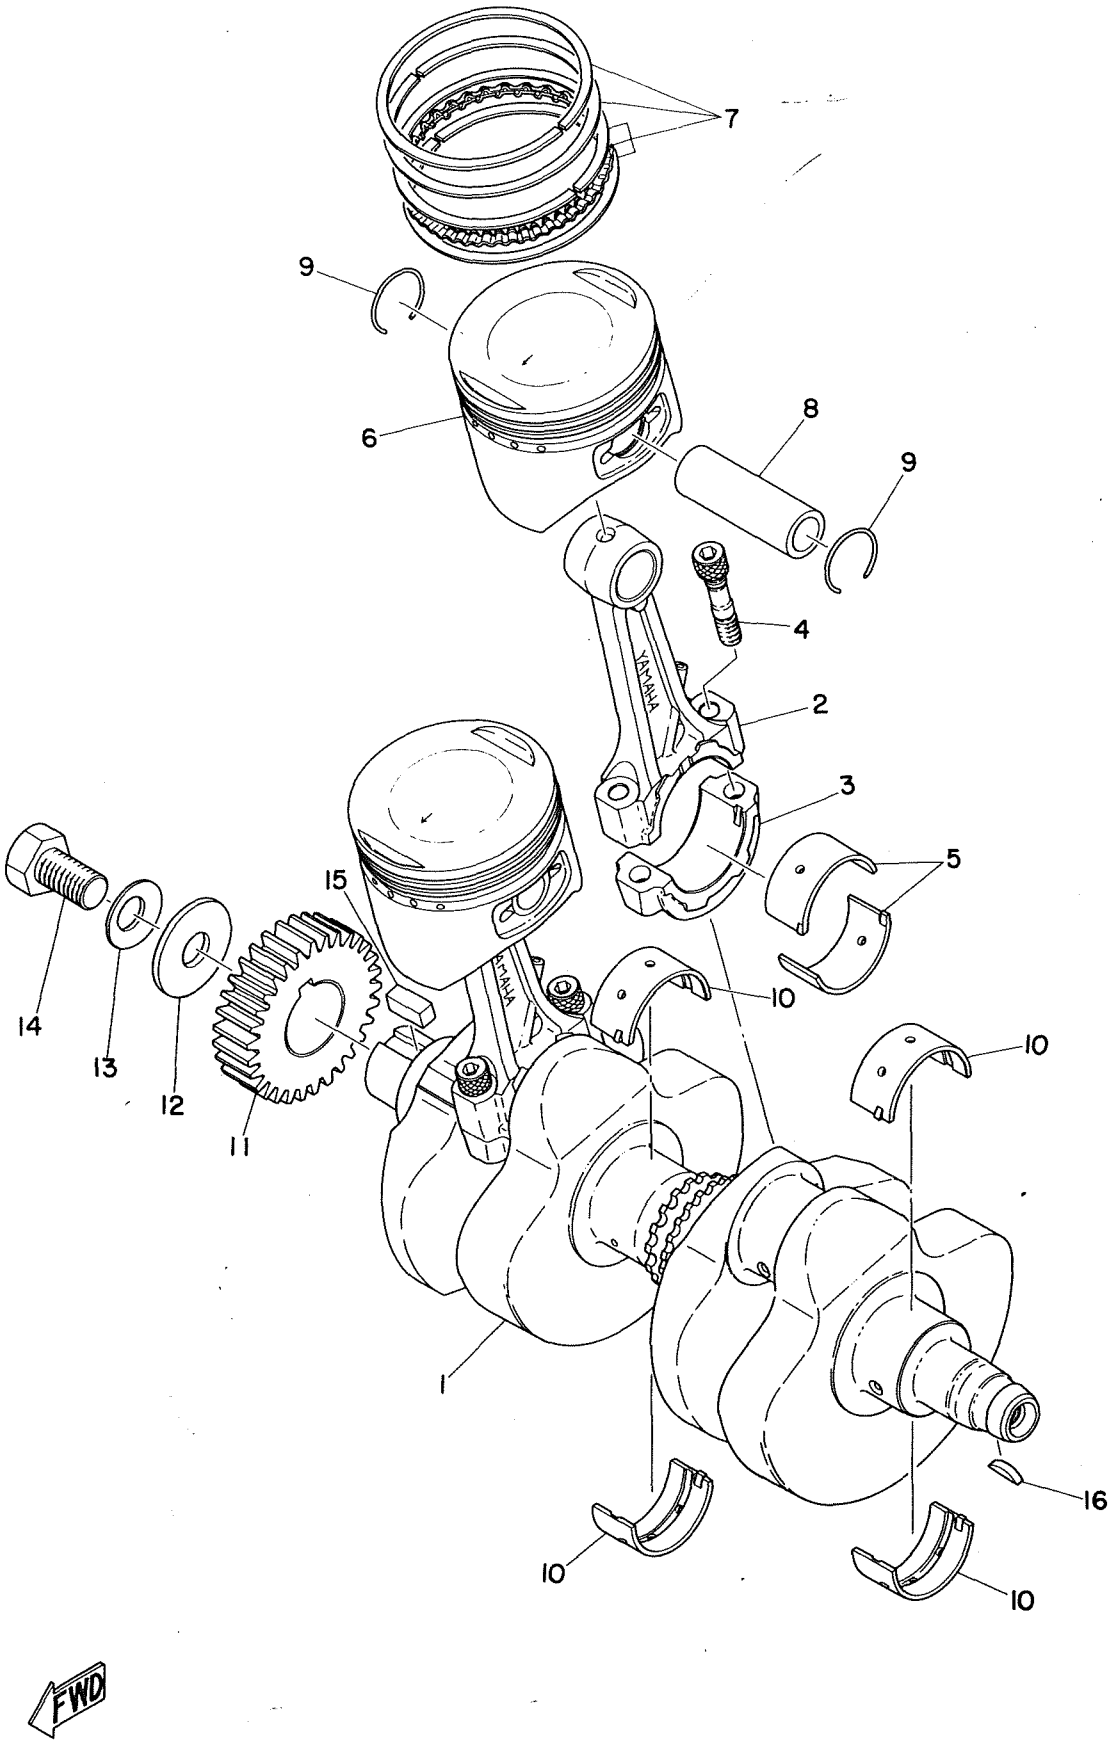

CRANK · PISTON


Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
4- 1	341-11411-11	CRANK SHAFT	1		
4- 0-1	341-11650-00	CONNECTING ROD ASS'Y ...	2		
4- 2	341-11651-00	. ROD, connecting	2		Not for sale
4- 3	341-11652-00	. CAP, connecting rod	2		Not for sale
4- 4	341-11654-00	. BOLT, connecting rod	4		
4- 5	341-11656-00	BEARING, connecting rod 1 ...	U.R 4		
	341-11656-10	BEARING, connecting rod 2 ...			
	341-11656-20	BEARING, connecting rod 3 ...			
	341-11656-30	BEARING, connecting rod 4 ...			
	341-11656-40	BEARING, connecting rod 5 ...			

	Center thickness T	Housing diameter	No.	Shaft diameter	No.	Oil clearance
BEARING 1	1.5 $^{+0.001}_{-0.003}$	41ϕ $^{+0.024}_{+0.016}$	4	38ϕ $^{+0.001}_{-0.008}$	1	0.034 ~ 0.057
BEARING 2	1.5 $^{-0.003}_{-0.007}$	41ϕ $^{+0.016}_{+0.008}$	5	38ϕ $^{-0.009}_{-0.016}$	2	0.034 ~ 0.057
BEARING 3	1.5 $^{-0.007}_{-0.011}$	41ϕ $^{+0.008}_{+0}$	6	38ϕ $^{-0.017}_{-0.024}$	3	0.034 ~ 0.057
BEARING 4	1.5 $^{-0.001}_{-0.015}$					
BEARING 5	1.5 $^{-0.015}_{-0.019}$					

Bearing Selection: Housing No. − Shaft No. = Bearing No.

4- 6	341-11631-01-96	PISTON (STD)	2		
	341-11635-01	PISTON (1st O.S)	2		Alternate Parts
	341-11636-01	PISTON (2nd O.S)	2		Alternate Parts
4- 7	341-11610-00	PISTON RING SET (STD)	2s		
	341-11610-10	PISTON RING SET (1st O.S) ...	2s		Alternate Parts
	341-11610-20	PISTON RING SET (2nd O.S) ...	2s		Alternate Parts
4- 8	341-11633-01	PIN, piston	2		
4- 9	341-11634-00	CLIP, piston pin	4		

Fig. 4 CRANK · PISTON

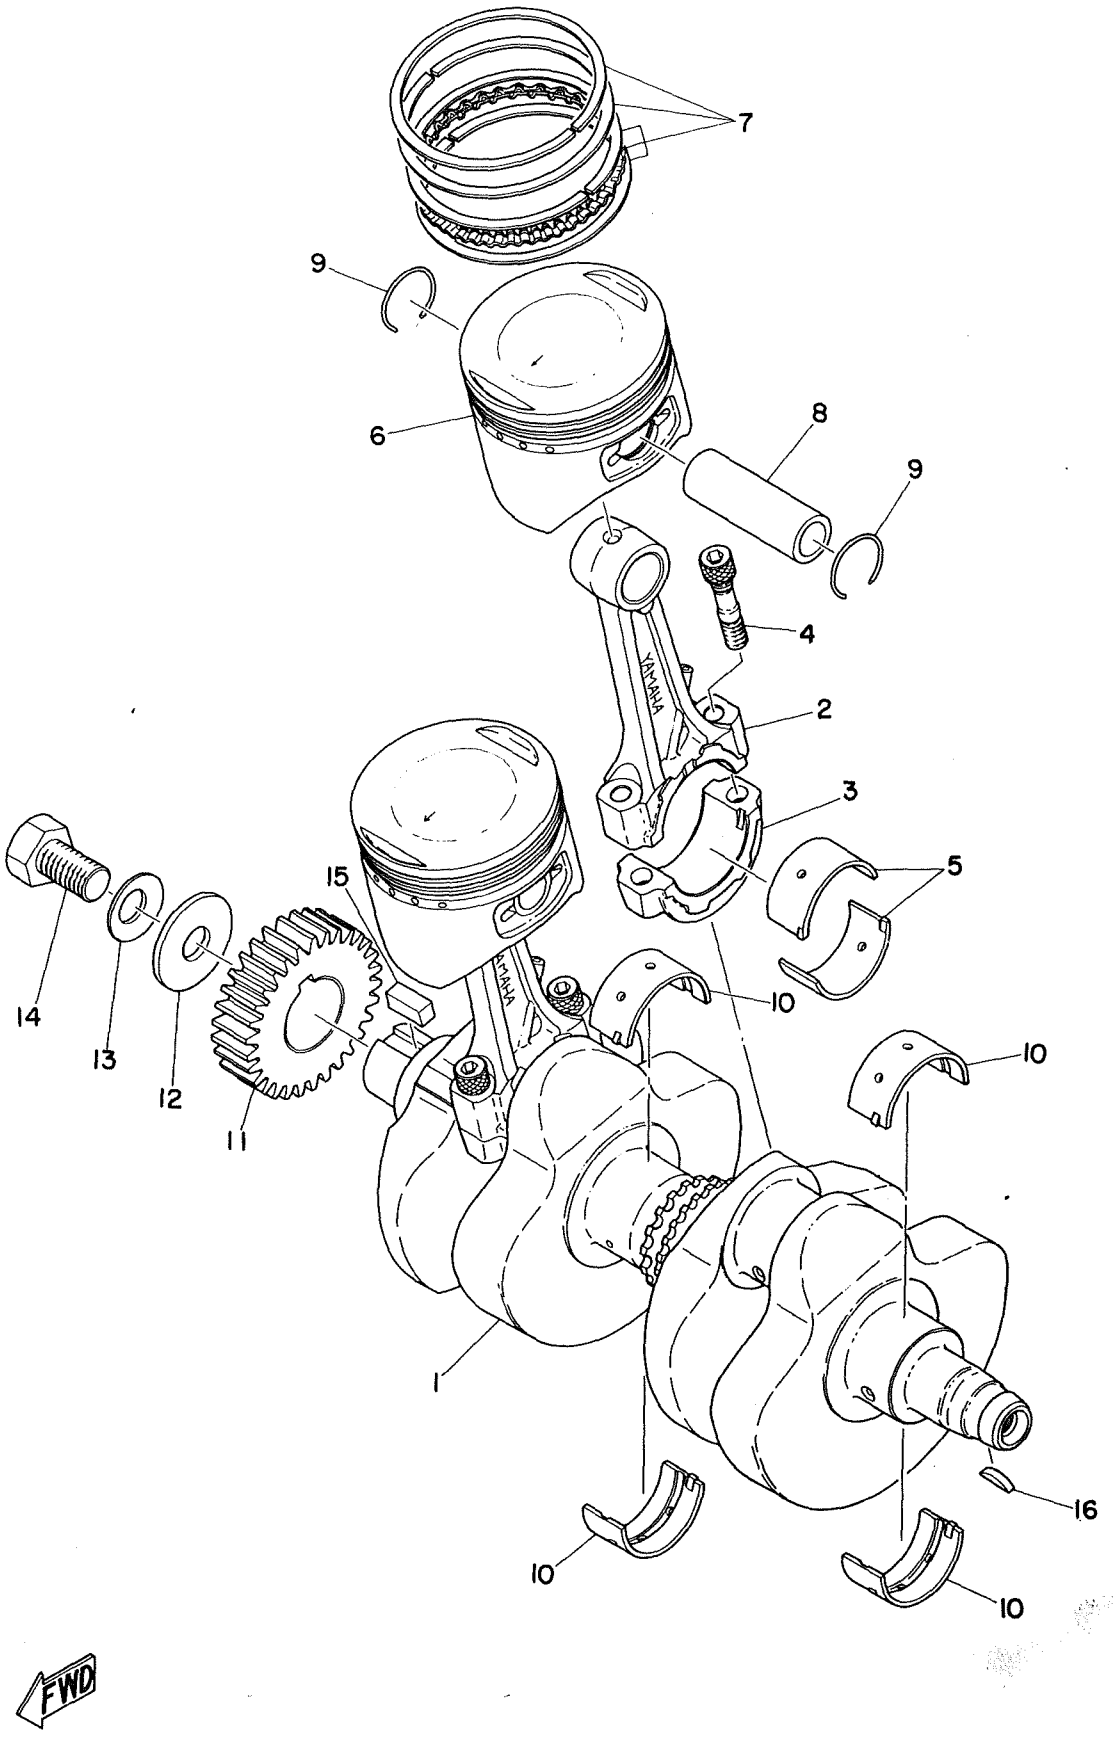


Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
4-10	341-11416-00	BEARING, crank shaft 1	U.R 6		
	341-11416-10	BEARING, crank shaft 2			
	341-11416-20	BEARING, crank shaft 3			
	341-11416-30	BEARING, crank shaft 4			
	341-11416-40	BEARING, crank shaft 5			

	Center thickness T	Housing diameter	No.	Shaft diameter	No.	Oil clearance
BEARING 1	$1.5^{+0.006}_{+0.002}$	$41\phi^{+0.024}_{+0.016}$	4	$38\phi^{-0.001}_{-0.008}$	1	0.036 ~ 0.059
BEARING 2	$1.5^{+0.002}_{-0.002}$	$41\phi^{+0.016}_{+0.008}$	5	$38\phi^{-0.009}_{-0.016}$	2	0.036 ~ 0.059
BEARING 3	$1.5^{-0.002}_{-0.006}$	$41\phi^{+0.008}_{+0}$	6	$38\phi^{-0.017}_{-0.024}$	3	0.036 ~ 0.059
BEARING 4	$1.5^{-0.006}_{-0.010}$					
BEARING 5	$1.5^{-0.010}_{-0.014}$					

Bearing Selection: Housing No. − Shaft No. = Bearing No.

4-11	341-16111-00	GEAR, primary drive (32T) ...	1
4-12	341-11587-00	WASHER, lock	1
4-13	117-16119-00	SPRING, bellevile	1
4-14	97201-14025	BOLT	1
4-15	278-11546-00	KEY	1
4-16	341-11545-00	KEY, woodruff	1


Fig. 5 CAMSHAFT · CHAIN TENSIONER

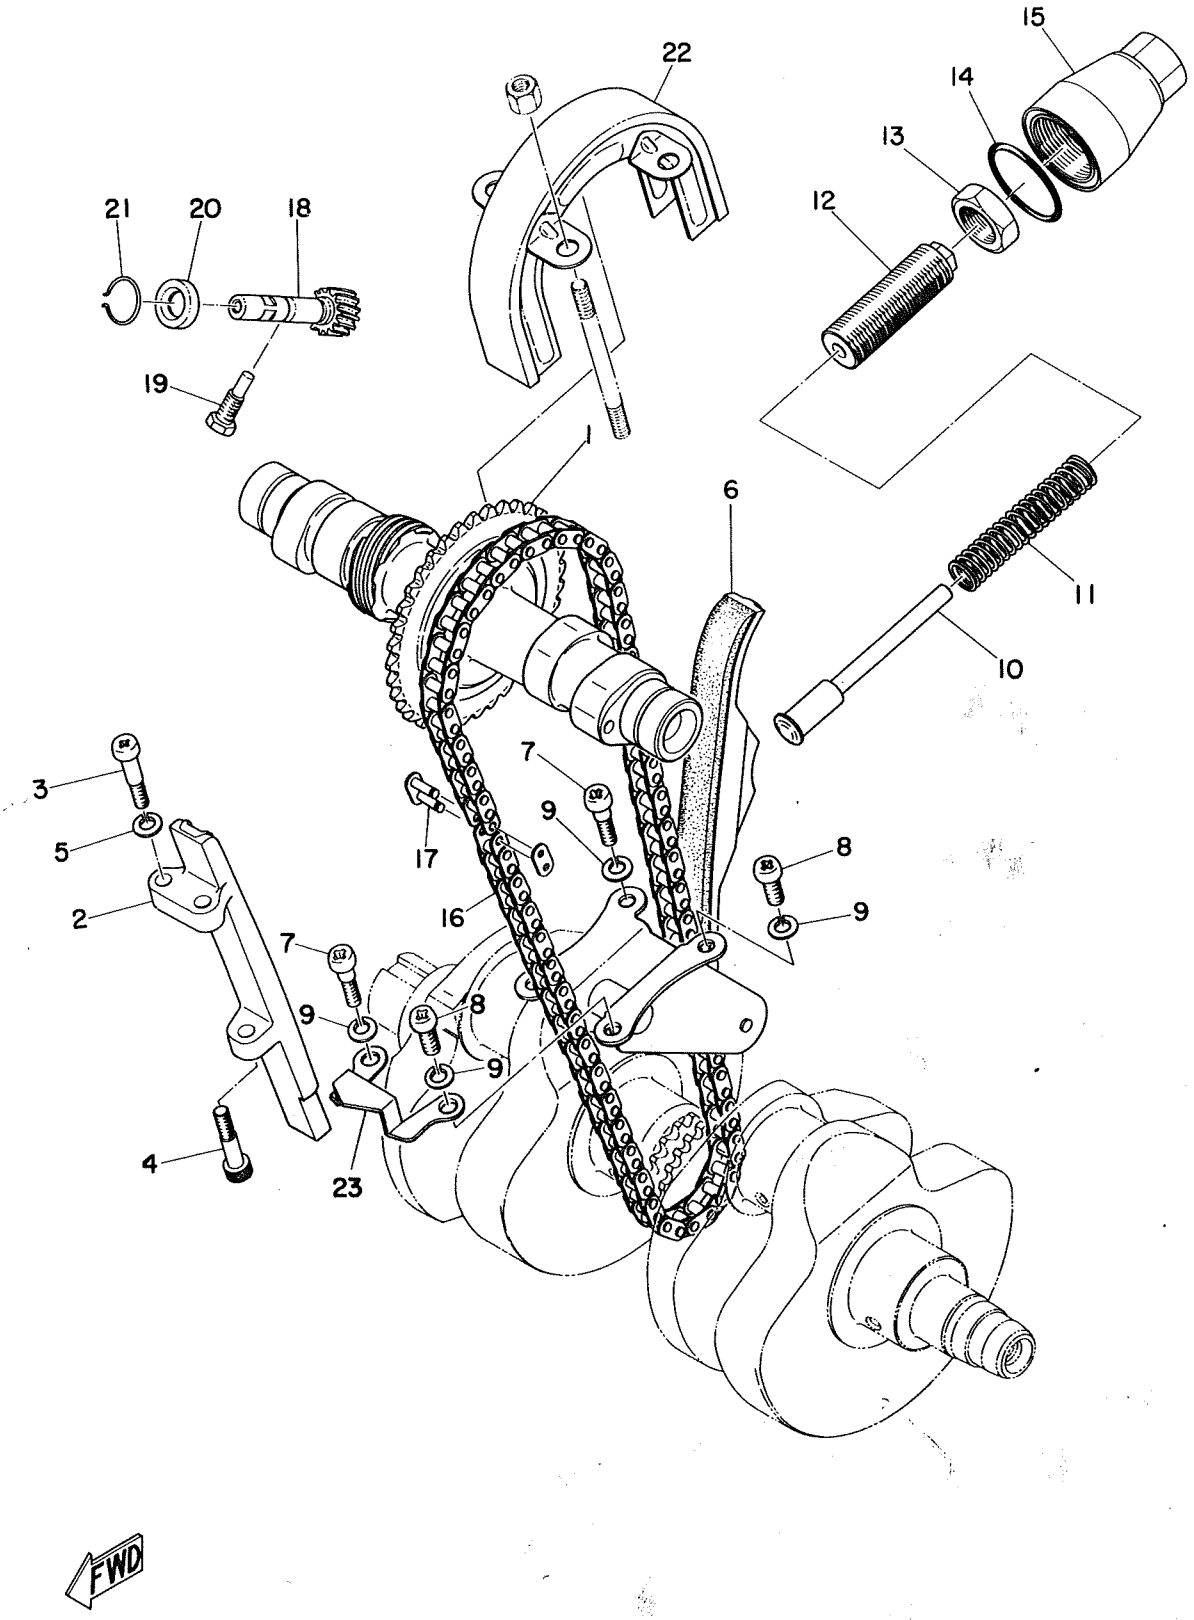

CAMSHAFT · CHAIN TENSIONER

Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
5- 1	341-12170-01	CAMSHAFT ASS'Y	1		
5- 2	341-12231-02	GUIDE, stopper 1	1		
5- 3	341-12248-00	BOLT, reamer 1	2		
5- 4	341-12249-00	BOLT, reamer 2	1		
5- 5	92901-06100	WASHER, spring	2		
5- 6	341-12211-02	GUIDE, stopper 2	1		
5- 7	256-12248-00	BOLT, reamer	2		
5- 8	92501-06015	SCREW, panhead	2		
5- 9	92901-06100	WASHER, spring	4		
5-10	341-12217-02	ROD	1		
5-11	341-12216-02	SPRING	1		
5-12	341-12228-00	BOLT	1		
5-13	256-12218-00	NUT, lock	1		
5-14	93210-32172	O-RING (3.0-34.5)	1		
5-15	341-12212-02	CAP	1		
5-16	94562-19104	CHAIN (DK219FT 104L)	1		
5-17	94662-19001	. JOINT, chain	1		
5-18	341-17841-00	GEAR, driven	1		
5-19	341-17867-00	BOLT, stopper	1		
5-20	93104-08037	OIL SEAL(SO-8-18-5)	1		
5-21	102-25137-00	RING, stopper	1		
5-22	341-12256-00	COVER, chain	1		
5-23	341-12238-00	PLATE, bolt stopper	1		


Fig. 6 CRANK BALANCER

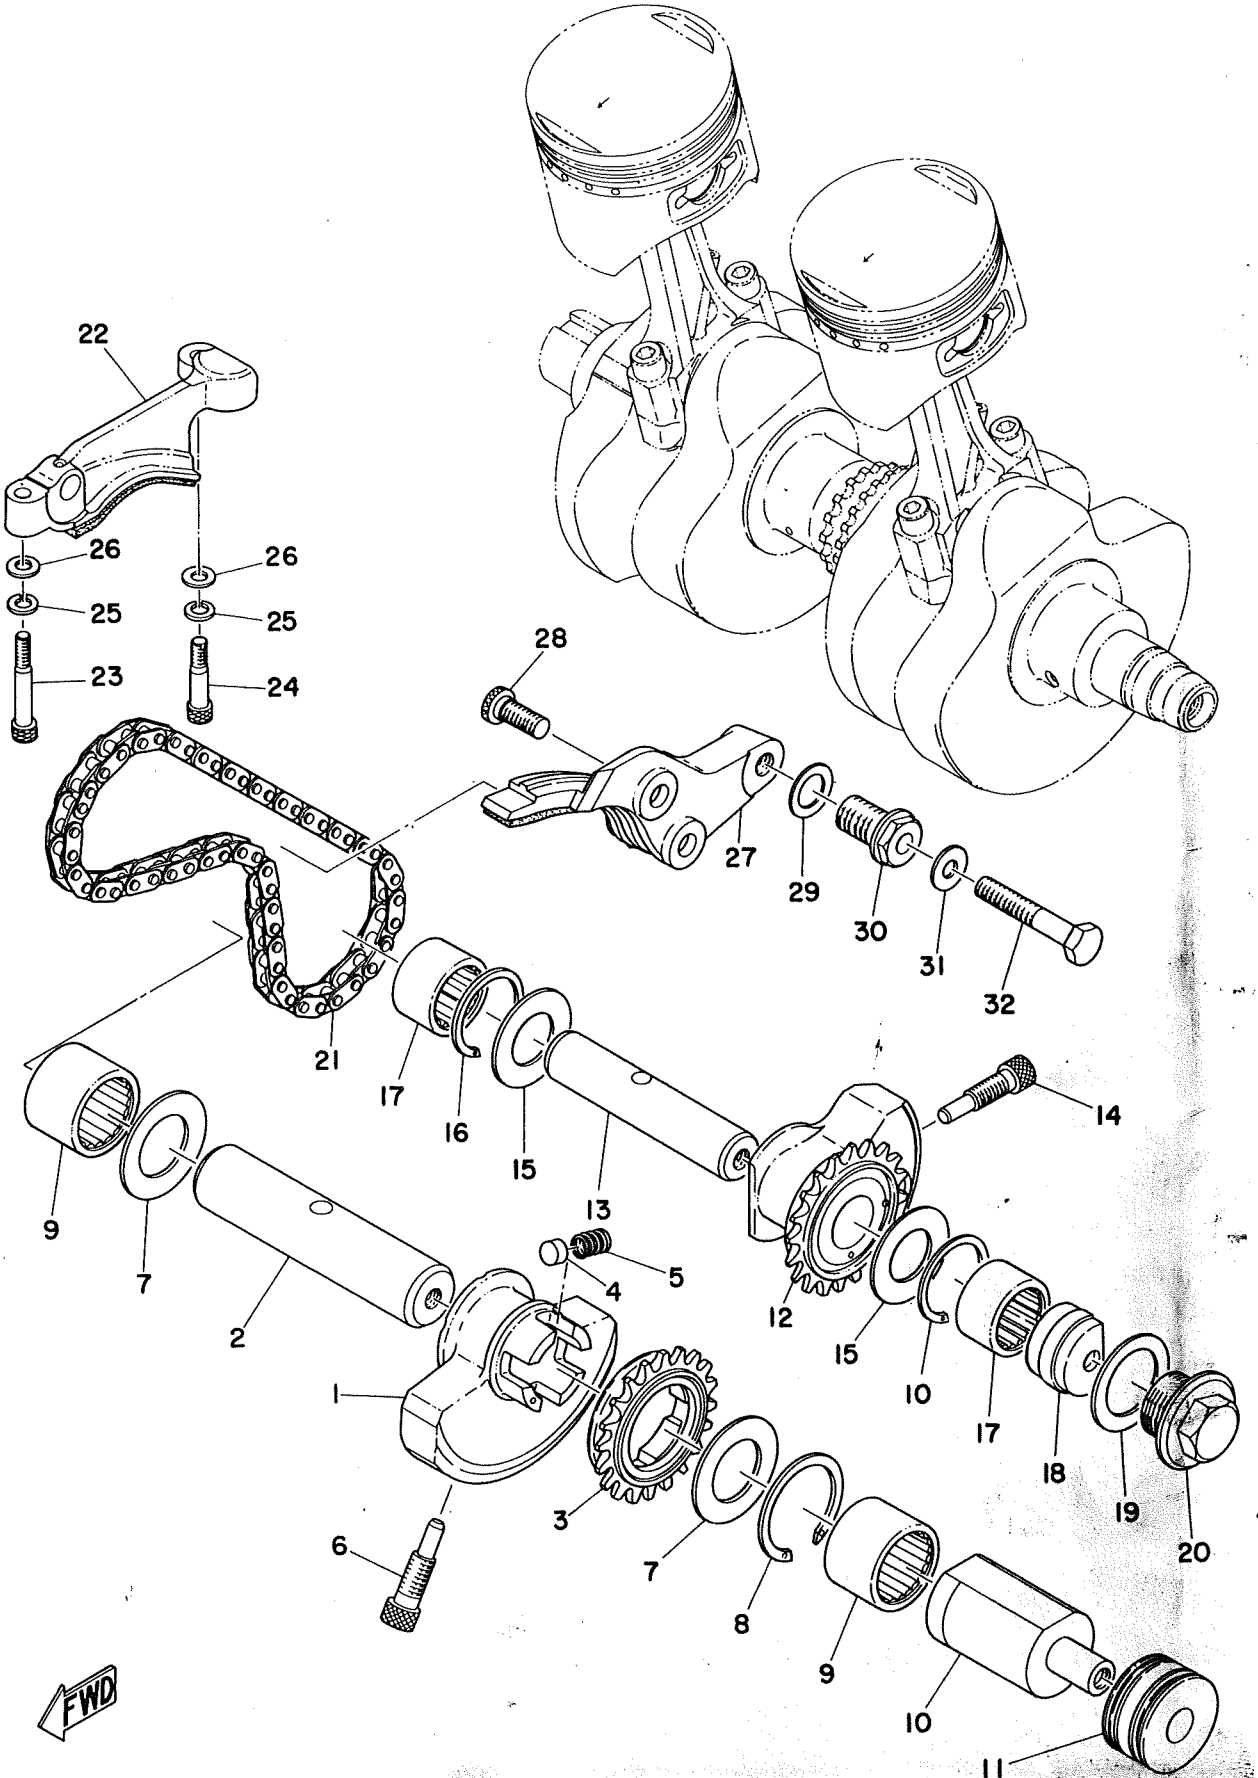

CRANK BALANCER

Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
6- 1	341-11454-05	WEIGHT 1	1		
6- 2	341-11455-03	SHAFT 1	1		
6- 3	341-11458-05	WHEEL, sproket 1	1		
6- 4	93605-10090	PIN, dowel (4.5-9.6)	4		
6- 5	341-11488-00	SPRING	4		
6- 6	90109-10169	BOLT	1		
6- 7	341-11483-00	WASHER, weight 1	2		
6- 8	93450-36018	CIRCLIP 1 (36Φ special)	1		
6- 9	93311-52510	BEARING 1	2		include in Crankcase
6-10	341-11469-01	PLUG	1		
6-11	341-11493-00	PLUG	1		
6-12	341-11464-06	WEIGHT 2	1		
6-13	341-11465-03	SHAFT 2	1		
6-14	90109-10169	BOLT	1		
6-15	341-11484-00	WASHER, weight 2	2		
6-16	93450-30019	CIRCLIP 2 (30Φ special)	2		
6-17	93311-42009	BEARING 2	2		include in Crankcase
6-18	341-11485-00	SPACER	1		
6-19	341-11479-03	GASKET	1		
6-20	341-11477-02	PLUG	1		
6-21	94563-16054	CHAIN (TSUBAKIMOTO 54L) ..	1		
6-22	341-11474-05	GUIDE, upper	1		
6-23	341-11495-01	BOLT, reamer 1	1		


Fig. 6 CRANK BALANCER

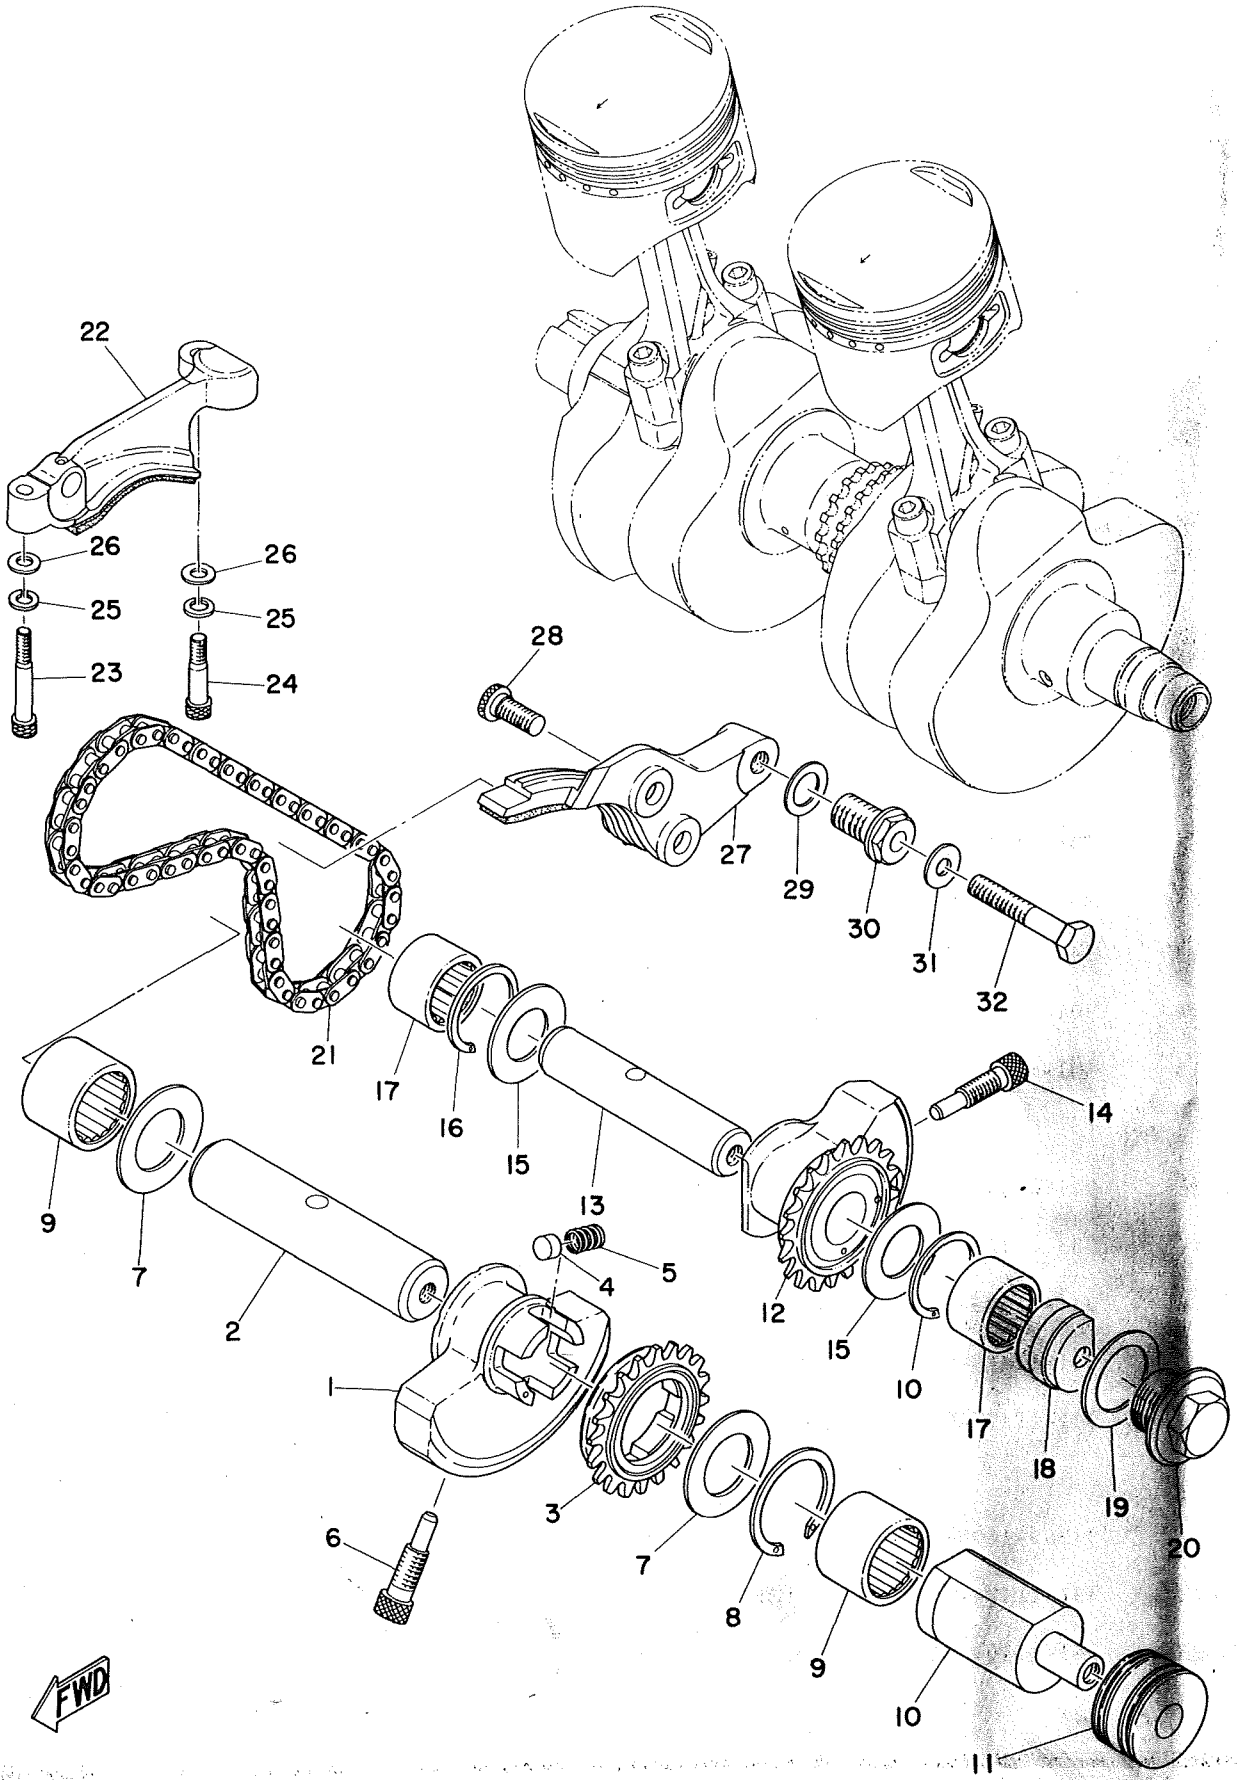

CRANK BALANCER

Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
6-24	341-12249-00	BOLT, reamer 2	1		
6-25	92901-06100	WASHER, spring	2		
6-26	92901-06200	WASHER, plain	2		
6-27	341-11457-06	GUIDE, lower	1		
6-28	341-11494-00	BOLT, reamer	2		
6-29	341-15396-00	GASKET, holder	1		
6-30	341-15395-00	HOLDER	1		
6-31	341-11175-00	WASHER	1		
6-32	97101-08050	BOLT	1		


Fig. 7 STARTING MOTOR UNIT

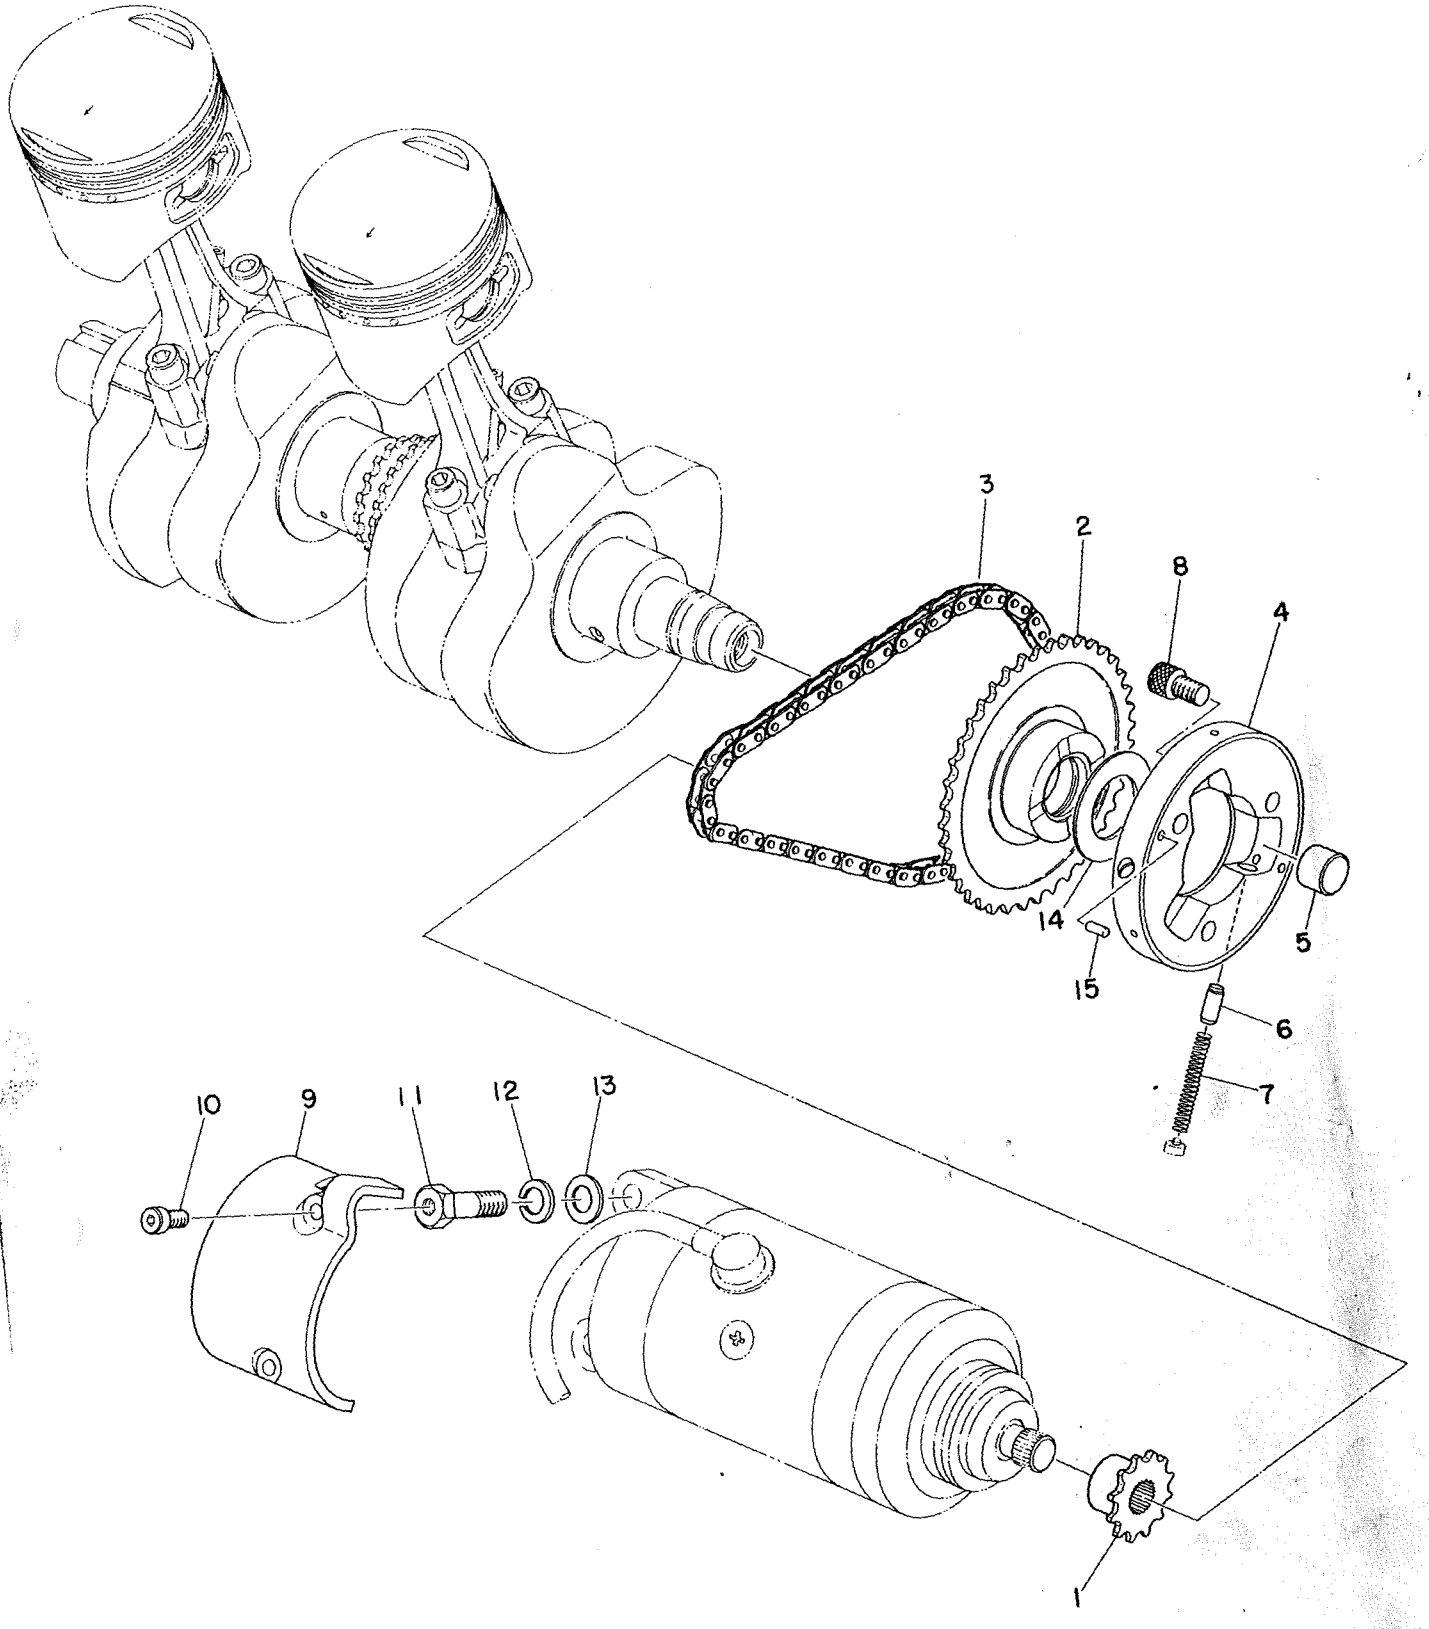

STARTING MOTOR UNIT

Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
7- 1	341-15518-01	SPROCKET, starter 1	1		
7- 2	341-15519-05	SPROCKET, starter 2	1		
7- 3	94563-16052	CHAIN (D1D316FT 52L)	1		
7- 4	341-15580-03	CLUTCH STARTER OUTER ASS'Y	1		
7- 5	93615-12088	. PIN, dowel	3		
7- 6	341-15583-02	. CAP, starter clutch spring ...	3		
7- 7	341-15584-03	. SPRING, starter clutch roller ..	3		
7- 8	91310-08012	BOLT	3		
7- 9	341-15436-00	COVER, starting motor	1		
7-10	91316-06012	BOLT	2		
7-11	341-15551-00	BOLT	2		
7-12	92901-08100	WASHER, spring	2		
7-13	92901-08200	WASHER, plain	2		
7-14	341-11483-00	WASHER, weight 1	1		
7-15	93605-09095	PIN, dowel (4.5-9.3)	2		


Fig. 8 STARTING MOTOR

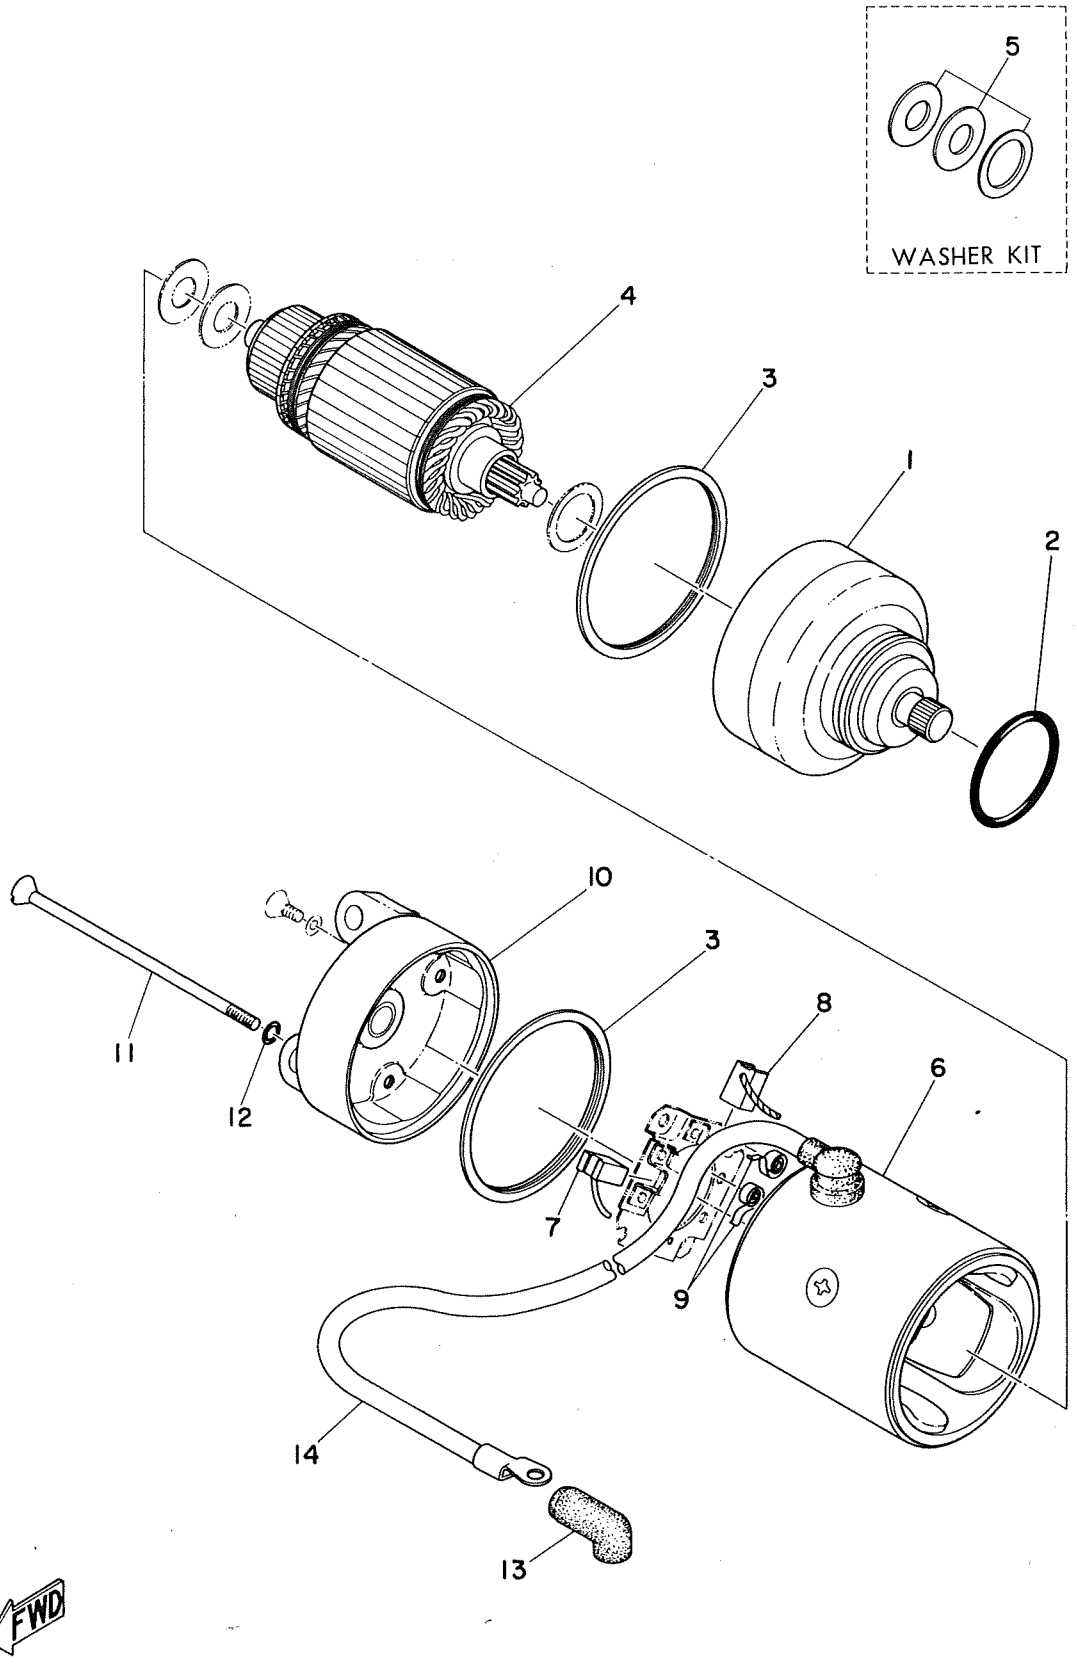

STARTING MOTOR

Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
8- 0-1	341-81800-13	ELECTRIC MOTOR ASS'Y	1		
8- 1	341-81830-11	. COVER, ASS'Y 1	1		
8- 2	341-81834-10	. . O-RING	1		
8- 3	341-81847-10	. PACKING 1	2		
8- 4	341-81850-10	. ARMATURE ASS'Y	1		
8- 5	341-81809-10	. WASHER KIT	1		
8- 6	341-81810-12	. STATOR ASS'Y	1		
8- 7	306-81811-10	. BRUSH 1	1		
8- 8	306-81812-10	. BRUSH 2	1		
8- 9	341-81813-10	. SPRING, brush	2		
8-10	341-81820-11	. COVER ASS'Y 2	1		
8-11	341-81826-10	. BOLT	2		
8-12	341-81835-10	. PACKING	2		
8-13	306-81862-10	. CAP	1		
8-14	341-81816-10	. LEAD WIRE ASS'Y	1		


Fig. 9 A. C. GENERATOR

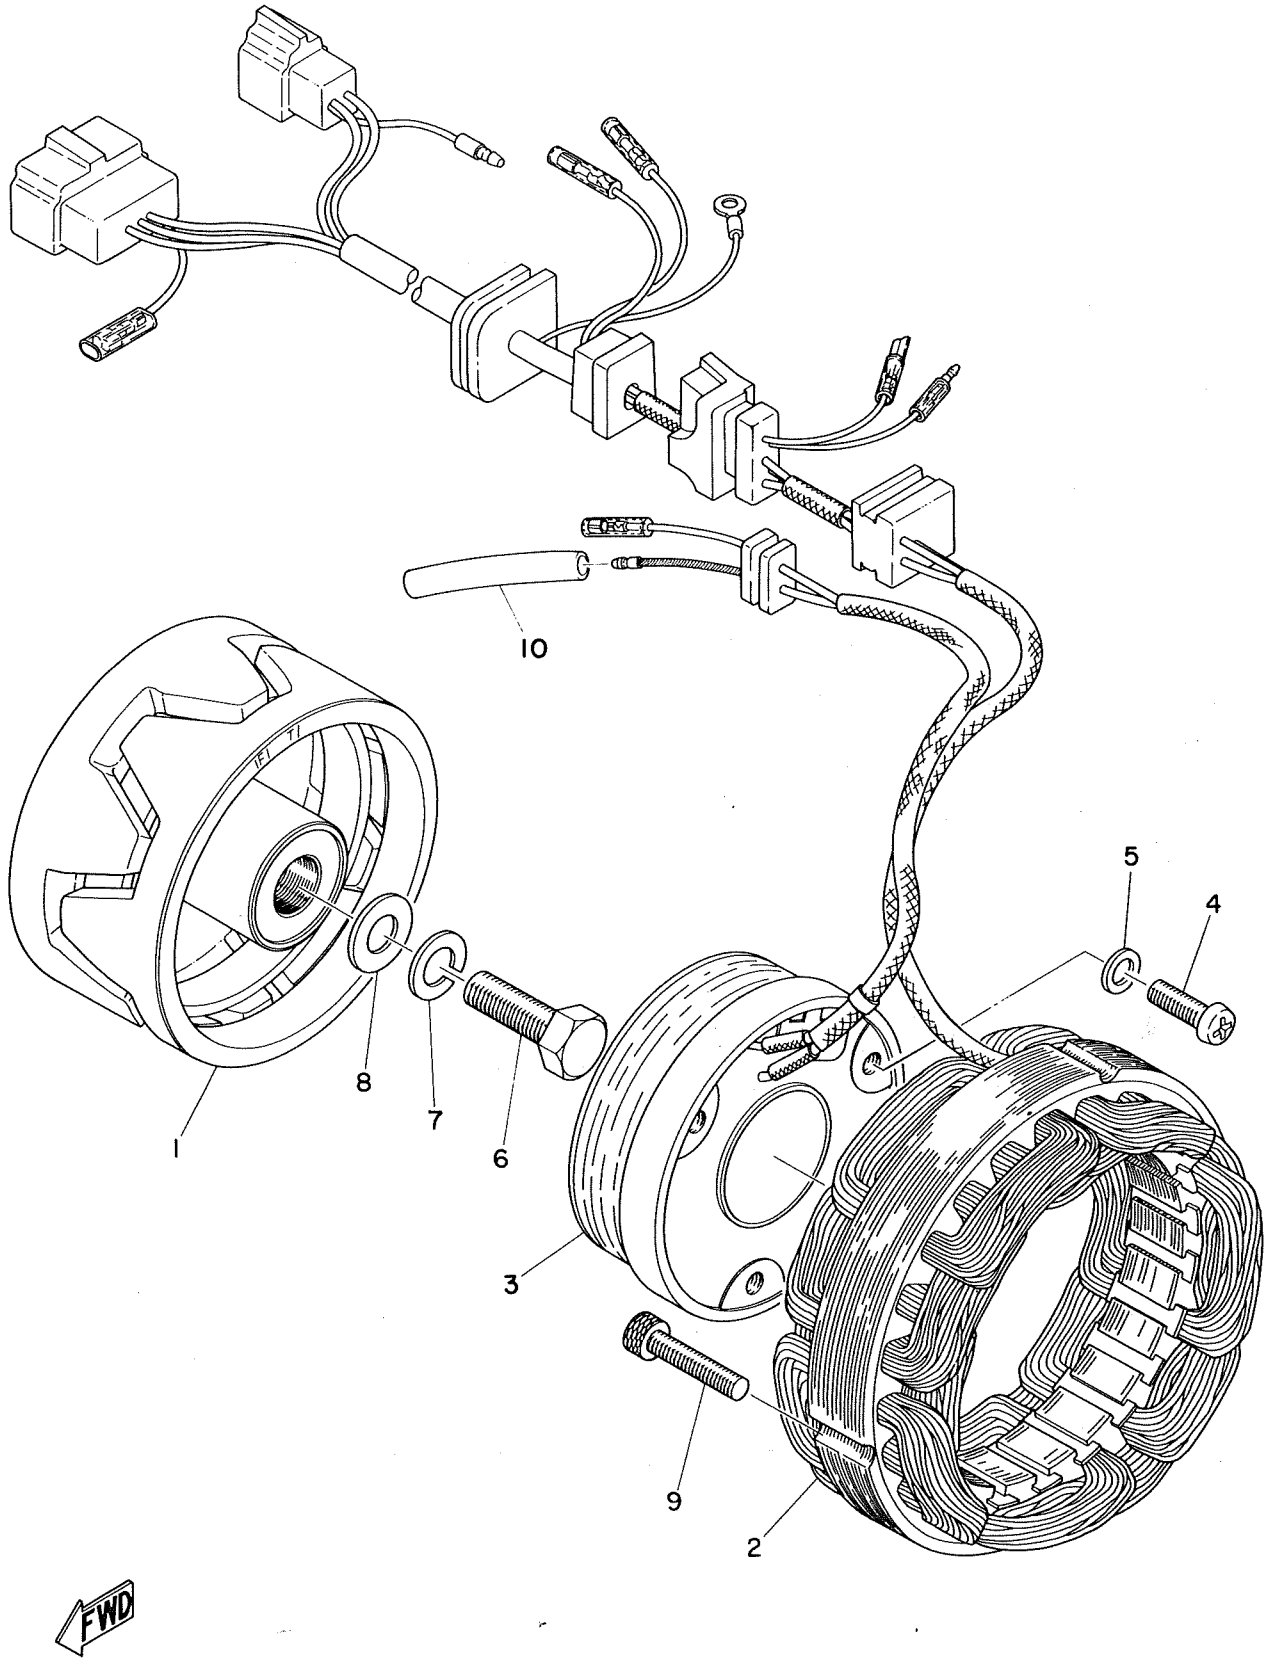

A. C. GENERATOR

Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
9- 0-1	341-81600-12	A.C. GENERATOR ASS'Y	1		
9- 1	341-81650-12	. ROTOR COMP.	1		
9- 2	341-81610-12	. STATOR ASS'Y	1		
9- 3	341-81660-12	. FIELD COIL ASS'Y	1		
9- 4	91316-06022	. SCREW, panhead	3		
9- 5	256-11396-00	. GASKET, holder	3		
9- 6	341-81652-00	BOLT	1		
9- 7	92901-10100	WASHER, spring	1		
9- 8	341-81663-00	WASHER, plain	1		
9- 9	91316-06030	BOLT	3		
9-10	341-81662-00	COVER, connector	2		


Fig. 10 CONTACT BREAKER · GOVERNOR

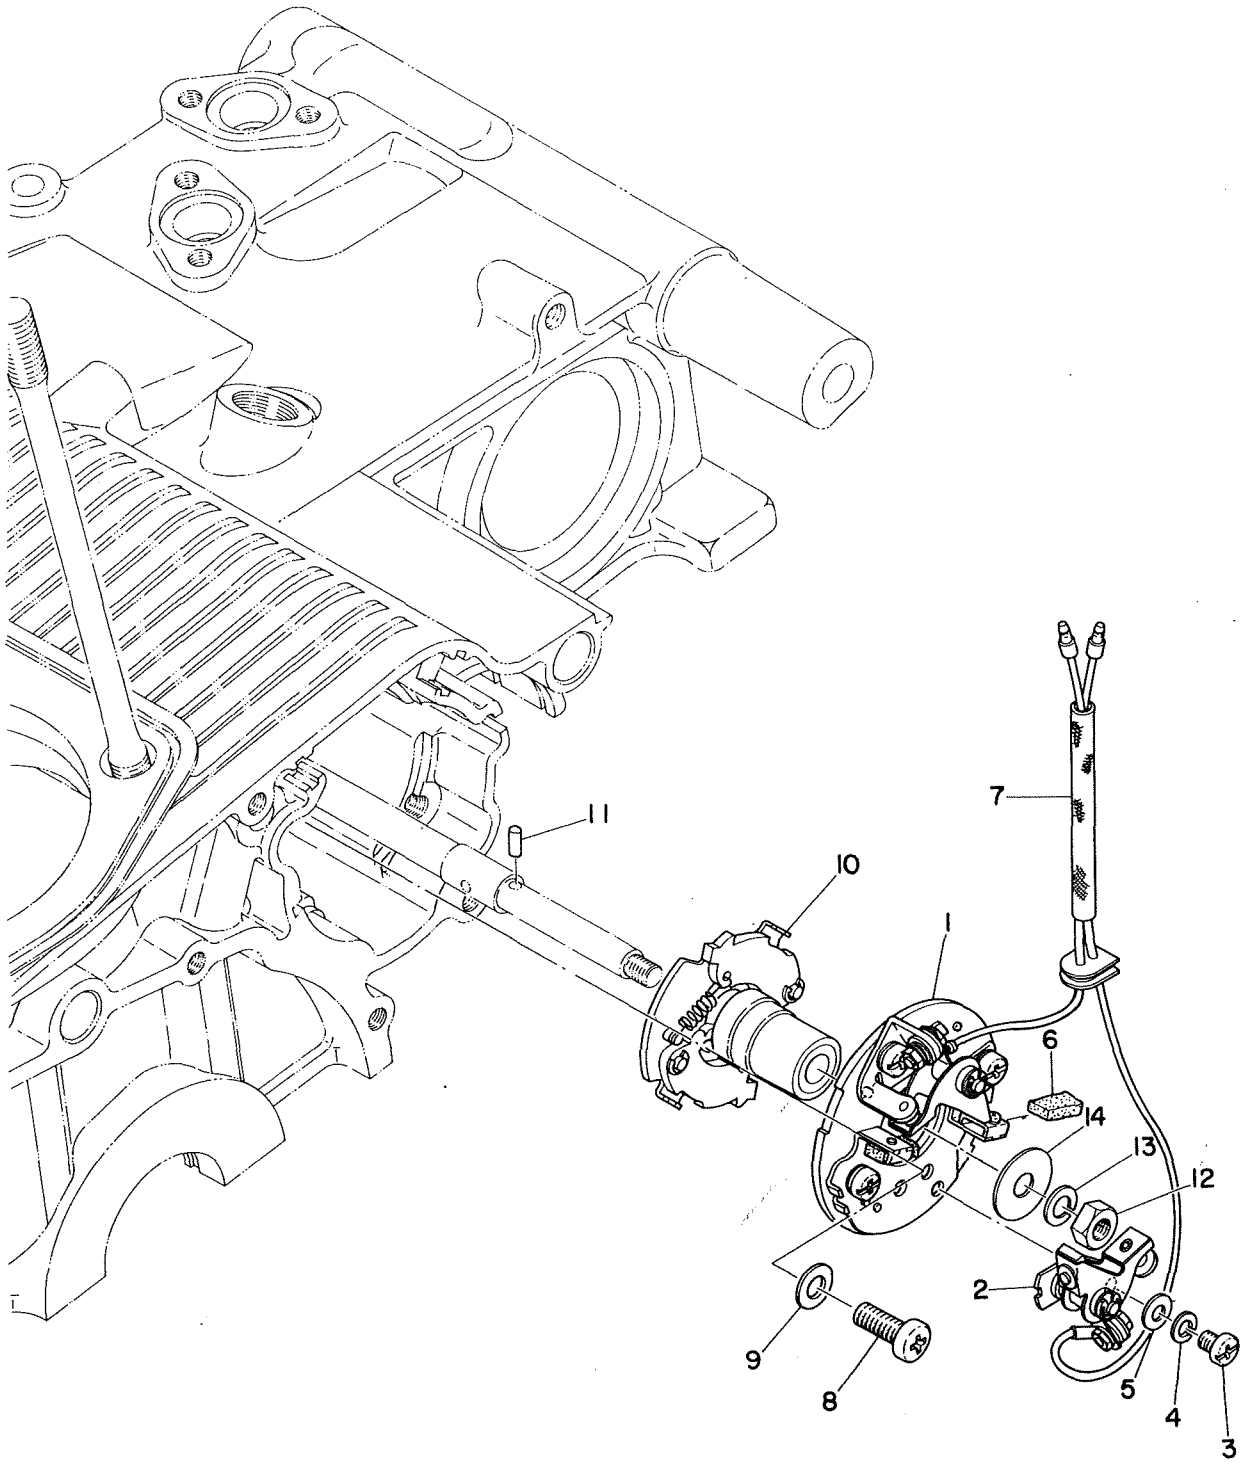

CONTACT BREAKER · GOVERNOR

Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
10- 1	341-81620-11	BRAKER PLATE ASS'Y	1		
10- 2	256-81621-10	. CONTACT BREAKER	2		
10- 3	110-81345-20	. SCREW, panhead (4-6)	2		
10- 4	92901-04100	. WASHER, spring	2		
10- 5	92901-04200	. WASHER, plain	2		
10- 6	256-81631-10	. LUBRICATOR	2		
10- 7	341-81615-11	. LEAD WIRE ASS'Y	1		
10- 8	256-11151-00	SCREW, braker plate	2		
10- 9	92901-06200	WASHER, plain	2		
10-10	341-81653-11	GOVERNOR ASS'Y	1		
10-11	93603-07073	PIN, dowel (3-7)	1		
10-12	98801-06100	NUT	1		
10-13	92901-06100	WASHER, spring	1		
10-14	256-21615-00	WASHER, special	1		


Fig. 11 OIL PUMP

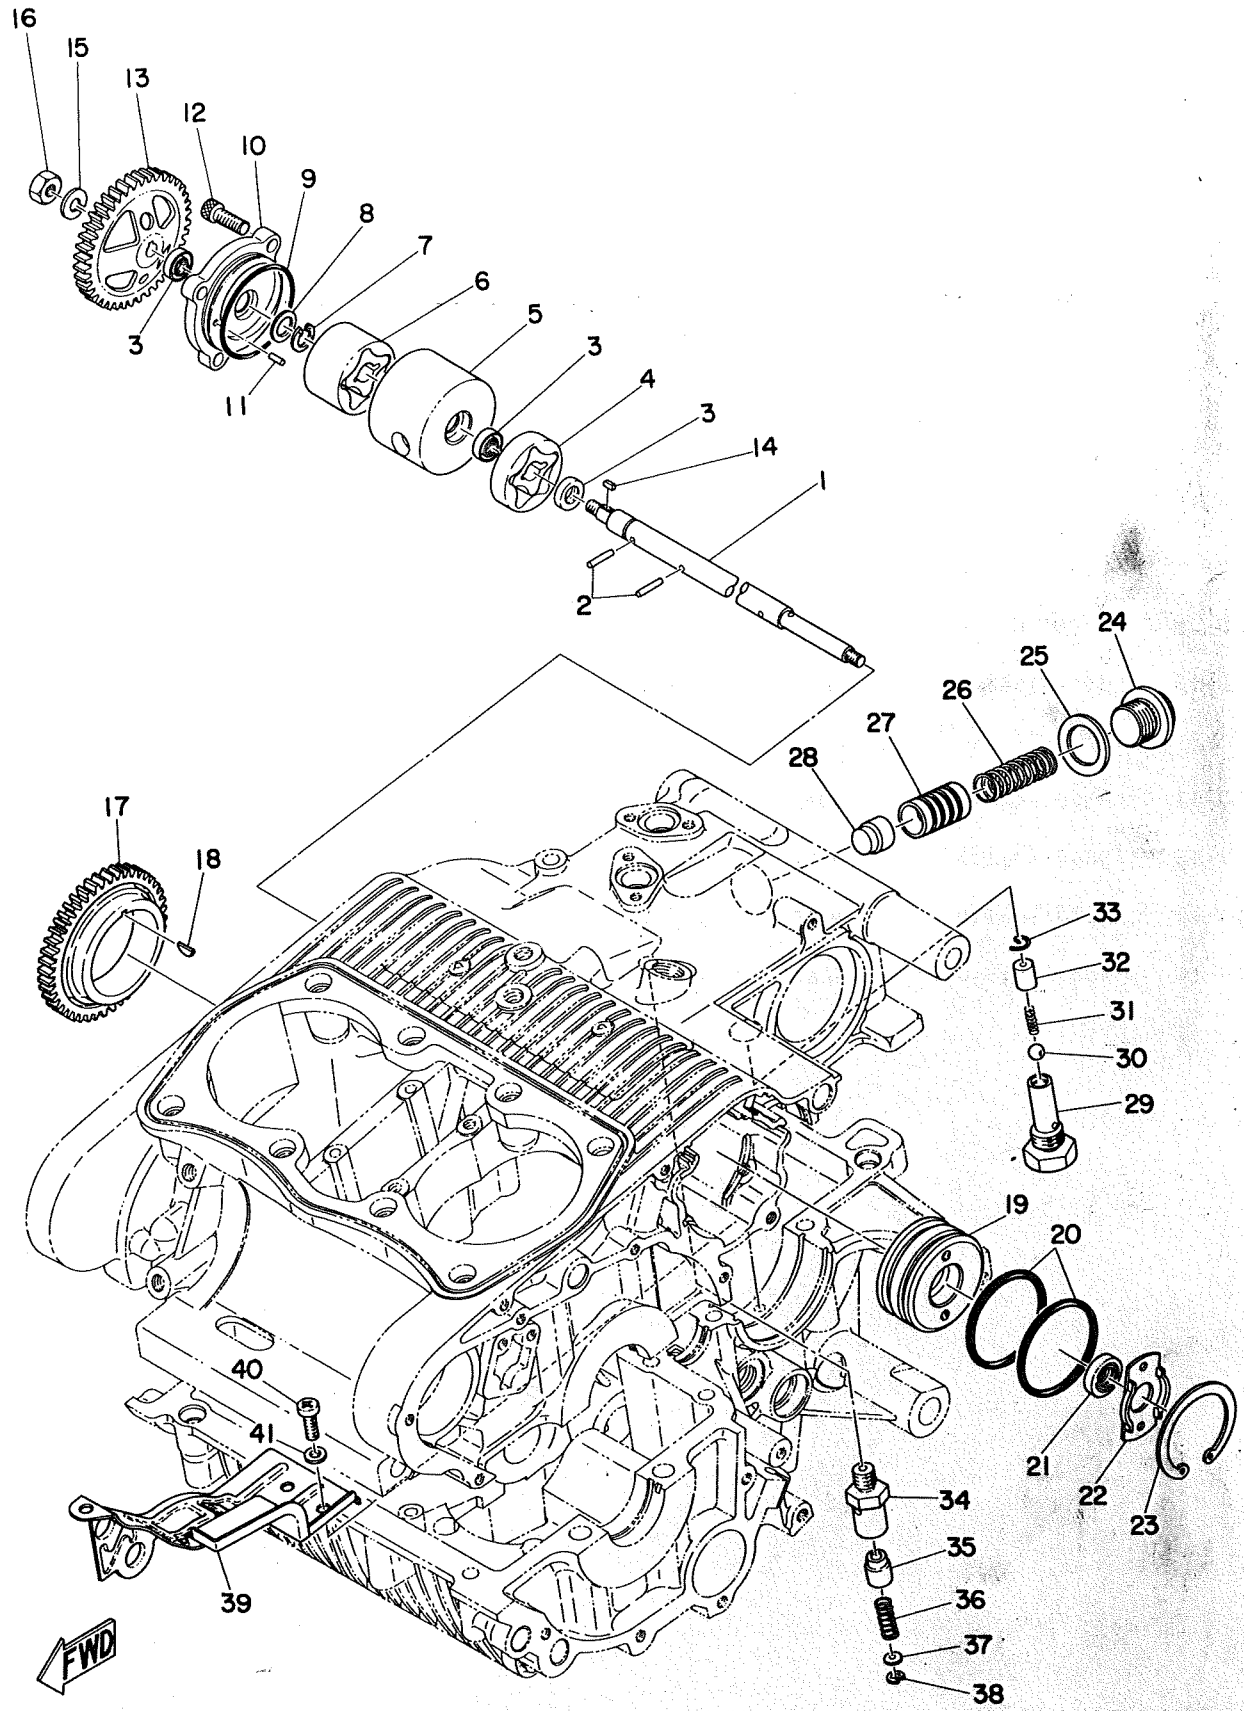

OIL PUMP

Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
11- 1	341-13314-02	SHAFT, pump	1		
11- 2	93603-17070	PIN, dowel (3-17)	2		
11- 3	93104-11038	OIL SEAL (SD-11-15-3)	3		
11- 4	341-13310-02	ROTOR 1 ASS'Y	1		
11- 5	341-13336-01	HOUSING, rotor	1		
11- 6	341-13320-02	ROTOR 2 ASS'Y	1		
11- 7	93440-11024	CIRCLIP (11Φ special)	1		
11- 8	341-13318-01	WASHER (11.5-14.5-0.5) ...	1		
11- 9	93210-48210	O-RING (2.2-45.5)	1		
11-10	341-13316-01	COVER, pump	1		
11-11	93603-08072	PIN, dowel (2.5-7.8)	1		
11-12	91316-06020	BOLT	3		
11-13	341-13325-01	GEAR, driven	1		
11-14	341-13335-00	KEY	1		
11-15	92901-06100	WASHER, spring	1		
11-16	98801-06300	NUT	1		
11-17	341-13324-02	GEAR, drive	1		
11-18	256-13334-00	KEY, woodruff	1		
11-19	341-13452-01	COVER, rotor filter	1		
11-20	93210-46174	O-RING (2.2-45.5)	2		
11-21	93102-11119	OIL SEAL (SD-11-22-7)	1		
11-22	341-13453-00	PLATE, rotor filter side ...	1		
11-23	93420-50012	CIRCLIP (R-52)	1		


Fig. 11 OIL PUMP

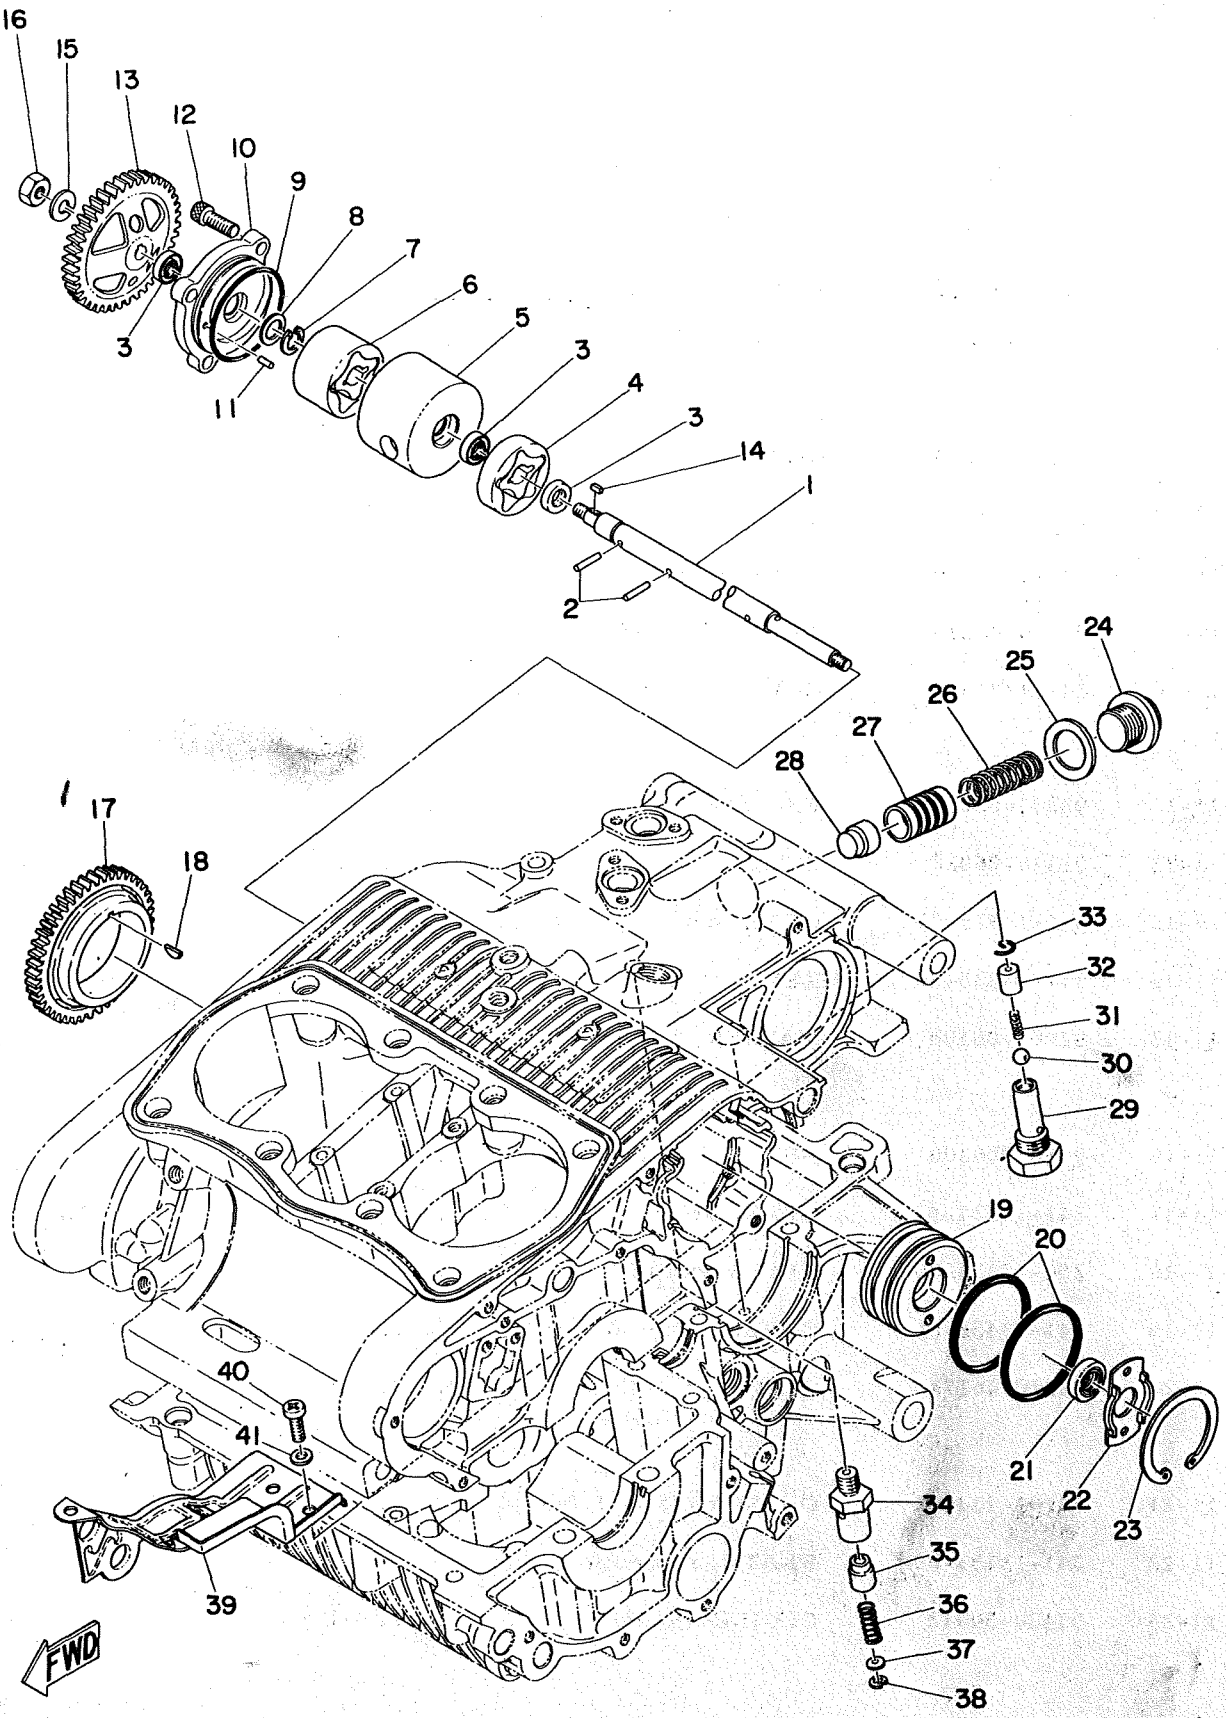

OIL PUMP

Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
11-24	341-13478-00	PLUG, check	1		
11-25	341-13477-01	GASKET	1		
11-26	341-13469-00	SPRING	1		
11-27	341-13468-01	PLUNGER	1		
11-28	341-13479-01	SEAT, valve	1		
11-29	341-13496-00	SCREW, by-pass	1		
11-30	93501-04004	BALL (1/4 inch)	1		
11-31	341-13494-00	SPRING, by-pass	1		
11-32	341-13497-00	PLUG, by-pass	1		
11-33	341-13486-00	CLIP	1		
11-34	341-13495-00	SCREW, release	1		
11-35	341-13483-00	PLUNGER, release	1		
11-36	341-13484-01	SPRING, release	1		
11-37	341-13485-00	SHIM (3-11-1)	1		
11-38	93420-11030	CIRCLIP	1		
11-39	341-13317-02	PLATE, buffle	1		
11-40	92501-06015	SCREW, panhead	3		
11-41	92901-06100	WASHER, spring	3		


Fig. 12 OIL CLEANER

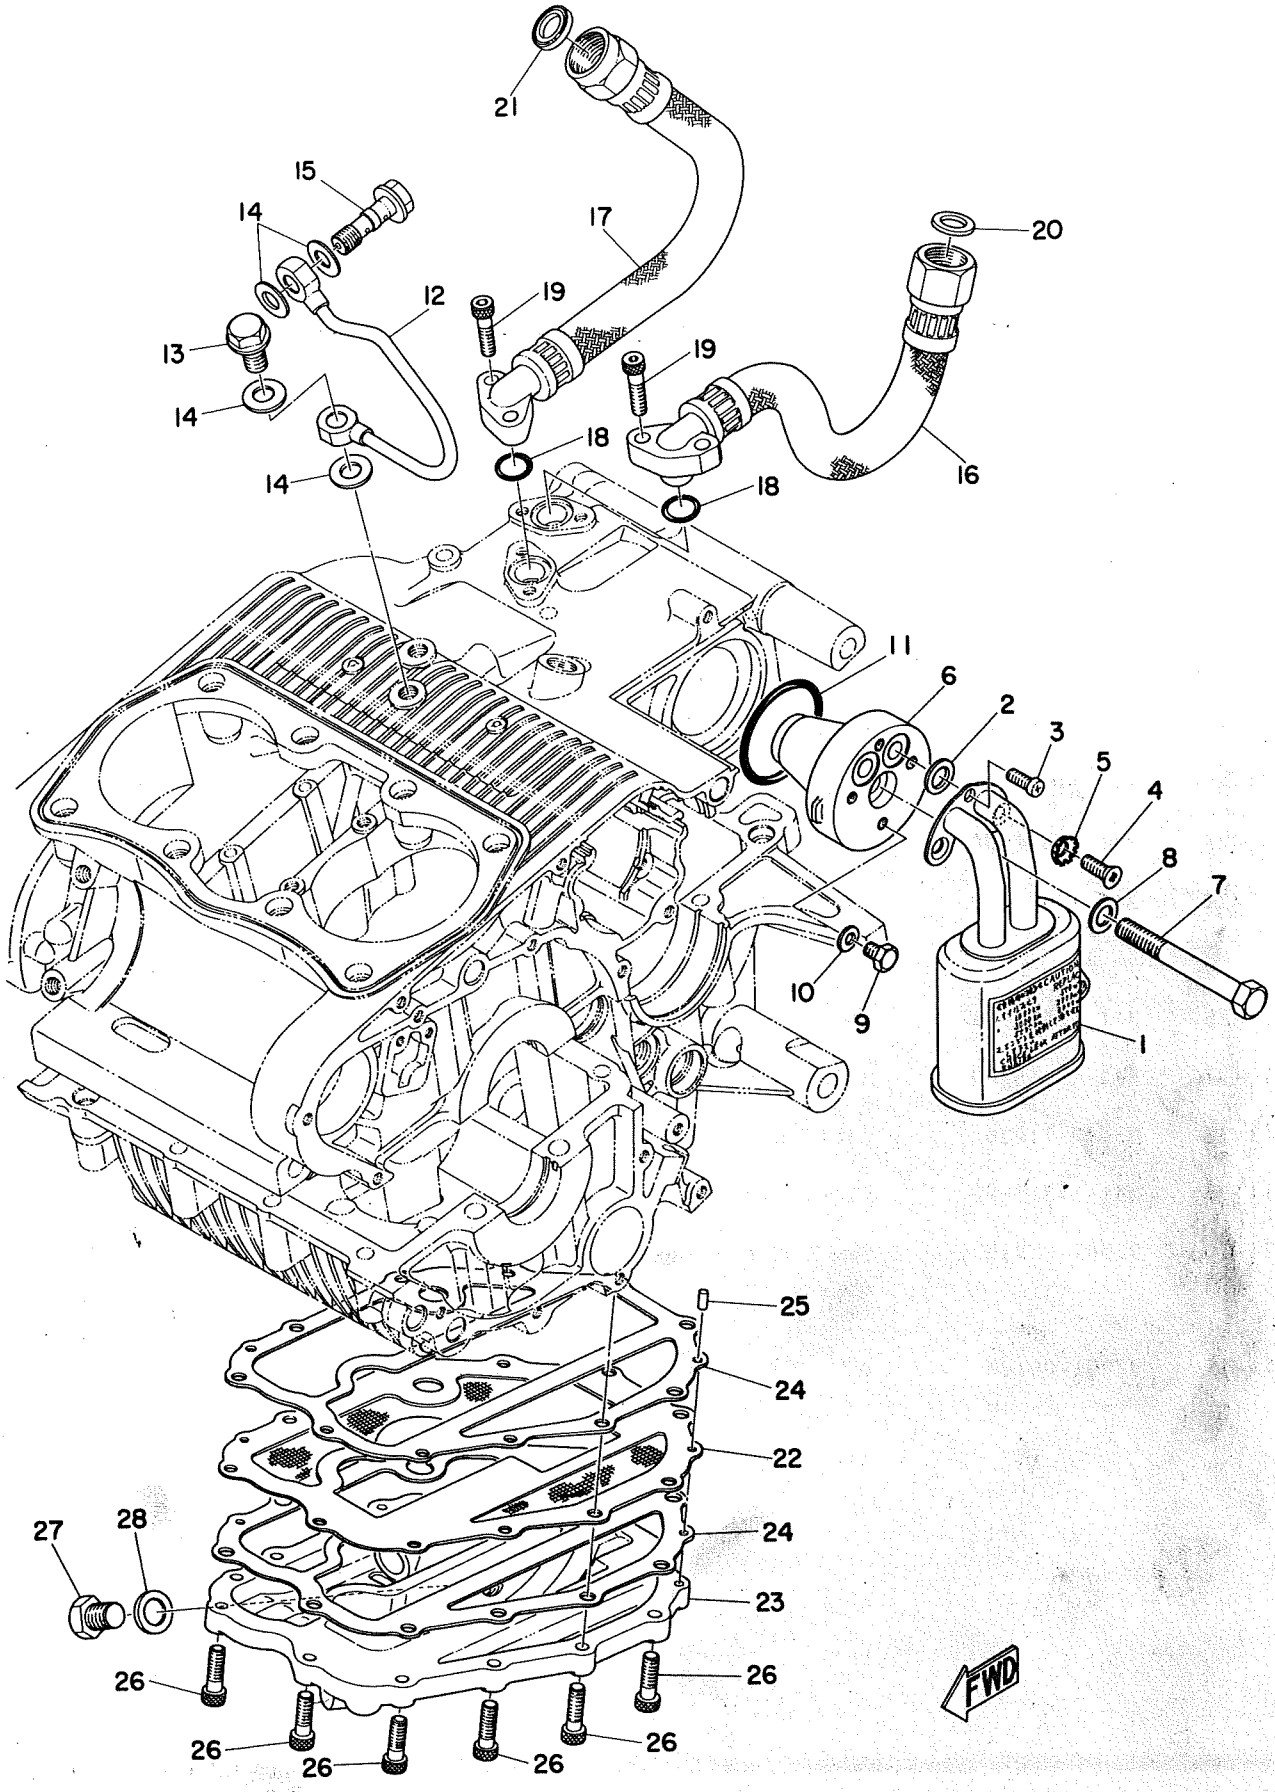

OIL CLEANER

Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
12- 0-1	341-13440-90	OIL CLEANER ASS'Y	1		
12- 1	341-13440-00	. OIL CLEANER ASS'Y	1		Filter + 2 O.ring 341-13440-90
12- 2	90430-13002	Ⓝ, GASKET	2		
12- 3	92501-06012	SCREW, panhead	1		
12- 4	92701-06015	SCREW, flathead	2		
12- 5	92901-06500	WASHER, tooth	2		
12- 6	341-15416-03	COVER, oil cleaner	1		
12- 7	97101-08085	BOLT	1		
12- 8	341-11175-00	WASHER	1		
12- 9	91101-06008	BOLT	1		
12-10	256-11396-00	Ⓝ GASKET	1		
12-11	93210-54175	O-RING (3.5-53)	1		
12-12	341-13161-00	PIPE, delivery 1	1		
12-13	341-13166-02	BOLT, banjo 2	1		
12-14	256-13168-00	Ⓝ GASKET, banjo bolt 2	4		
12-15	341-13165-00	BOLT, banjo 1	1		
12-16	341-13465-10	HOSE, oil intake	1		
12-17	341-13464-10	HOSE, oil outlet	1		
12-18	93210-15171	O-RING (1.9-14.5)	2		
12-19	91316-06025	BOLT	4		
12-20	341-13475-00	Ⓝ GASKET, oil hose 2	1		
12-21	341-13476-00	Ⓝ GASKET, oil hose 1	1		
12-22	341-13411-04	STRAINER	1		
12-23	341-13417-04	COVER, strainer	1		


Fig. 12 OIL CLEANER

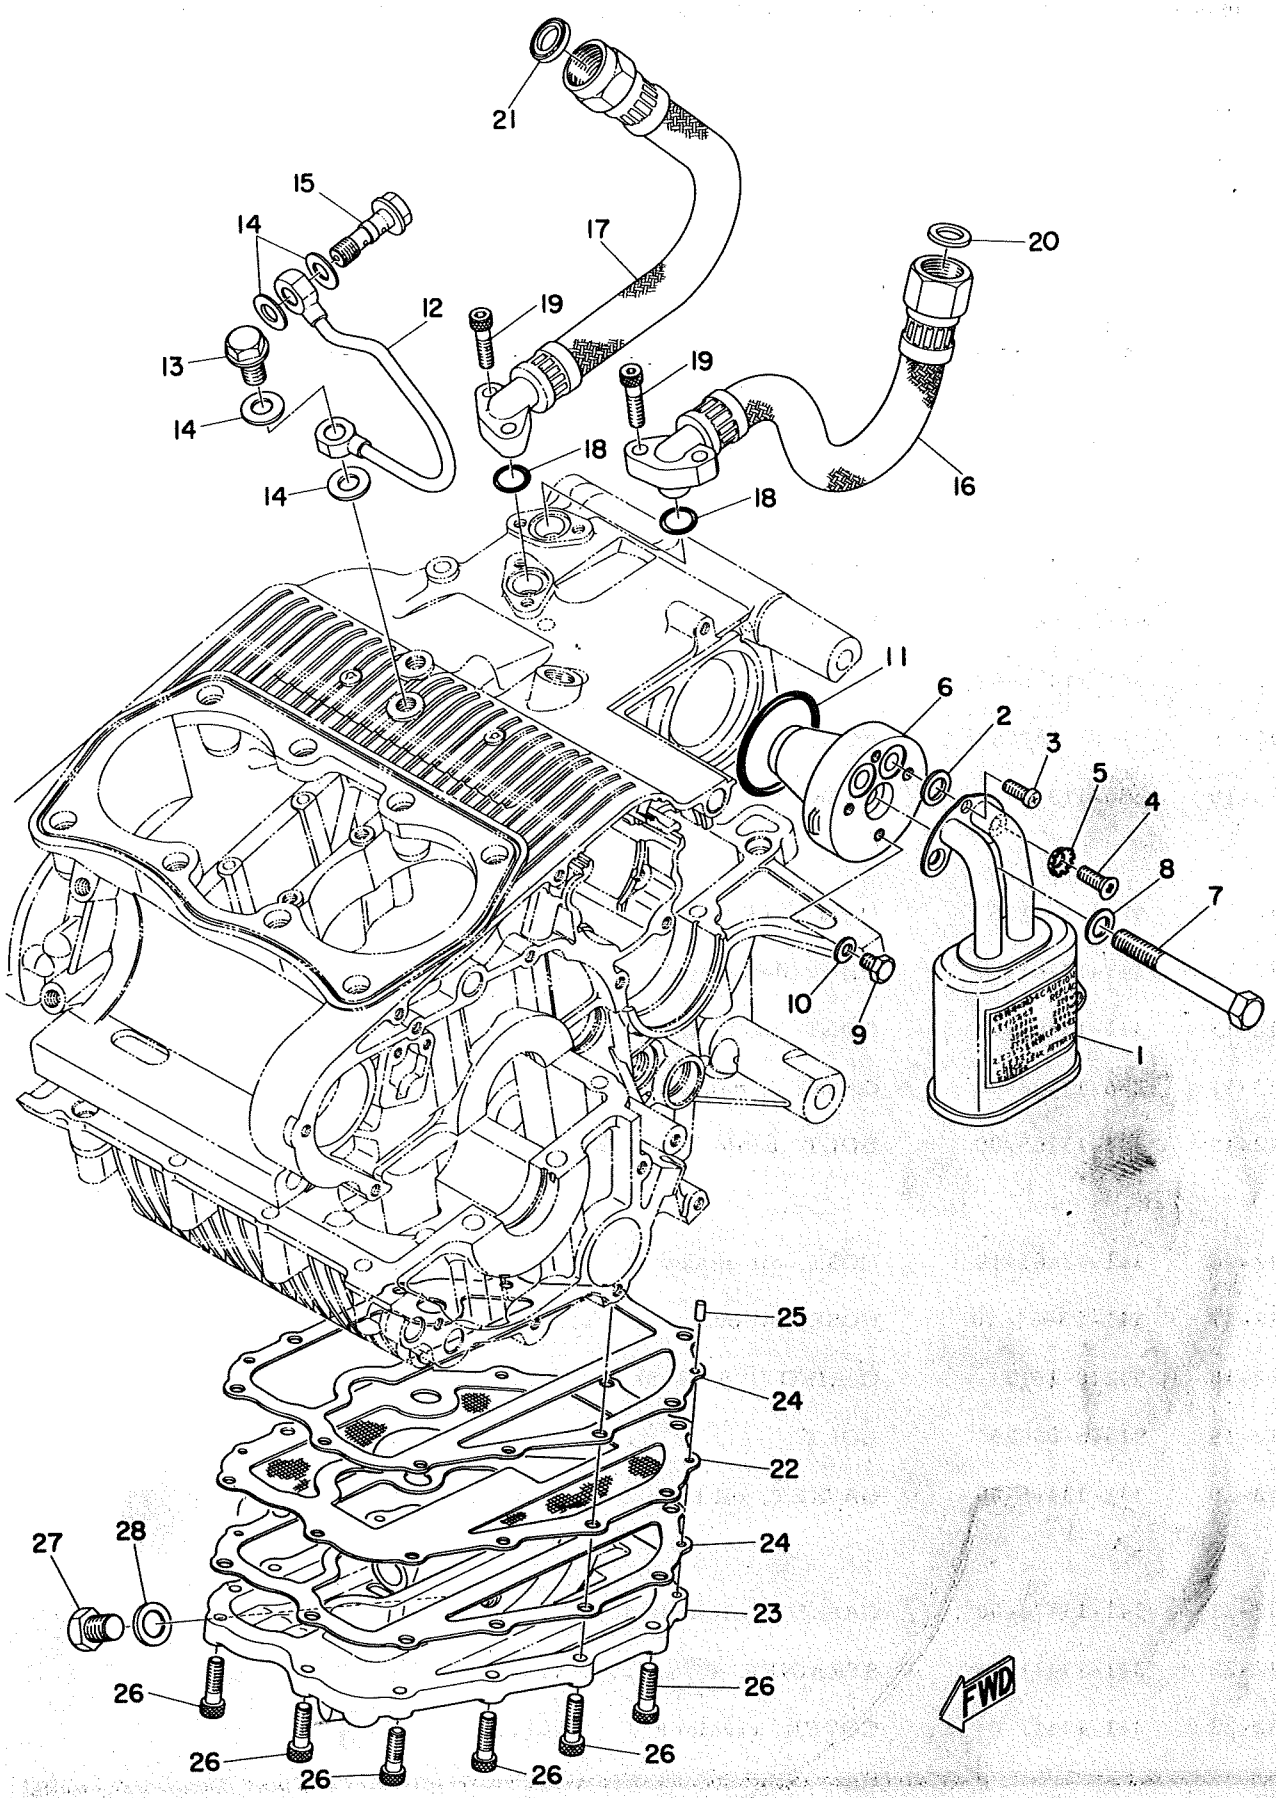

OIL CLEANER

Ref. No.	Parts No.		Description	Q'ty	Applicable Machine No.	Remarks
12-24	341-13414-03	X	GASKET, strainer	2		
12-25	93604-12037		PIN, dowel (4-10)	2		
12-26	91316-06025		BOLT	11		
12-27	341-15351-00		PLUG, drain	1		
12-28	214-11198-01	Ⓝ	GASKET	1		


Fig. 13 CLUTCH

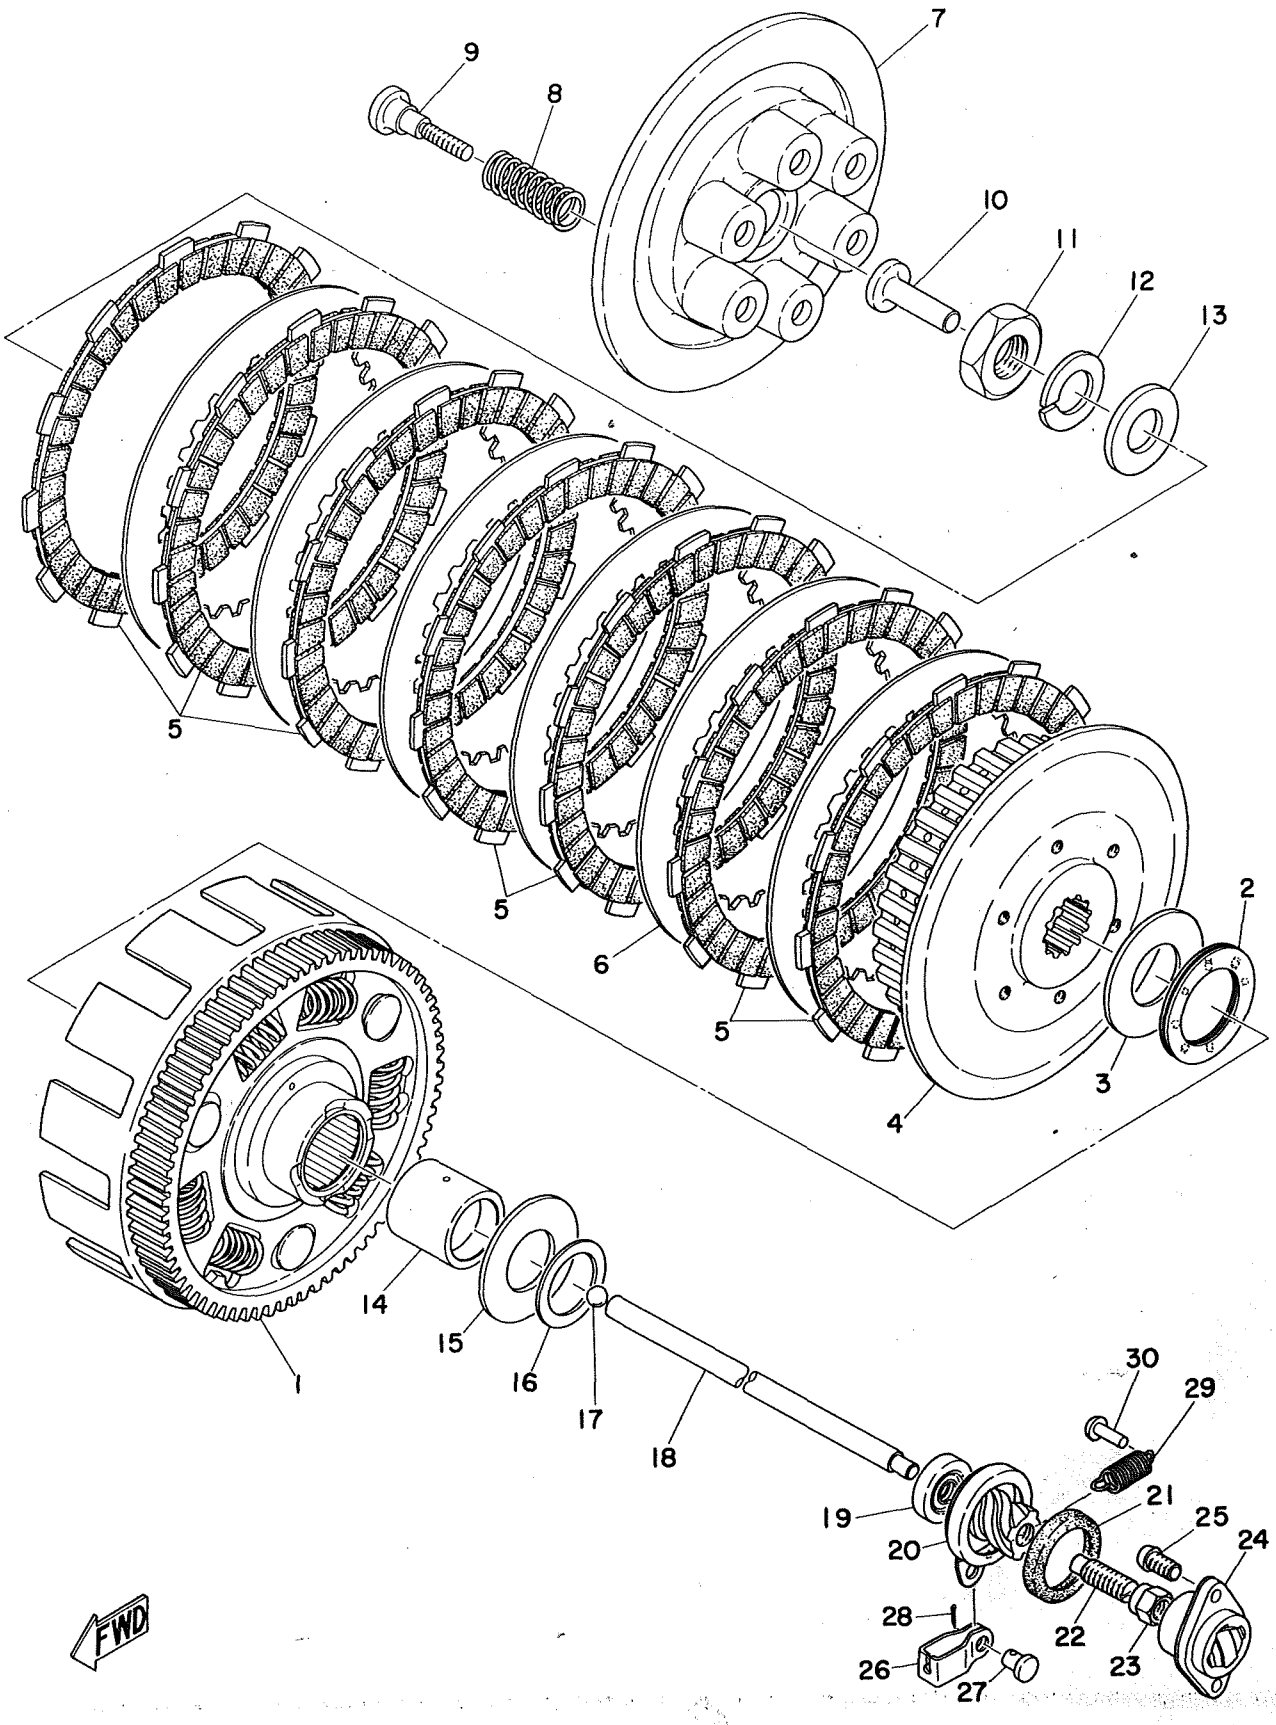

CLUTCH


Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
13- 0-1	341-16301-00	CLUTCH ASS'Y	1		
13- 1	341-16150-03	. PRIMARY DRIVEN GEAR COMP. ($30\Phi\ {}^{+0.030}_{+0.020}$ 72T)	1		
13- 2	93341-23009	. BEARING	1		
13- 3	170-16164-00	. PLATE, thrust 2 (25-50-2) ...	1		
13- 4	341-16371-00	. BOSS, clutch	1		
13- 5	341-16321-10	. PLATE, friction 1	7		
13- 6	256-16325-00	. PLATE, clutch	6		
13- 7	341-16351-00	. PLATE, pressure	1		
13- 8	256-16333-00	. SPRING, clutch	6		
13- 9	256-16337-00	. SCREW, spring	6		
13-10	256-16356-00	ROD, push 1	1		
13-11	156-16174-00	NUT, lock	1		
13-12	92900-18100	WASHER, spring	1		
13-13	92900-18200	WASHER, plain	1		
13-14	341-16181-01	SPACER 1 (25-30 ${}^{+0.028}_{+0.020}$ -30) ...	U.R 1		
	341-16181-11	SPACER 2 (25-30 ${}^{+0.020}_{+0.013}$ -30) ...			
	341-16181-21	SPACER 3 (25-30 ${}^{+0.013}_{+0.005}$ -30) ...			
	341-16181-31	SPACER 4 (25-30 ${}^{+0.005}_{-0.002}$ -30) ...			
13-15	170-16164-00	PLATE, thrust 2 (25-50-2) ...	1		
13-16	131-15653-00	WASHER (25.2-36-1.0)	1		
13-17	93505-16006	BALL (5/16 inch)	2		
13-18	341-16357-01	ROD, push	1		
13-19	93102-08094	OIL SEAL (SD-8-25-6)	1		
13-20	341-16340-01	PUSH LEVER ASS'Y	1		

Fig. 13 CLUTCH

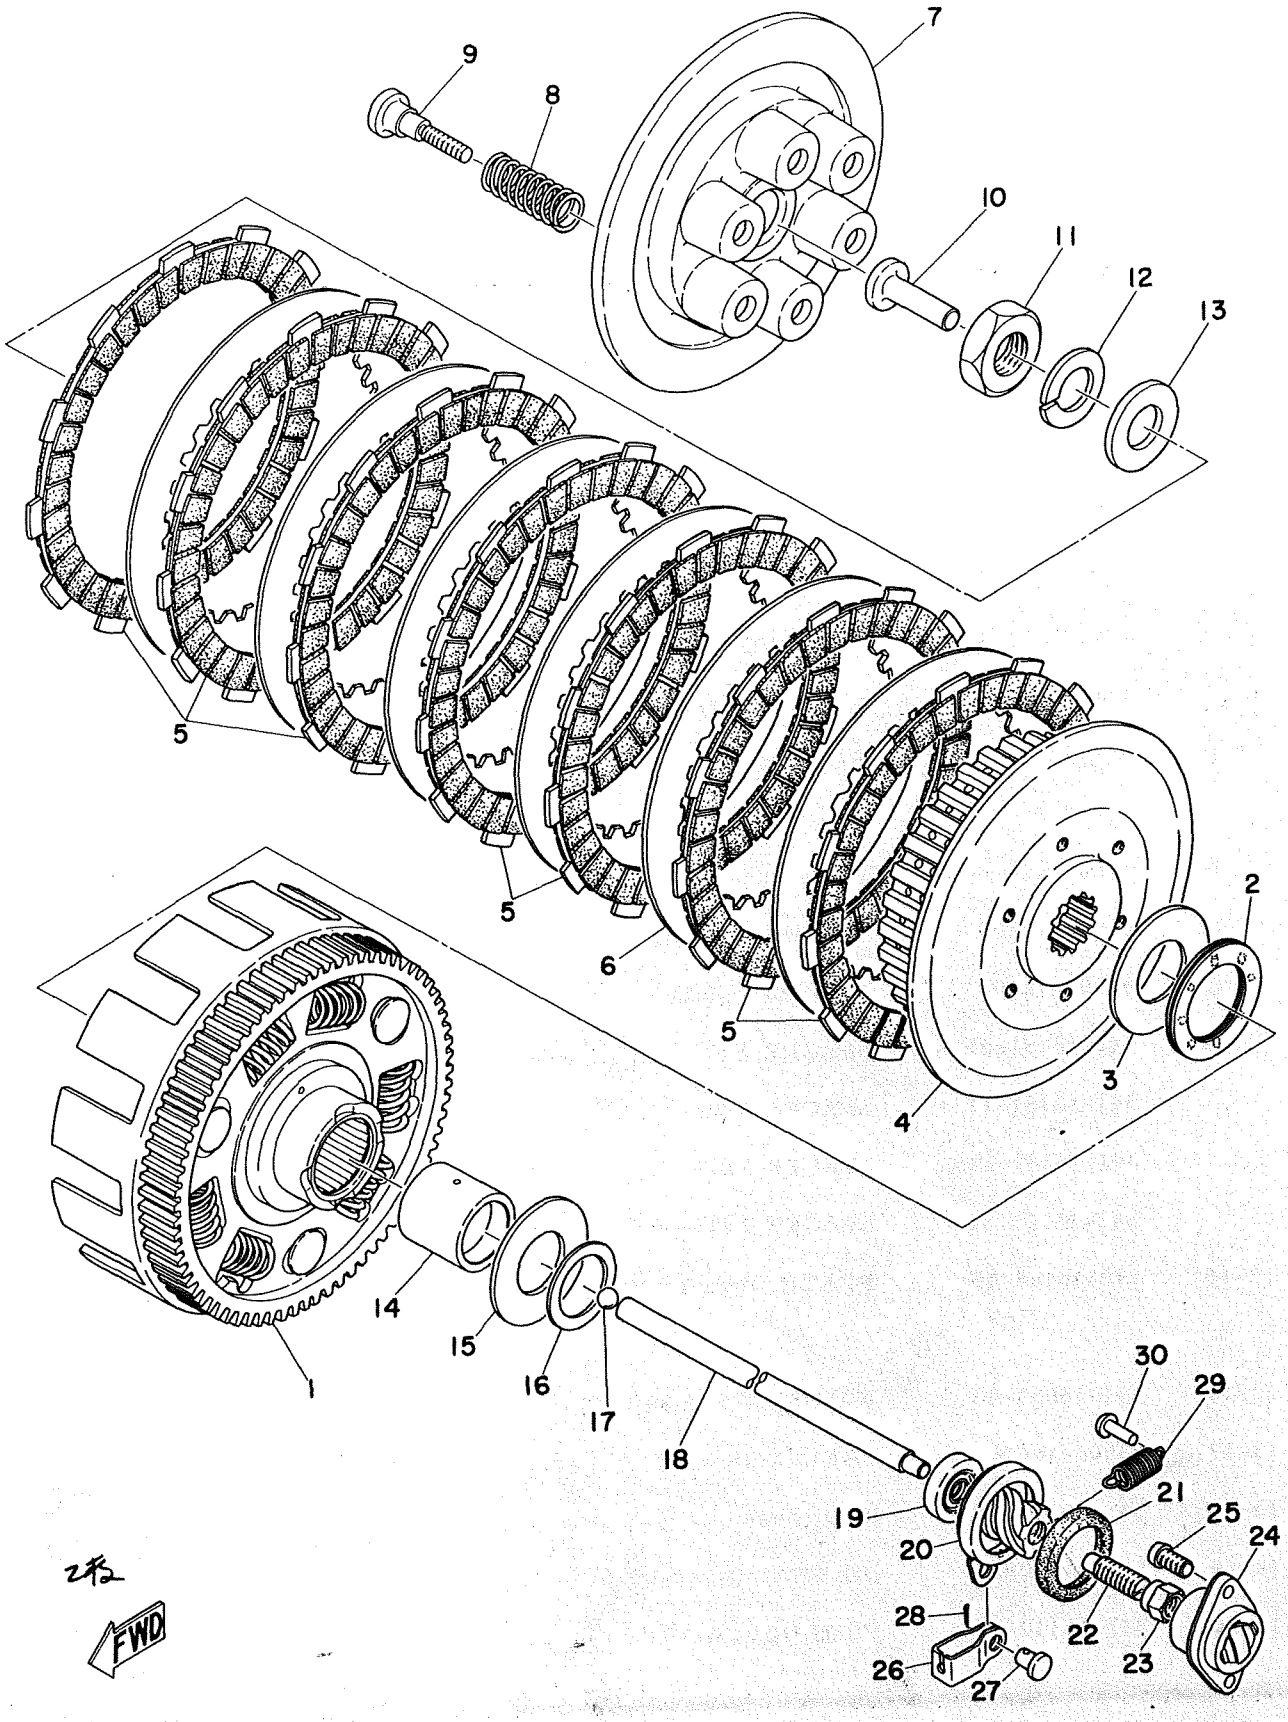


Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
13-21	214-16347-01	SEAL, dust	1		
13-22	256-16343-00	SCREW, adjusting	1		
13-23	214-16344-00	NUT, adjusting	1		
13-24	341-16396-00	HOUSING, push screw	1		
13-25	98501-05012	SCREW, panhead	2		
13-26	214-16389-00	JOINT	1		
13-27	214-16379-00	PIN	1		
13-28	91401-10010	PIN, cotter	1		
13-29	168-16345-00	SPRING, return	1		
13-30	132-16346-00	HOOK, spring	1		

Fig.14 TRANSMISSION

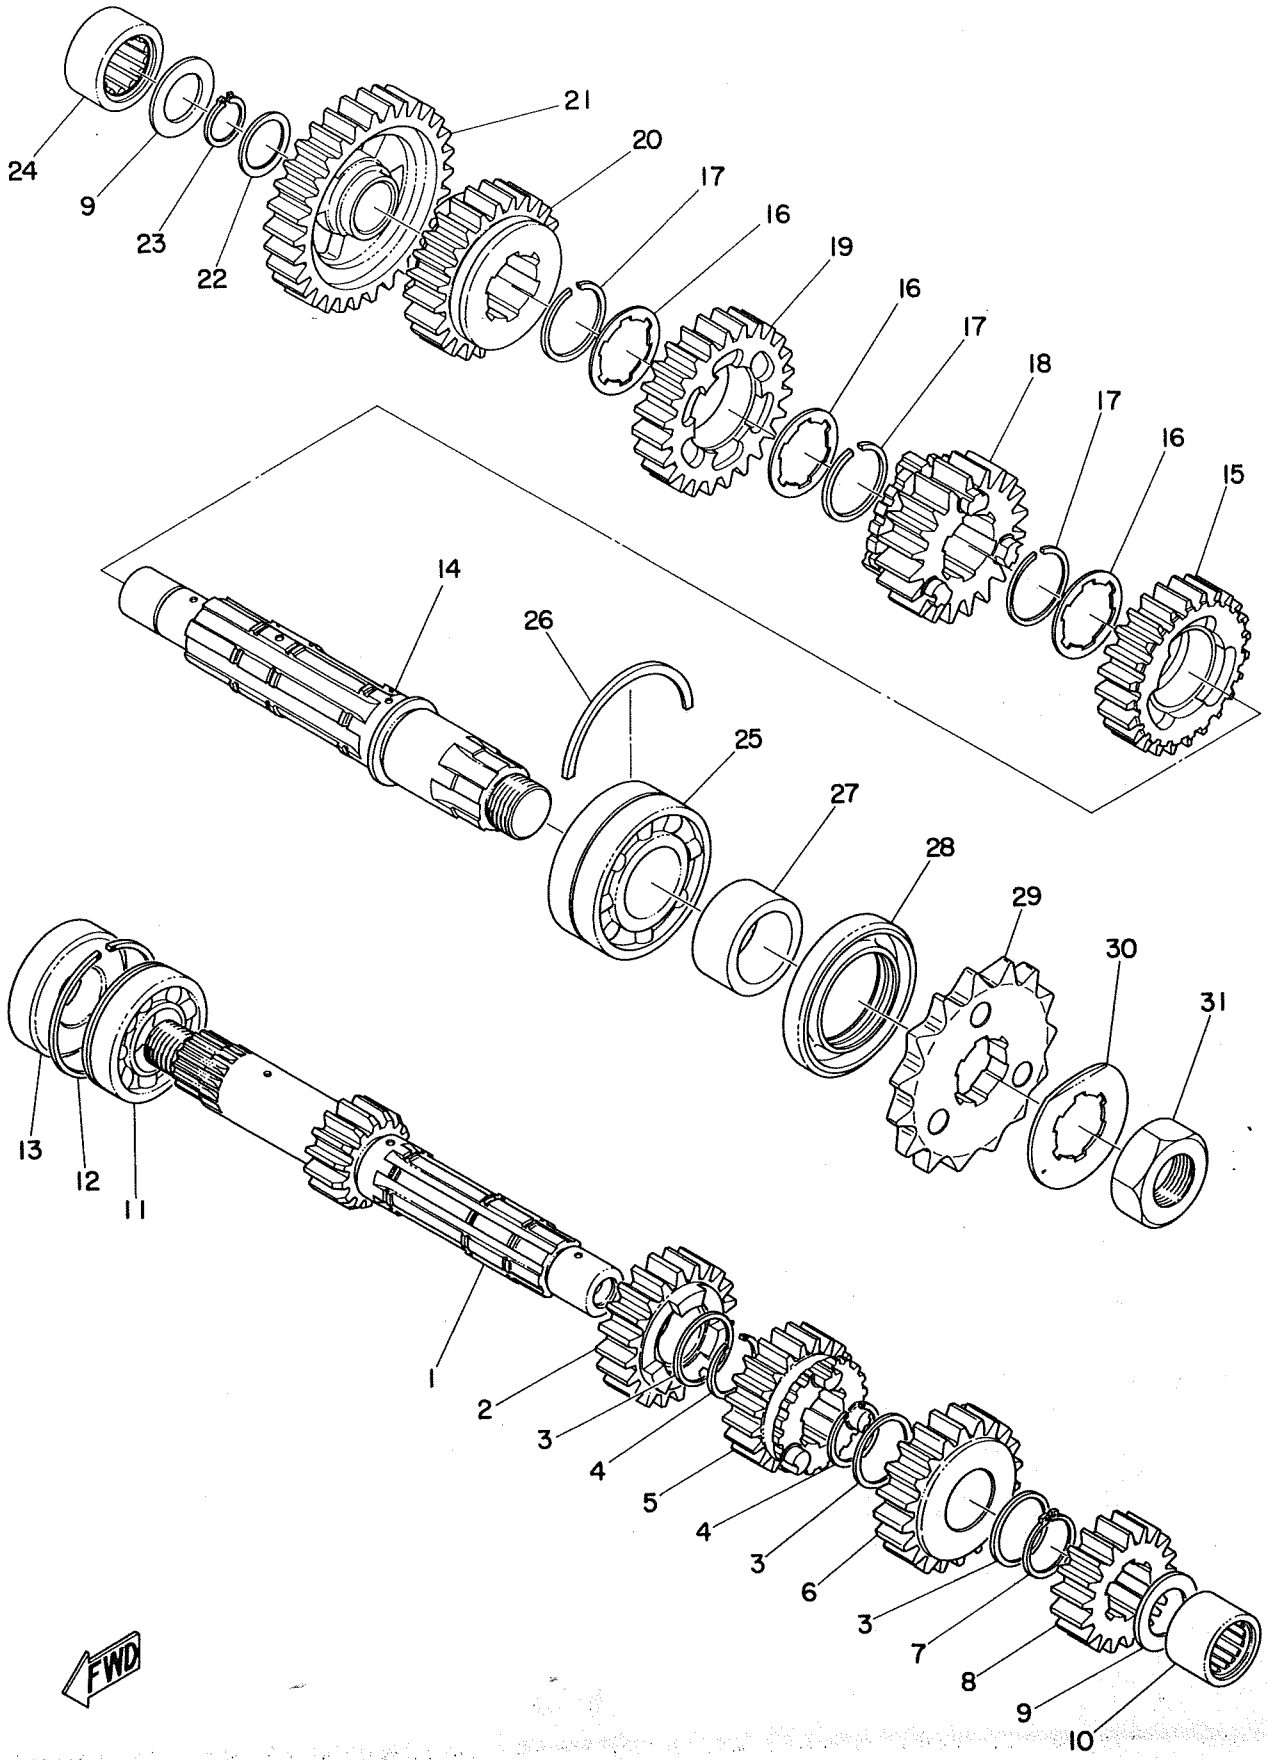


Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
14- 1	341-17411-00	AXLE, main (13T)	1		
14- 2	256-17141-00	GEAR, 4th pinion (21T)	1		
14- 3	256-17154-00-10	WASHER, gear hold 5 (25.2-30-1.0)	U.R 3		
	256-17154-00-12	WASHER, gear hold 5 (25.2-30-1.2)			
14- 4	93440-25020	CIRCLIP (25Φ special)	2		
14- 5	256-17131-00	GEAR, 3rd pinion (20T)	1		
14- 6	341-17151-00	GEAR, 5th pinion (23T)	1		
14- 7	93410-25017	CIRCLIP (S-25)	1		
14- 8	256-17121-00	GEAR, 2nd pinion (17T)	1		
14- 9	137-17427-00-10	SHIM, drive axle (20.2-33-1.0) ...	2		
14-10	93313-32007	BEARING	1		
14-11	93305-20501	BEARING (B5205)	1		
14-12	93440-52014	CIRCLIP (52Φ special)	1		
14-13	341-16375-00	COLLAR	1		
14-14	341-17421-00	AXLE, drive	1		
14-15	256-17221-00	GEAR, 2nd wheel (27T)	1		
14-16	256-17236-00-10	WASHER, gear hold 3 (26.2-34-1.0)	U.R 3		
	256-17236-00-12	WASHER, gear hold 3 (26.2-34-1.2)			
14-17	93440-30015	CIRCLIP (30Φ special)	3		
14-18	256-17251-00	GEAR, 5th wheel (22T)	1		
14-19	256-17231-00	GEAR, 3rd wheel (26T)	1		
14-20	256-17241-00	GEAR, 4th wheel (23T)	1		
14-21	306-17211-00	GEAR, 1st wheel (32T)	1		

Fig.14 TRANSMISSION

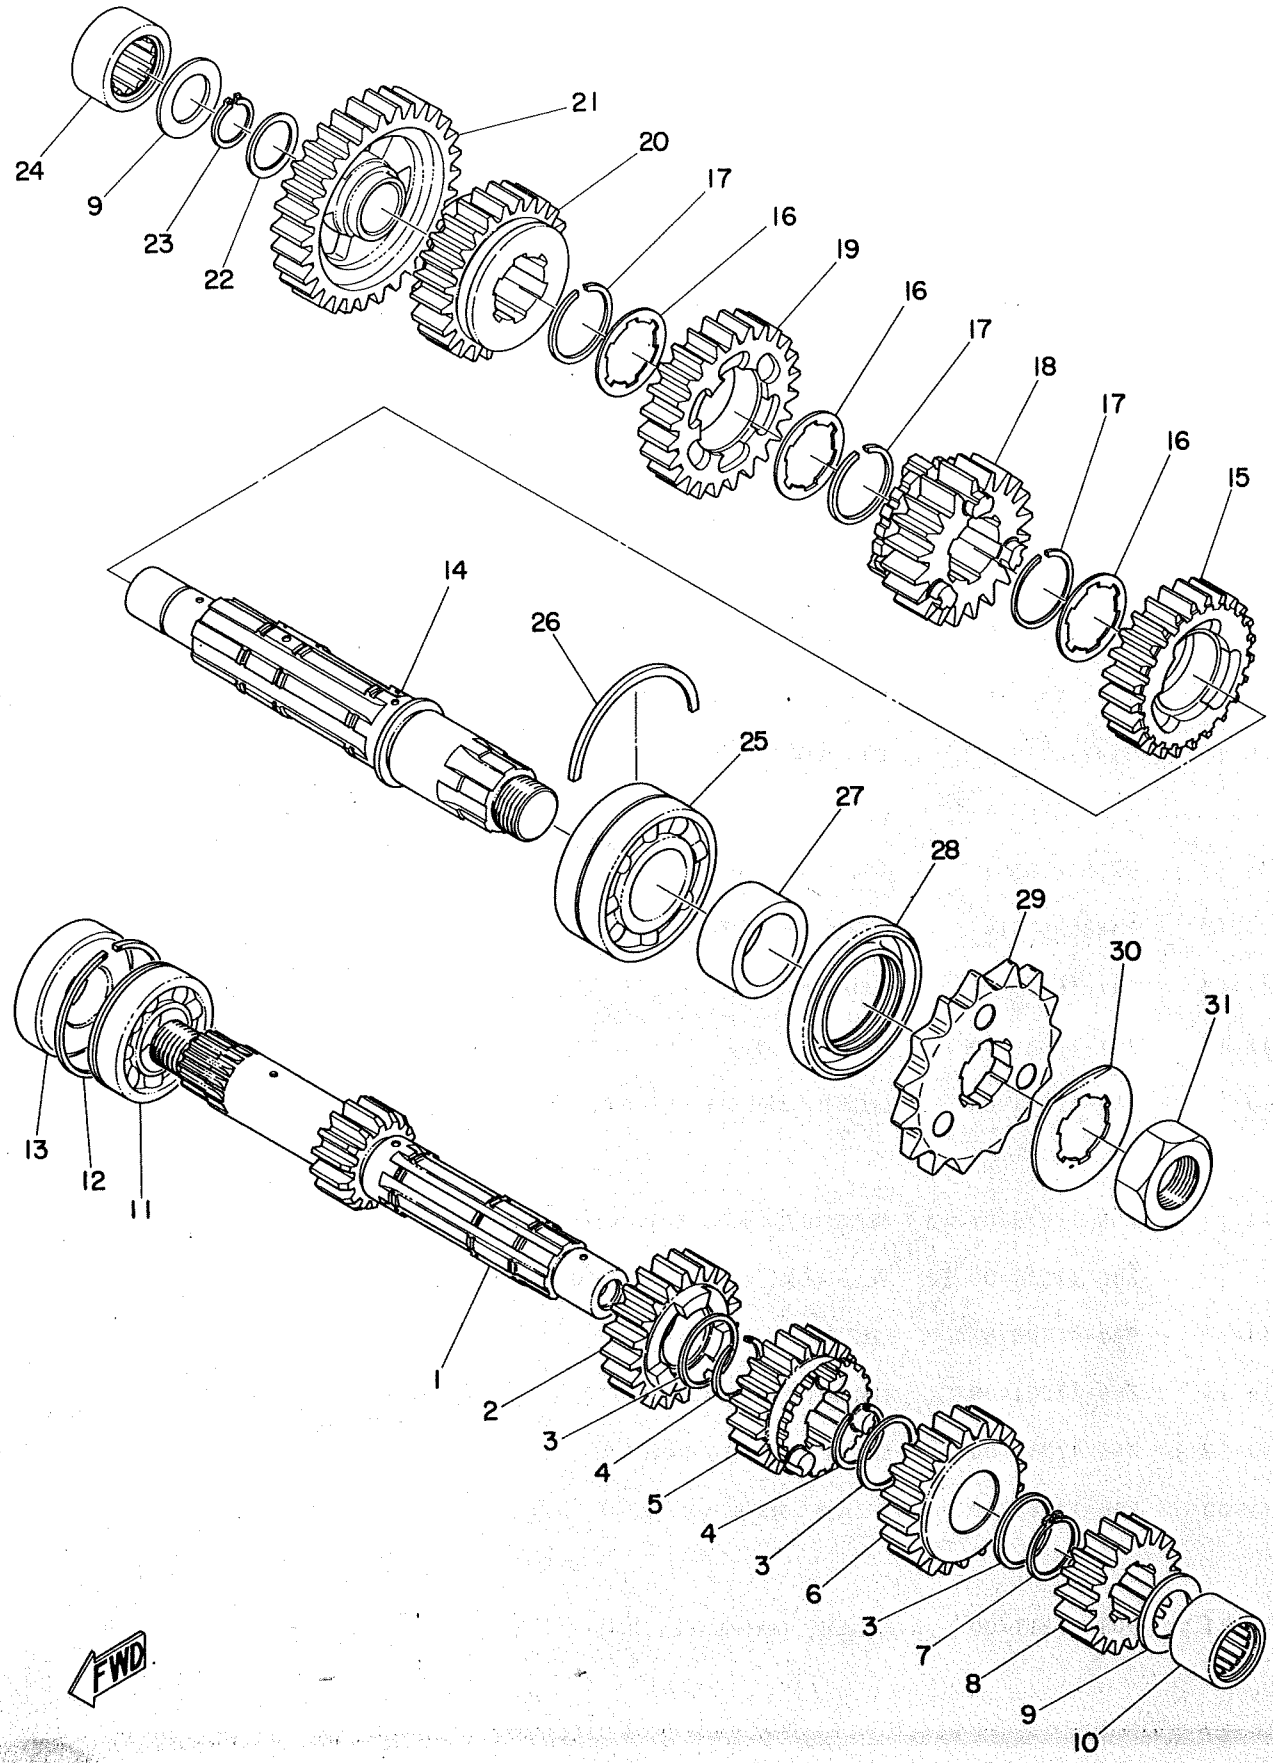

Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
14-22	132-17216-00	WASHER, gear hold (20-25-1.0) ..	1		
14-23	93410-20021	CIRCLIP (S-20)	1		
14-24	93313-32005	BEARING	1		
14-25	93305-20601	BEARING (B5206)	1		
14-26	168-17424-00	CIRCLIP	1		
14-27	341-17462-00	COLLAR, distance	1		
14-28	93105-40016	OIL SEAL (SDO-40-62-9)	1		
14-29	256-17461-70	SPROCKET, drive (17T)	1		
14-30	256-17464-00	WASHER, lock	1		
14-31	256-17463-00	NUT, lock	1		


Fig. 15 SHIFTER 1

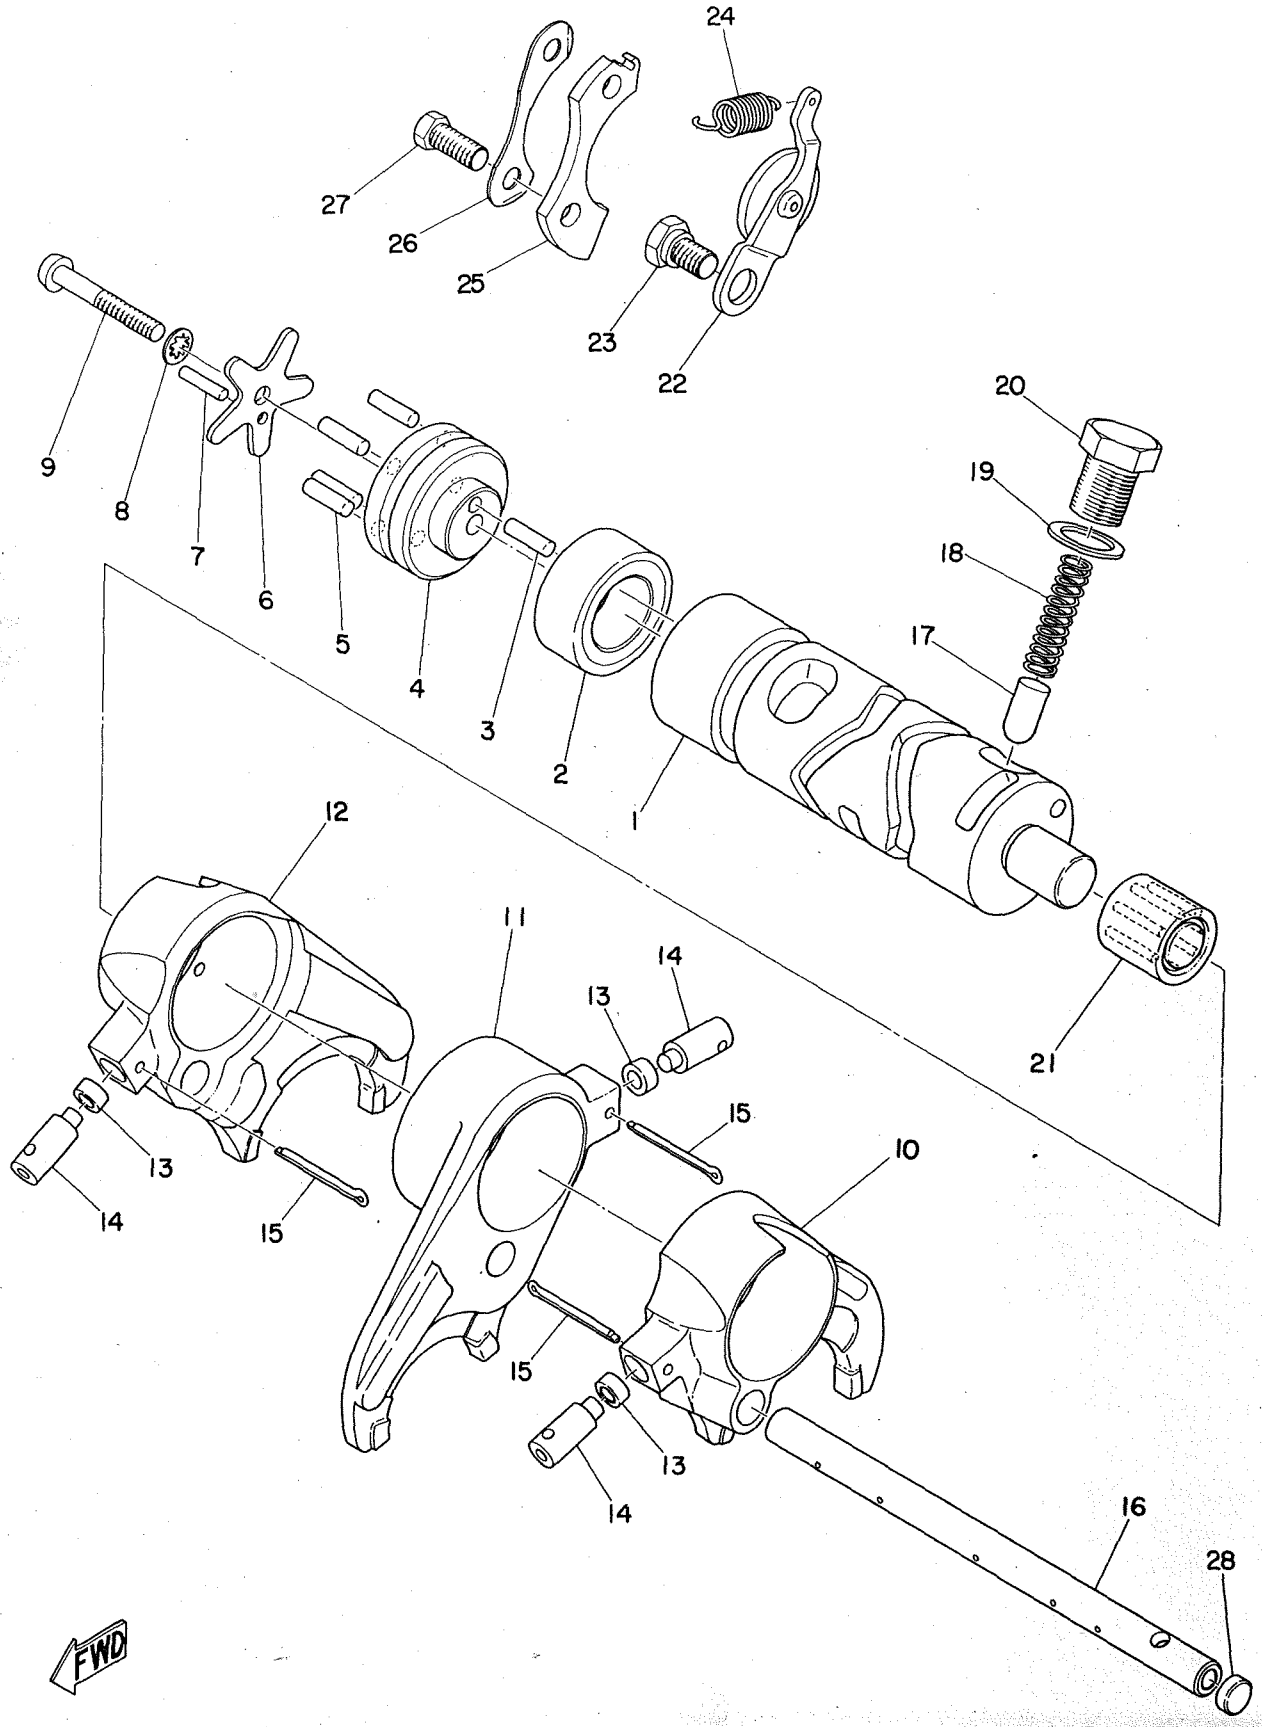

SHIFTER 1

Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
15- 1	341-18541-01	CAM, shift	1		
15- 2	93318-32003	BEARING	1		
15- 3	93604-10011	PIN, dowel (4-10)	2		
15- 4	306-18546-00	CAM, shift 2	1		
15- 5	93604-14012	PIN, dowel (4-13.8)	4		
15- 6	168-18561-00	PLATE, side	1		
15- 7	93604-14012	PIN, dowel (3-13.8)	1		
15- 8	92901-05300	WASHER, tooth	1		
15- 9	98501-05040	SCREW, panhead	1		
15-10	341-18511-01	FORK, shift 5th gear wheel	1		
15-11	256-18512-00	FORK, shift 3rd pinion	1		
15-12	341-18513-00	FORK, shift 4th gear wheel	1		
15-13	136-18551-00	ROLLER, cam follower	3		
15-14	256-18552-00	PIN, cam follower	3		
15-15	91401-25025	PIN, cotter	3		
15-16	256-18531-00	BAR, shift fork guide	1		
15-17	136-18547-00	STOPPER, cam	1		
15-18	306-18558-00	SPRING, neutral	1		
15-19	256-18567-00	GASKET (16.5-24-1.0)	1		
15-20	256-18577-00	SCREW, spring	1		
15-21	93320-31501	BEARING	1		
15-22	256-18140-00	STOPPER LEVER ASS'Y	1		
15-23	256-18177-00	BOLT, stopper	1		


Fig. 15 SHIFTER 1

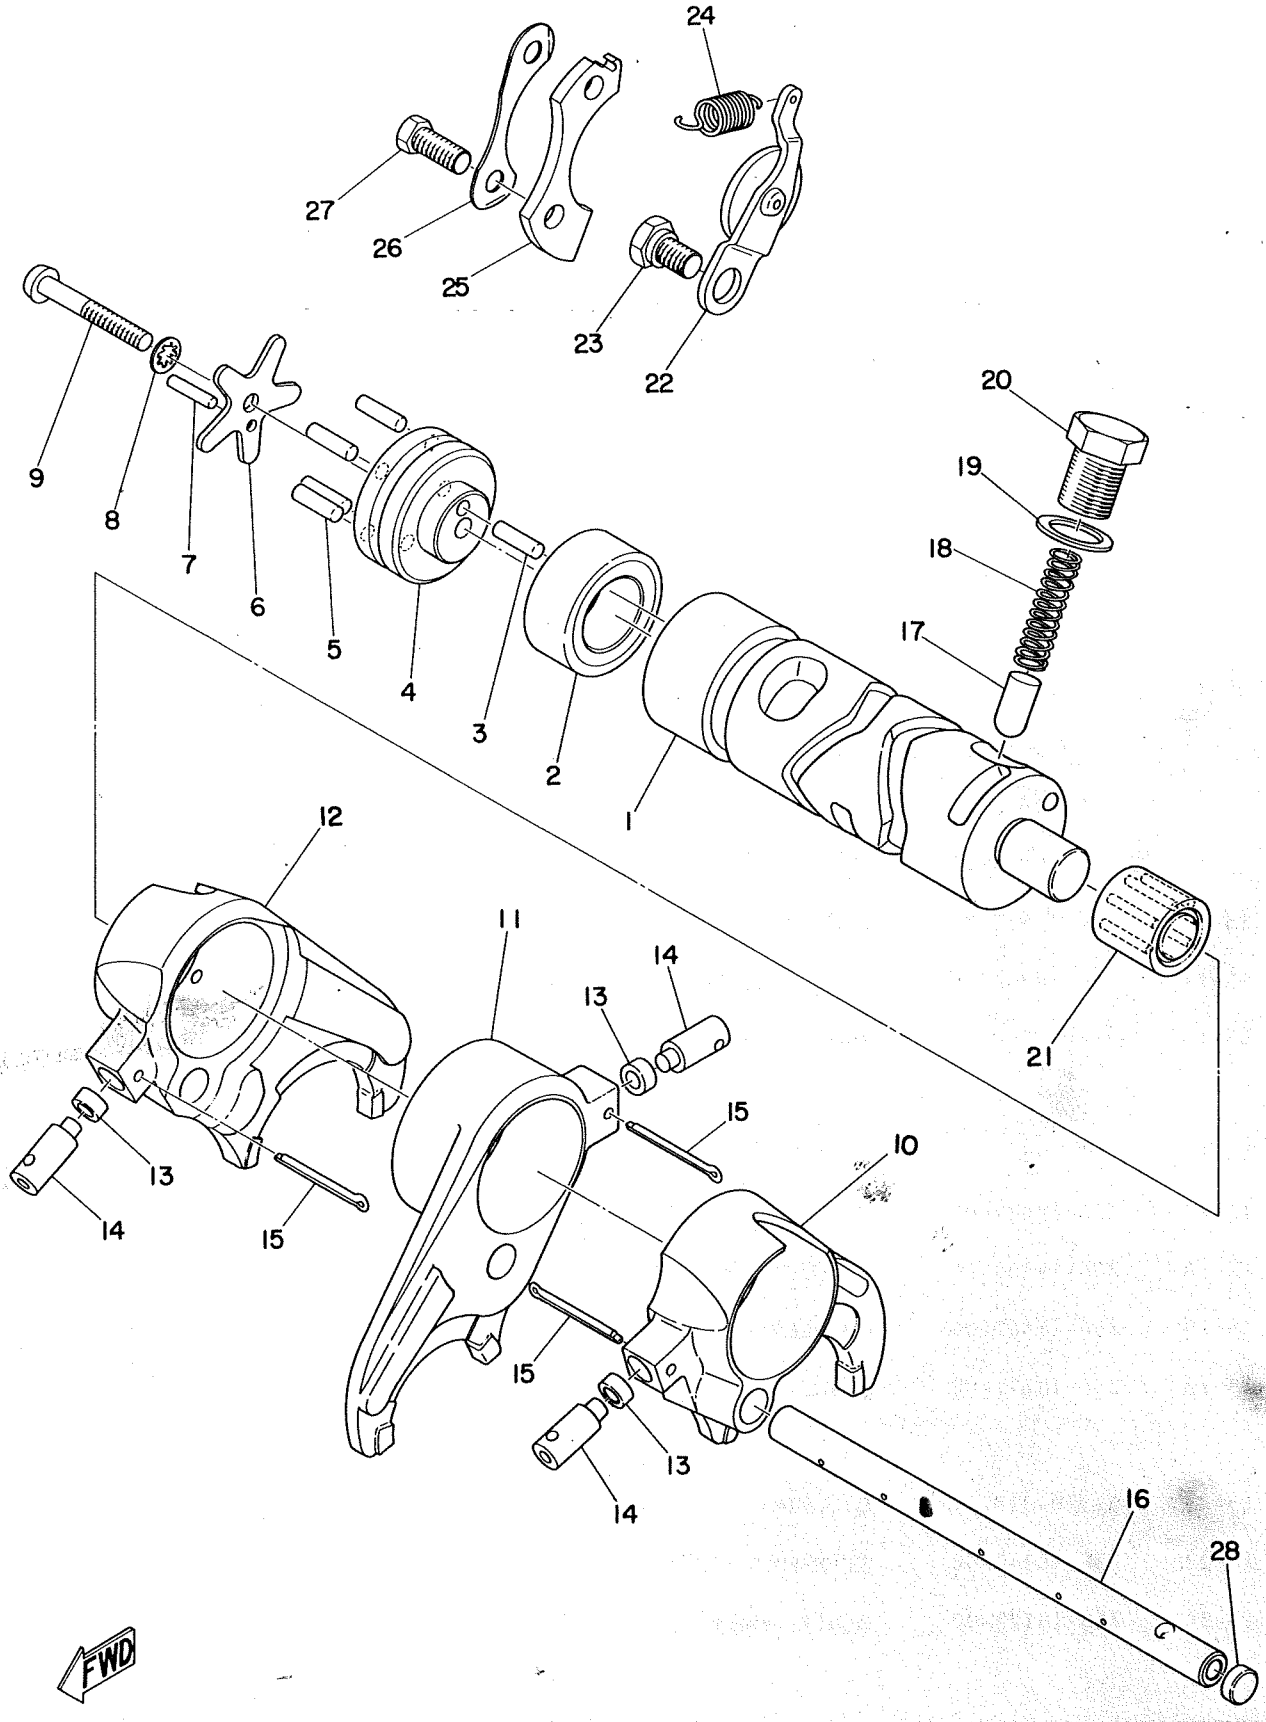

SHIFTER 1

Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
15-24	256-18143-01	SPRING	1		
15-25	341-18562-00	PLATE, stopper	1		
15-26	341-18565-00	PLATE, lock screw	1		
15-27	341-18594-00	BOLT	2		
15-28	256-15439-00	PLUG, blind	1		


Fig. 16 SHIFTER 2

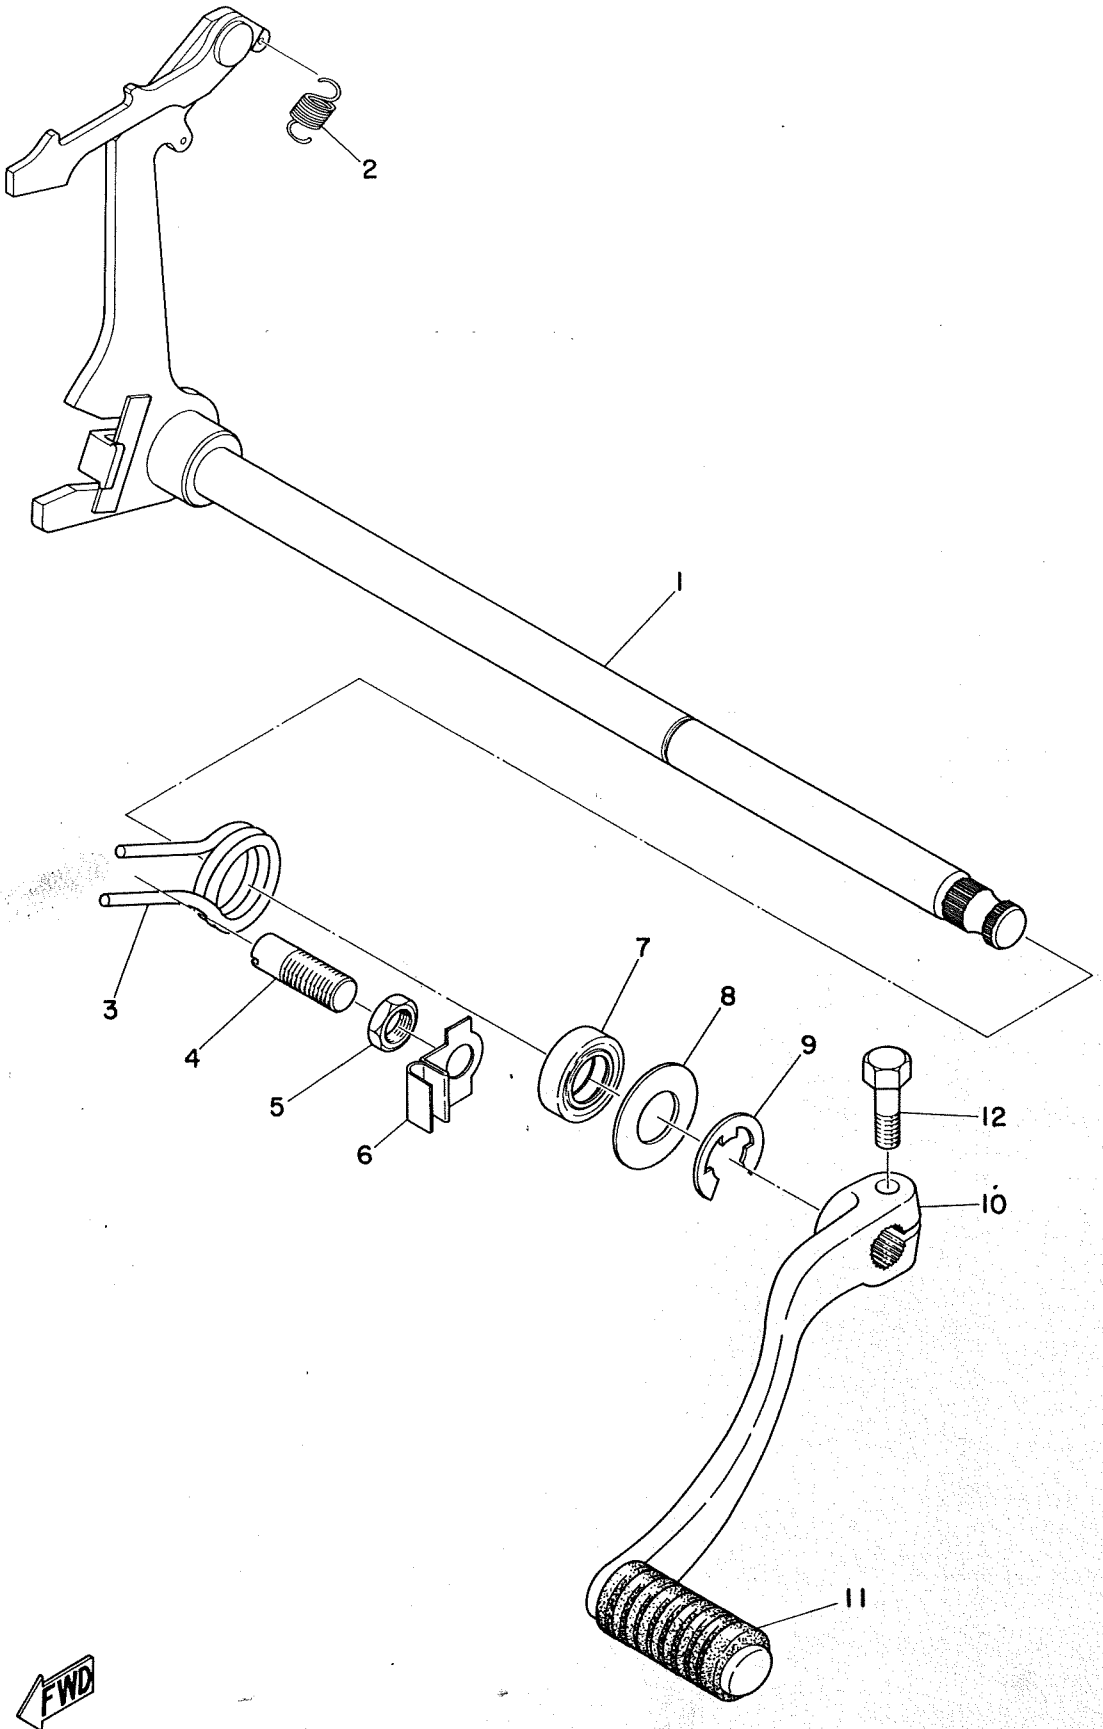

SHIFTER 2

Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
16- 1	341-18101-01	CHANGE SHAFT ASS'Y	1		
16- 2	168-18123-00	. SPRING	1		
16- 3	168-18124-00	SPRING, shaft return	1		
16- 4	168-18133-00	SCREW, adjusting	1		
16- 5	169-26251-00	NUT, lock	1		
16- 6	306-18139-00	WASHER, lock	1		
16- 7	93109-14010	OIL SEAL (SDO-14-24-6)	1		
16- 8	248-18137-00	WASHER, change axle (14.1-28-1.6)	1		
16- 9	93430-12009	CIRCLIP (E-12)	1		
16-10	341-18111-10-93	PEDAL, change	1		
16-11	132-18113-01	COVER, pedal change	1		
16-12	91103-06020	BOLT	1		


Fig. 17 KICK STARTER

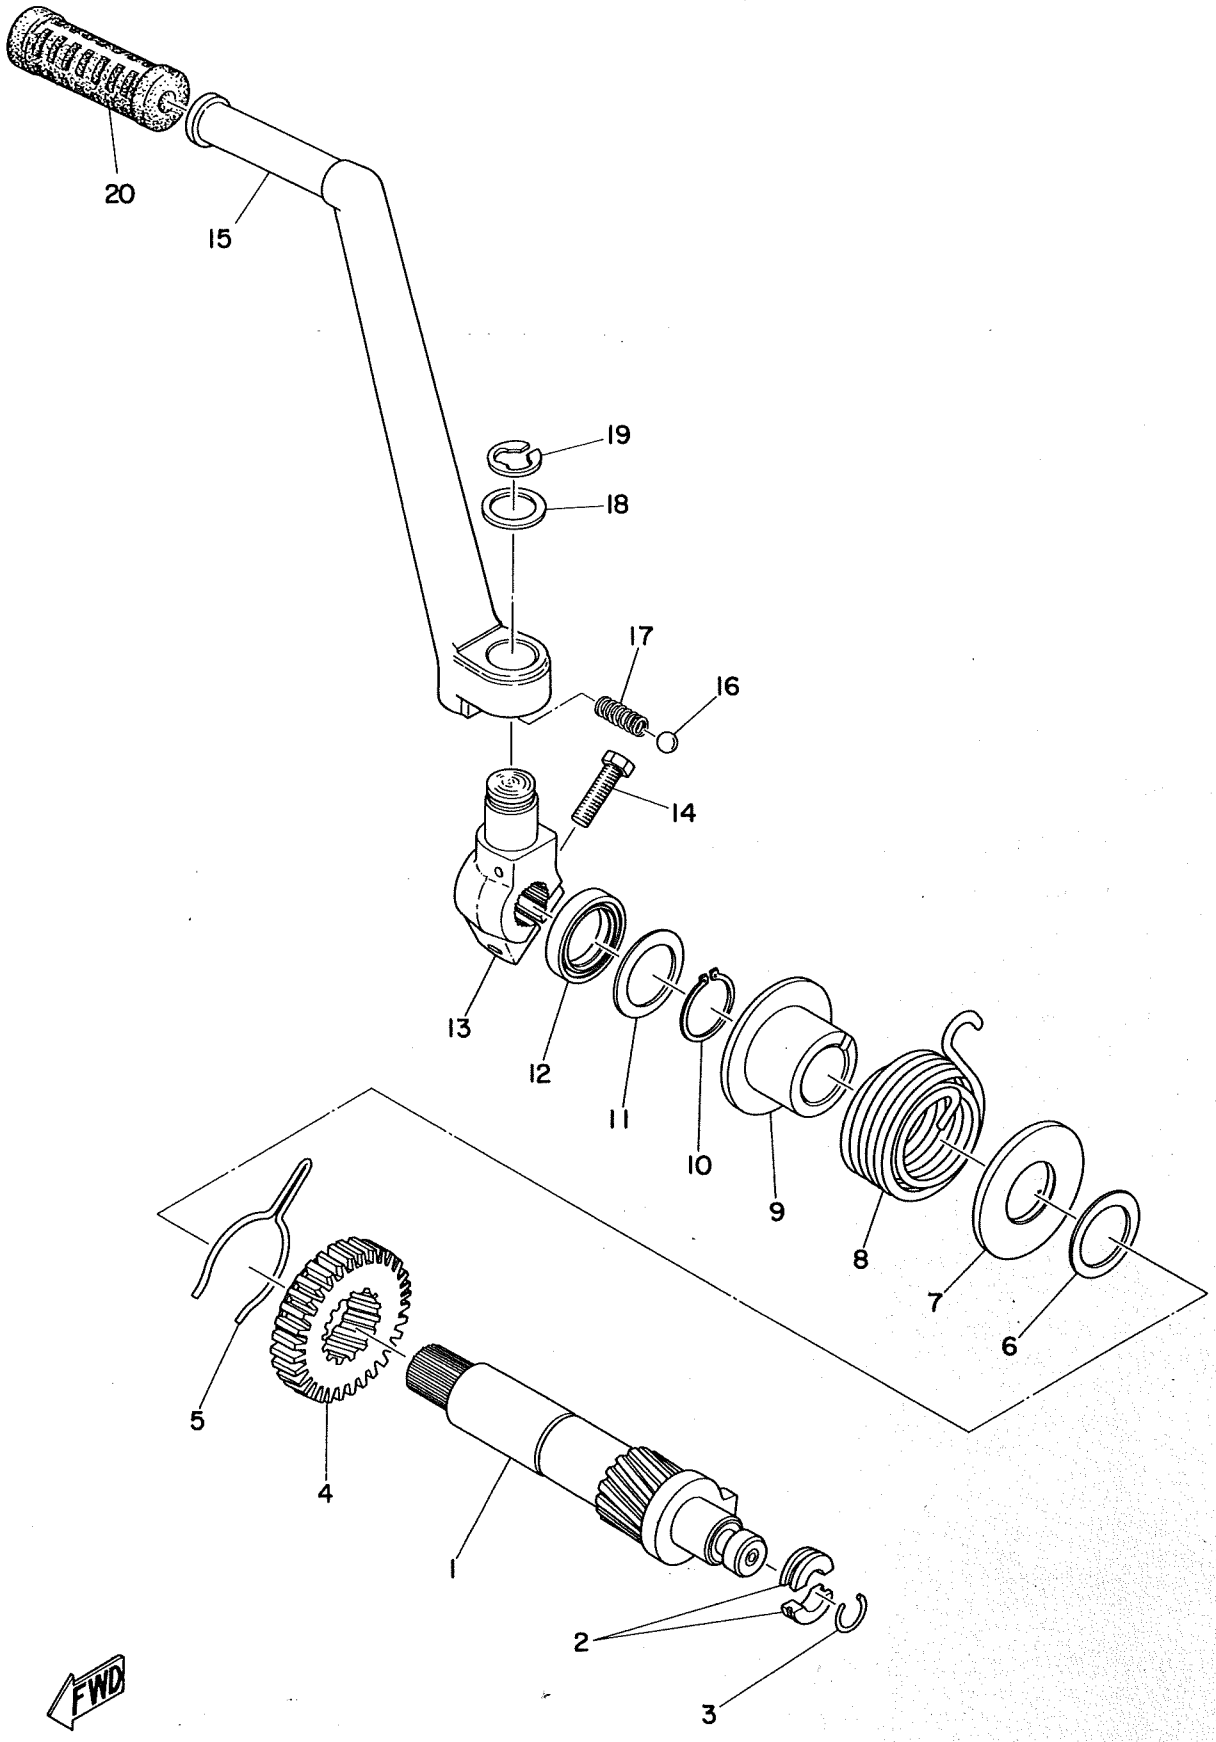

KICK STARTER

Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
17- 1	256-15660-02	KICK AXLE ASS'Y	1		
17- 2	256-15654-00	HOLDER	2		
17- 3	256-15673-00	CLIP	1		
17- 4	306-15641-00	GEAR, kick (25T)	1		
17- 5	256-15687-00	CLIP, kick	1		
17- 6	611-45567-00-05	SHIM (25.5-35-0.5)	1		
17- 7	256-15666-00	SPACER (25.4-53-4)	2		
17- 8	256-15665-00	SPRING, kick	1		
17- 9	256-15664-01	GUIDE, spring	1		
17-10	93410-25017	CIRCLIP (S-25)	1		
17-11	131-15653-00	SHIM (25.2-36-1.0)	2		
17-12	93102-25064	OIL SEAL (SD-25-35-7)	1		
17-13	341-15621-00	BOSS, kick crank	1		
17-14	97101-08030	BOLT	1		
17-15	341-15611-00-93	CRANK, kick	1		
17-16	93505-16006	BALL (5/16 inch)	1		
17-17	168-15622-01	SPRING, boss stopper	1		
17-18	256-15615-00	WASHER	1		
17-19	93430-12022	CIRCLIP (E-12)	1		
17-20	214-15618-00	COVER, kick lever	1		


Fig. 18 CRANKCASE

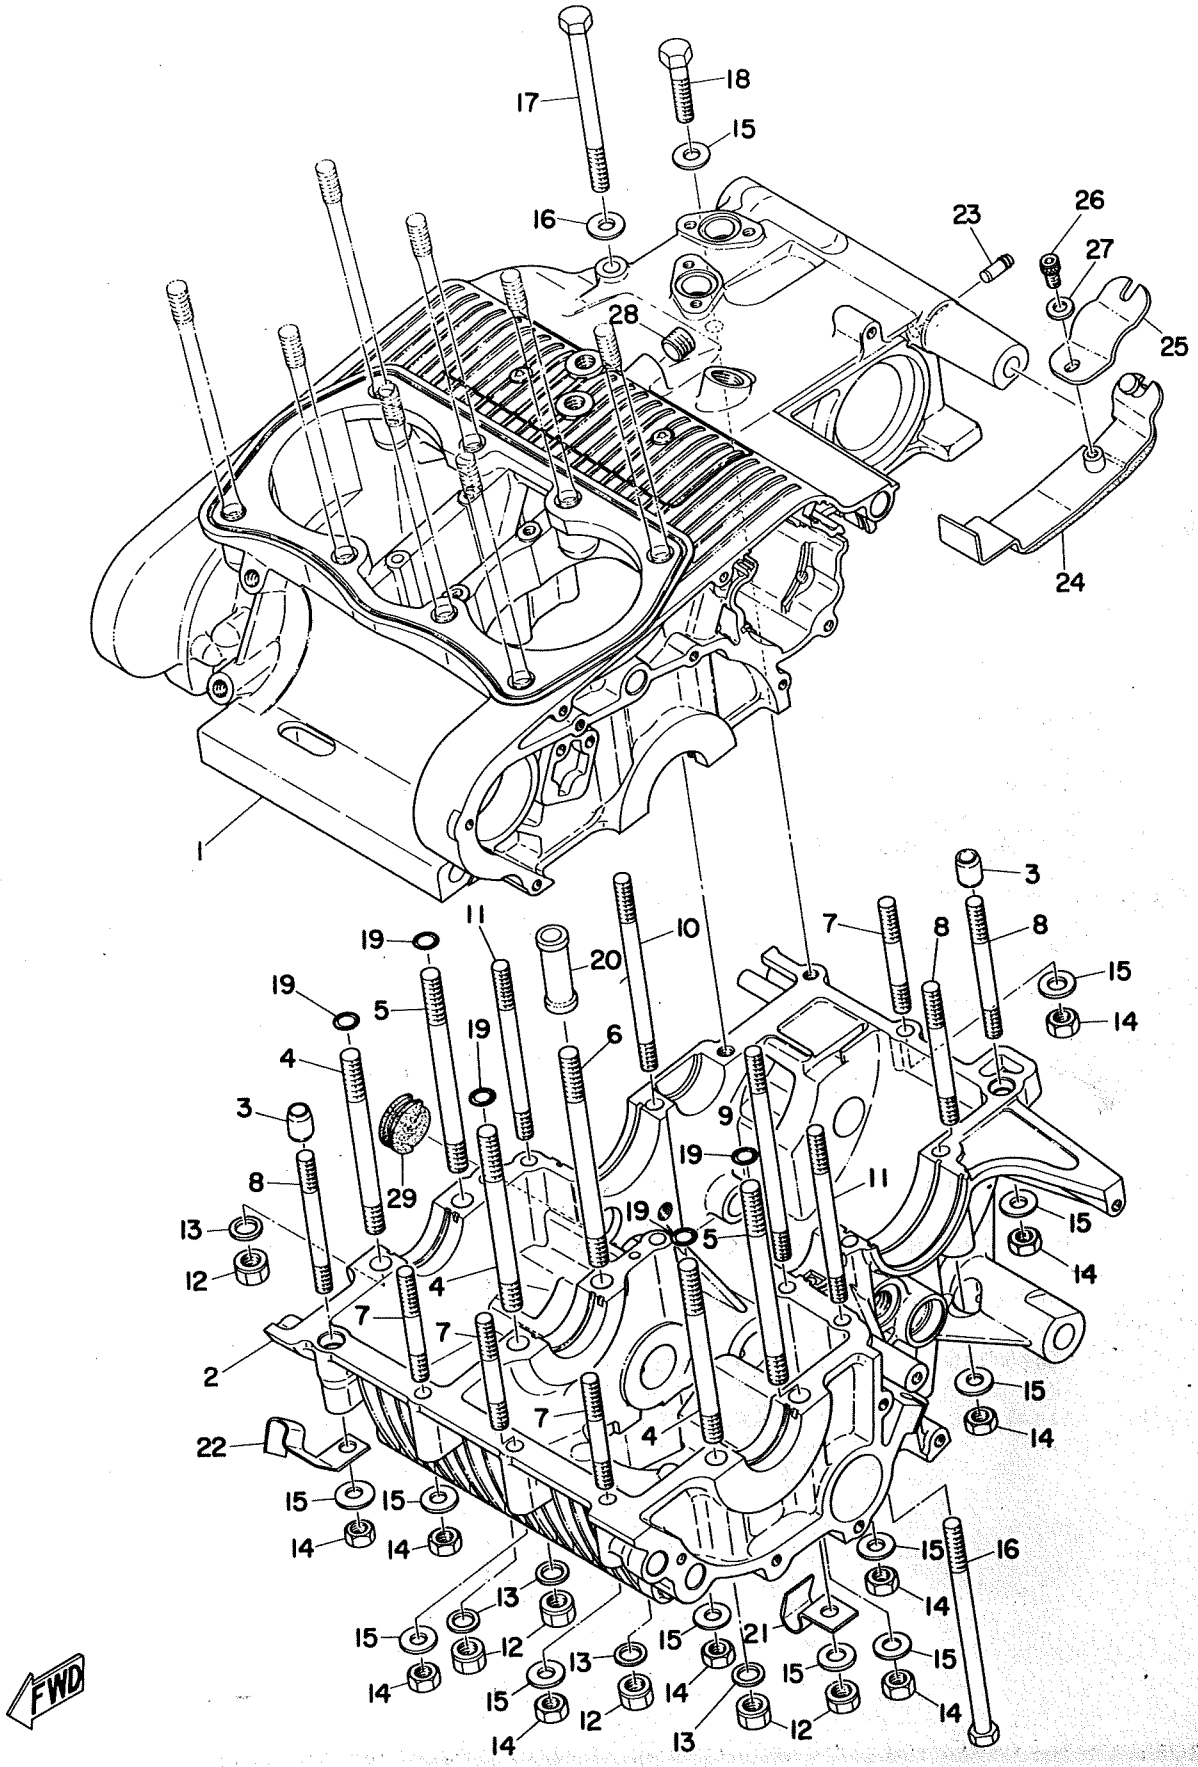

CRANKCASE


Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
18- 0-1	341-15100-14	CRANKCASE ASS'Y	1		
18- 1	341-15111-05	. CASE, crank upper	1		Not for sale
18- 2	341-15121-12	. CASE, crank lower	1		Not for sale
18- 3	91810-05016	. PIN, dowel (8.4-12-16)	2		
18- 4	341-15192-00	BOLT, crankcase stud 1 (10-119) ..	3		
18- 5	341-15193-00	BOLT, crankcase stud 2 (10-131) ..	2		
18- 6	341-15194-00	BOLT, crankcase stud 3 (10-141) ..	1		
18- 7	341-15195-00	BOLT, crankcase stud 4 (8-72) ...	4		
18- 8	276-11361-00	BOLT, cylinder holding (8-90) ...	3		
18- 9	341-15197-00	BOLT, crankcase stud 6 (8-139) ...	1		
18-10	341-15198-00	BOLT, crankcase stud 7 (8-129) ...	2		
18-11	256-15194-00	BOLT, crankcase stud 3 (8-116) ...	2		
18-12	341-15157-00	NUT	6		
18-13	256-11174-00	WASHER, holding (10.2-22-3.2) ...	5		
18-14	98803-08200	NUT	18		
18-15	92901-08200	WASHER, plain	19		
18-16	97103-08140	BOLT	1		
18-17	97101-08110	BOLT	1		
18-18	97101-08040	BOLT	1		
18-19	93210-09192	O-RING (1.0-9)	5		
18-20	341-15337-00	COLLAR	1		
18-21	341-81838-00	CLAMP 1	1		
18-22	341-81839-00	CLAMP 2	2		


Fig. 18 CRANKCASE

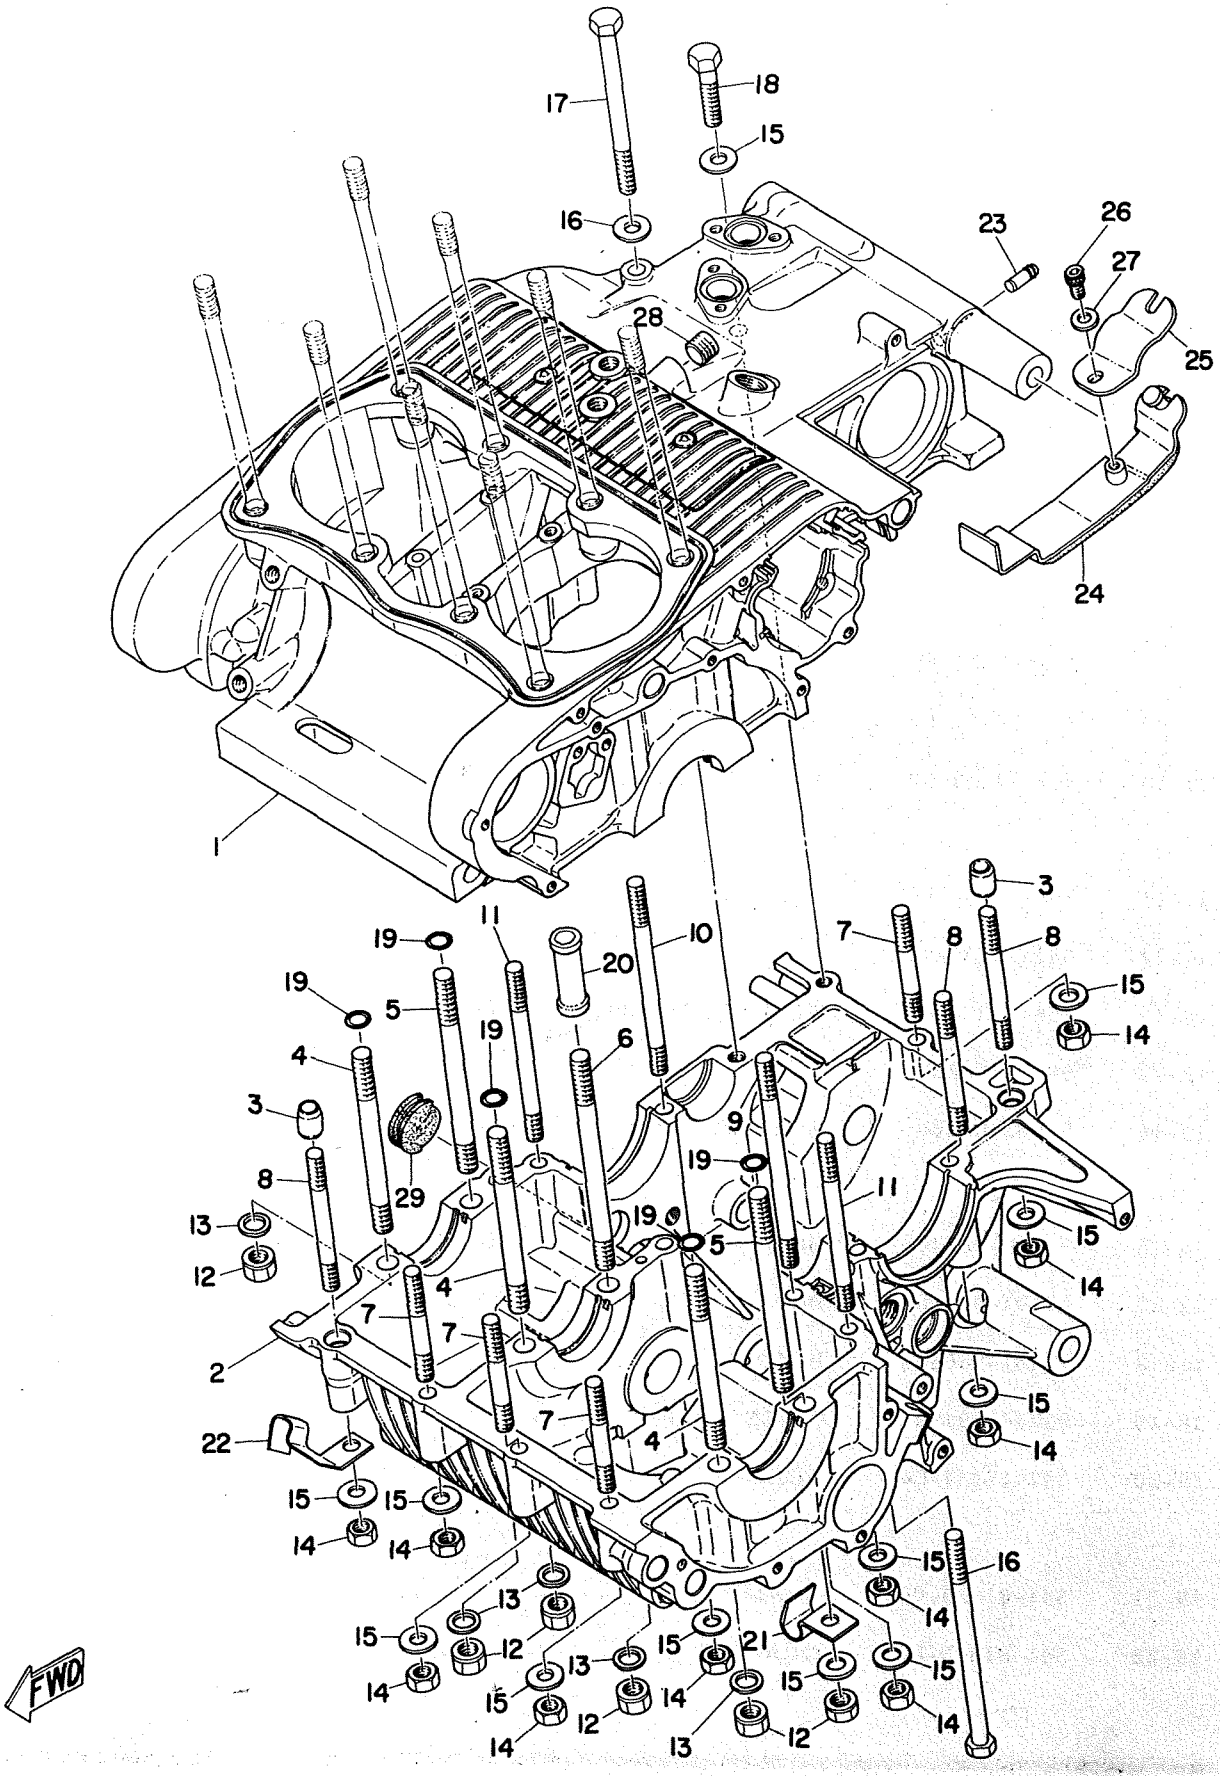

Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
18-23	341-13115-10	CONNECTOR, suction pipe	1		
18-24	341-17466-00	GUIDE, chain	1		
18-25	341-17467-00	BAND	1		
18-26	91316-06010	BOLT	1		
18-27	92901-06200	WASHER, plain	1		
18-28	90344-52001	PLUG, taper screw	1		include in Crankcase
18-29	90338-23001	PLUG	1		

Fig. 19 CRANKCASE COVER LEFT

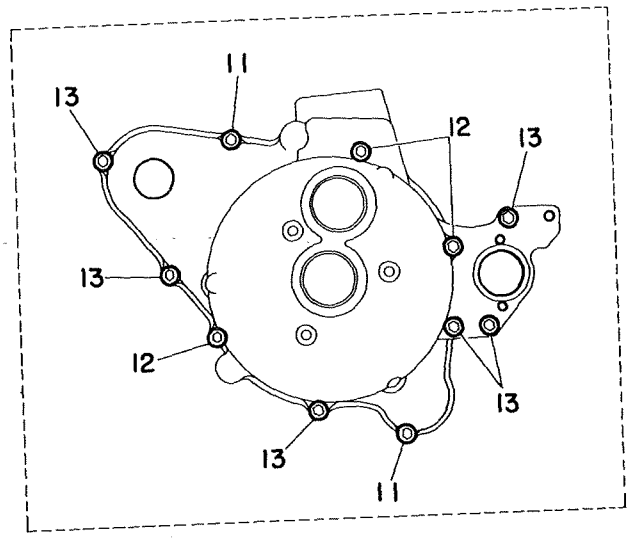


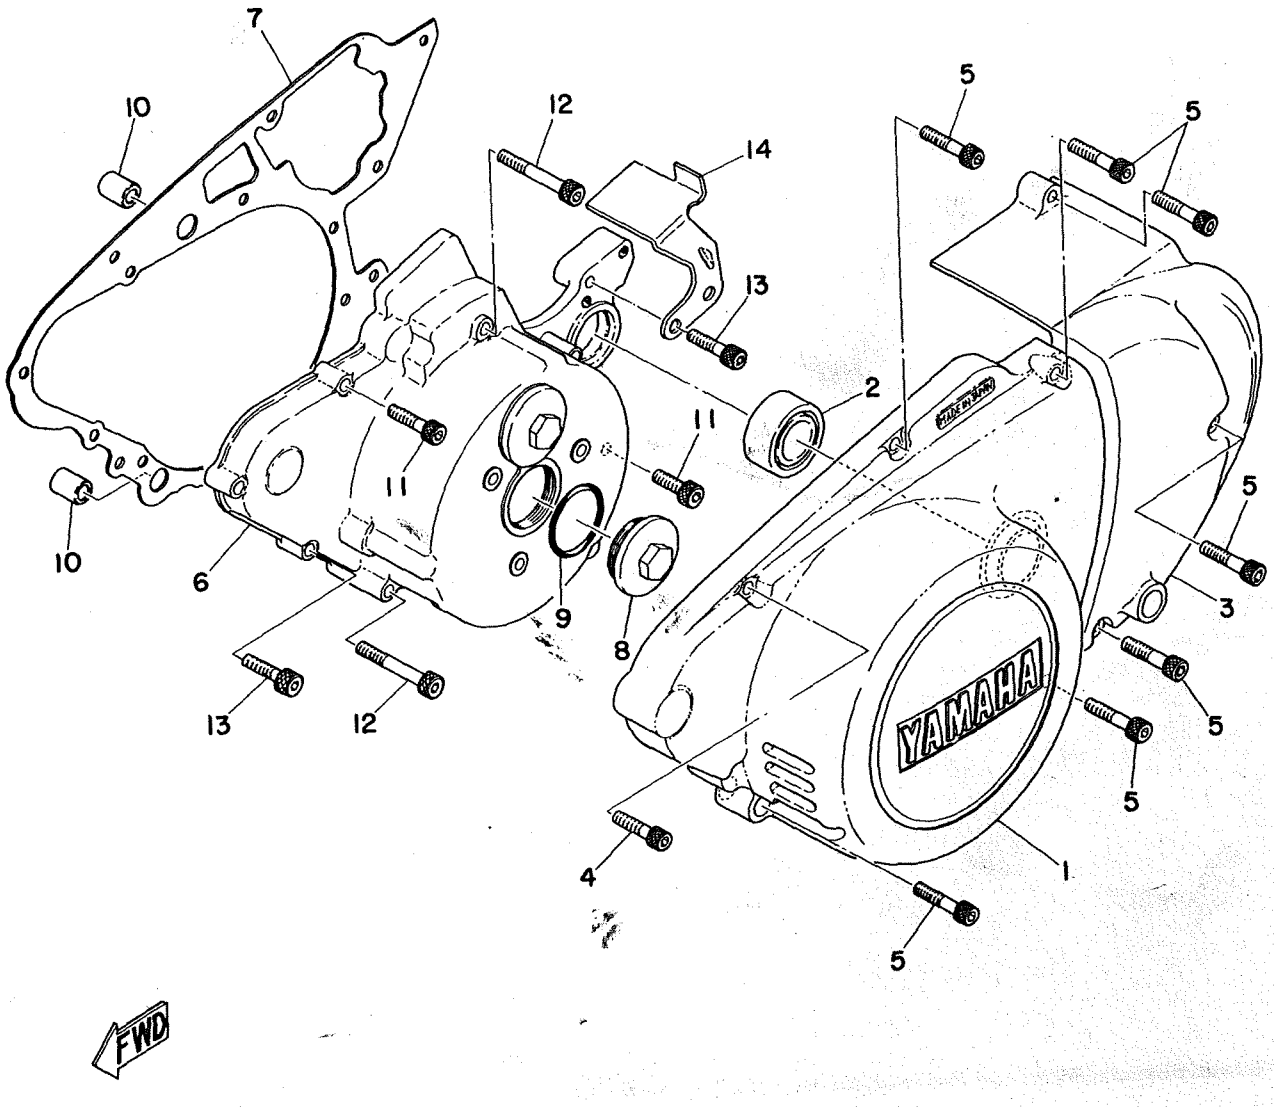

CRANKCASE COVER LEFT

Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
19- 1	341-15411-01	COVER, crankcase left 1	1		
19- 2	341-15474-00	SEAL, dust	1		
19- 3	341-15421-01	COVER, crankcase left 2	1		
19- 4	91316-06025	BOLT	1		
19- 5	91316-06030	BOLT	7		
19- 6	341-15415-02	COVER, generator 1	1		
19- 7	341-15455-03	X GASKET, generator cover	1		
19- 8	341-15425-02	COVER, generator 2	2		
19- 9	93210-35173	O-RING (3-34.5)	2		
19-10	91810-05016	PIN, dowel (8.4-12-16)	2		
19-11	91316-06025	BOLT	2		
19-12	91316-06050	BOLT	3		
19-13	91316-06030	BOLT	6		
19-14	341-81614-04	PROTECTOR	1		


Fig. 20 CRANKCASE COVER RIGHT

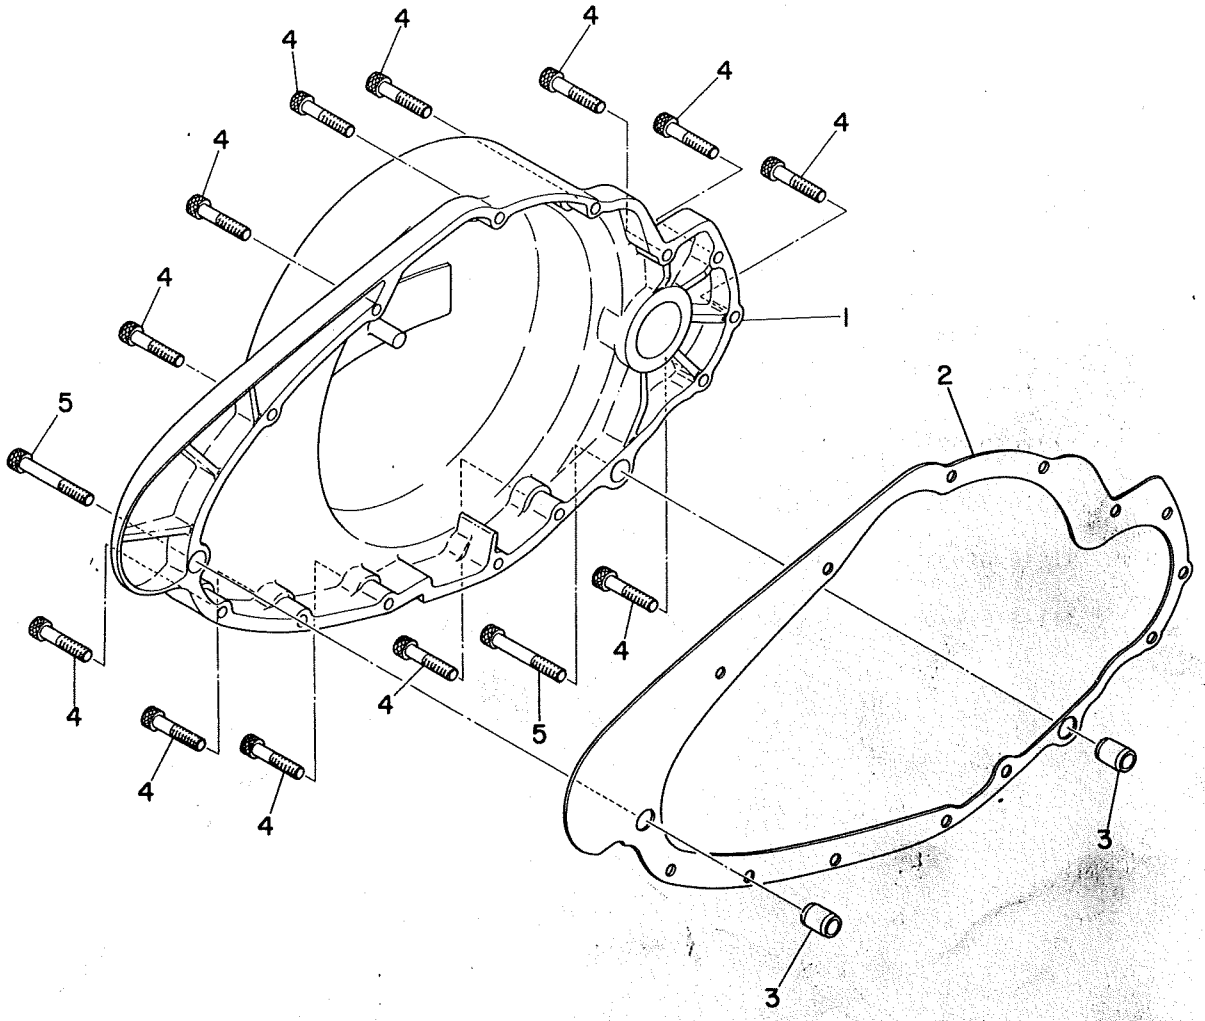

CRANKCASE COVER RIGHT

Ref. No.	Parts No.		Description	Q'ty	Applicable Machine No.	Remarks
20- 1	341-15431-00		COVER, crankcase right	1		
20- 2	341-15451-01	X	GASKET, crankcase cover right ...	1		
20- 3	91810-05016		PIN, dowel (9.8-12-16)	2		
20- 4	91316-06030		BOLT	13		
20- 5	91316-06045		BOLT	2		


Fig. 21 INTAKE

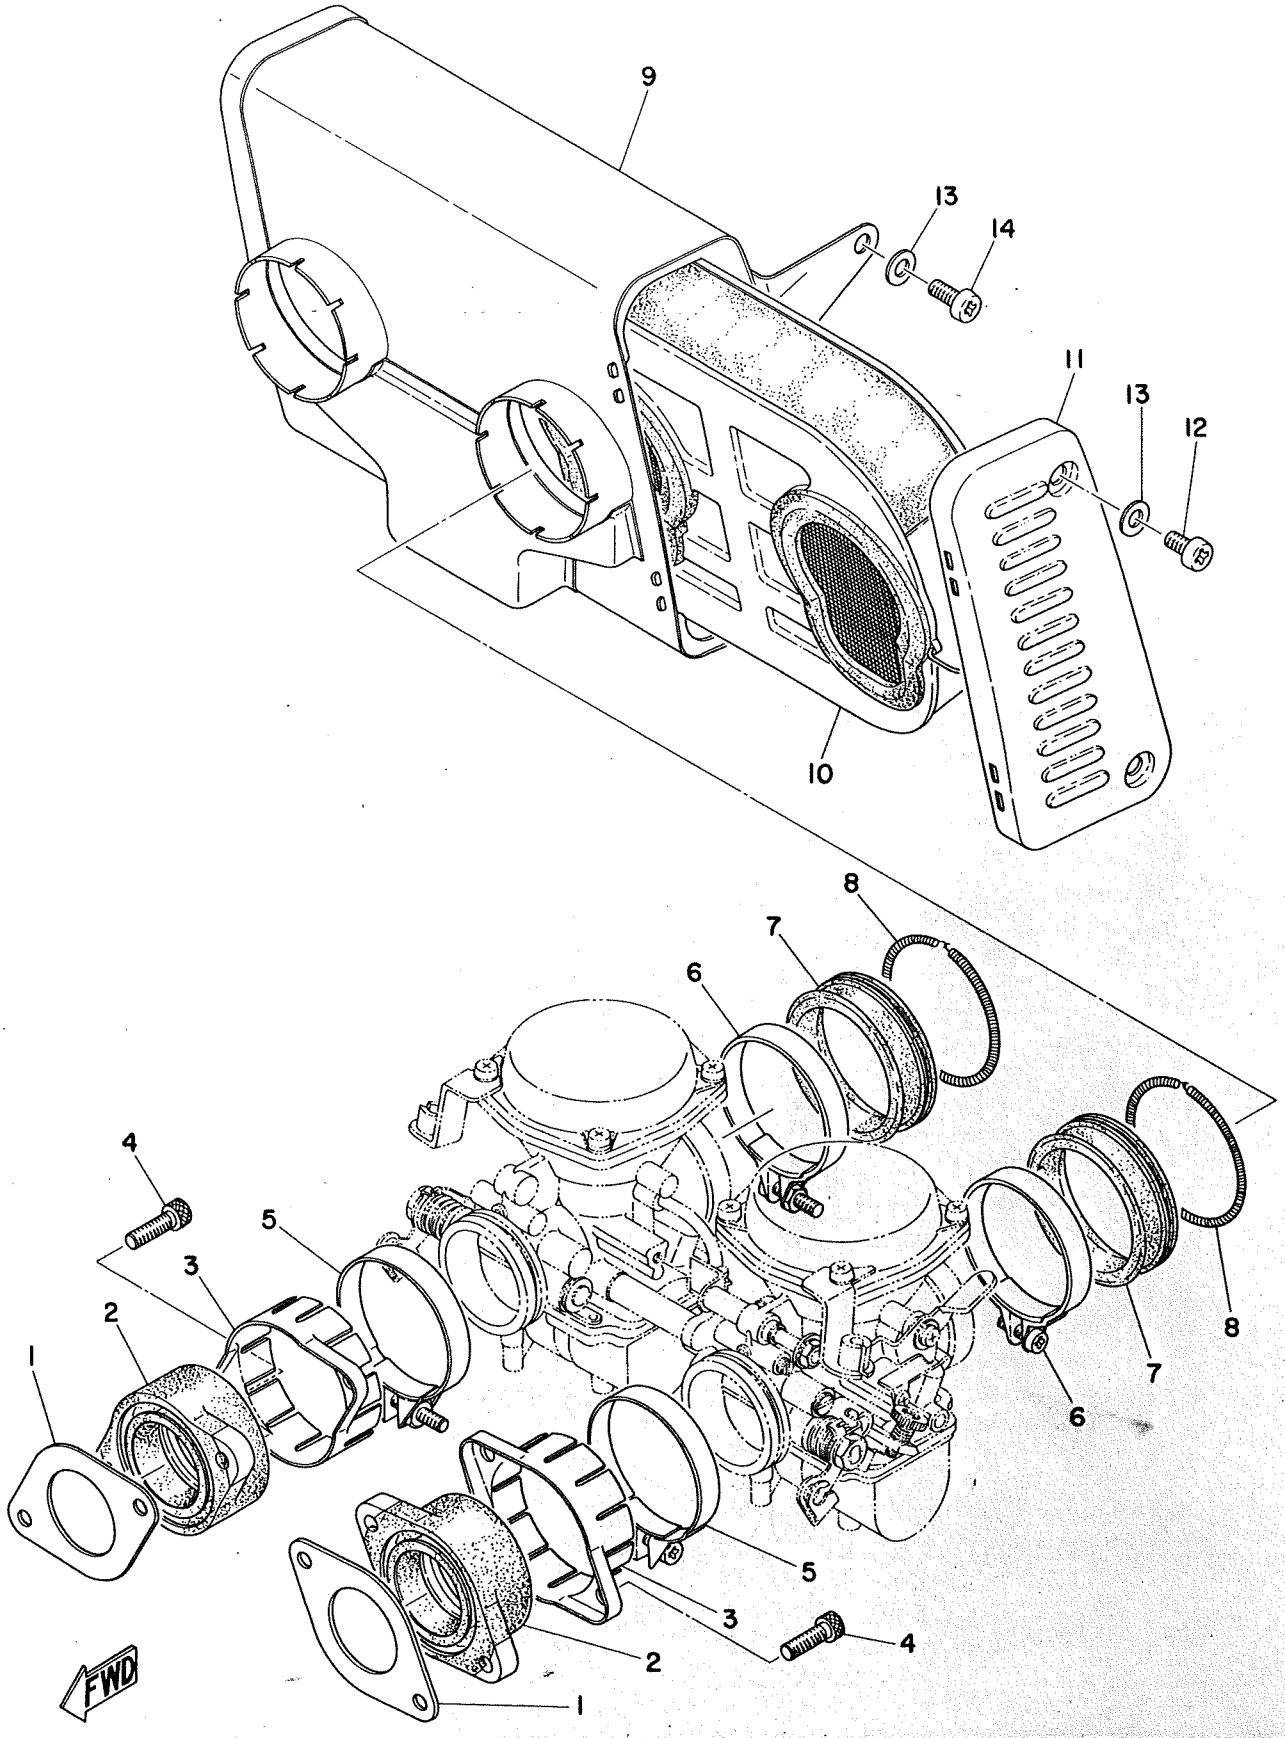

INTAKE

Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
21- 1	256-13556-00	✕ GASKET, joint	2		
21- 2	341-13565-00	JOINT, carburetor	2		
21- 3	256-13564-00	COVER, joint	2		
21- 4	91316-06020	BOLT	4		
21- 5	256-14456-00	BAND	2		
21- 6	256-14455-00	BAND	2		
21- 7	341-14453-00	JOINT, cleaner	2		
21- 8	256-14487-00	SPRING	2		
21- 9	341-14411-10-98	CASE, air cleaner	1		Frosting Black
21-10	341-14451-02	ELEMENT	1		
21-11	341-14422-01-98	CAP, case	1		Frosting Black
21-12	92502-06008	SCREW, panhead	2		
21-13	92901-06200	WASHER, plain	4		
21-14	92501-06012	SCREW, panhead	2		


Fig. 22 CARBURETOR

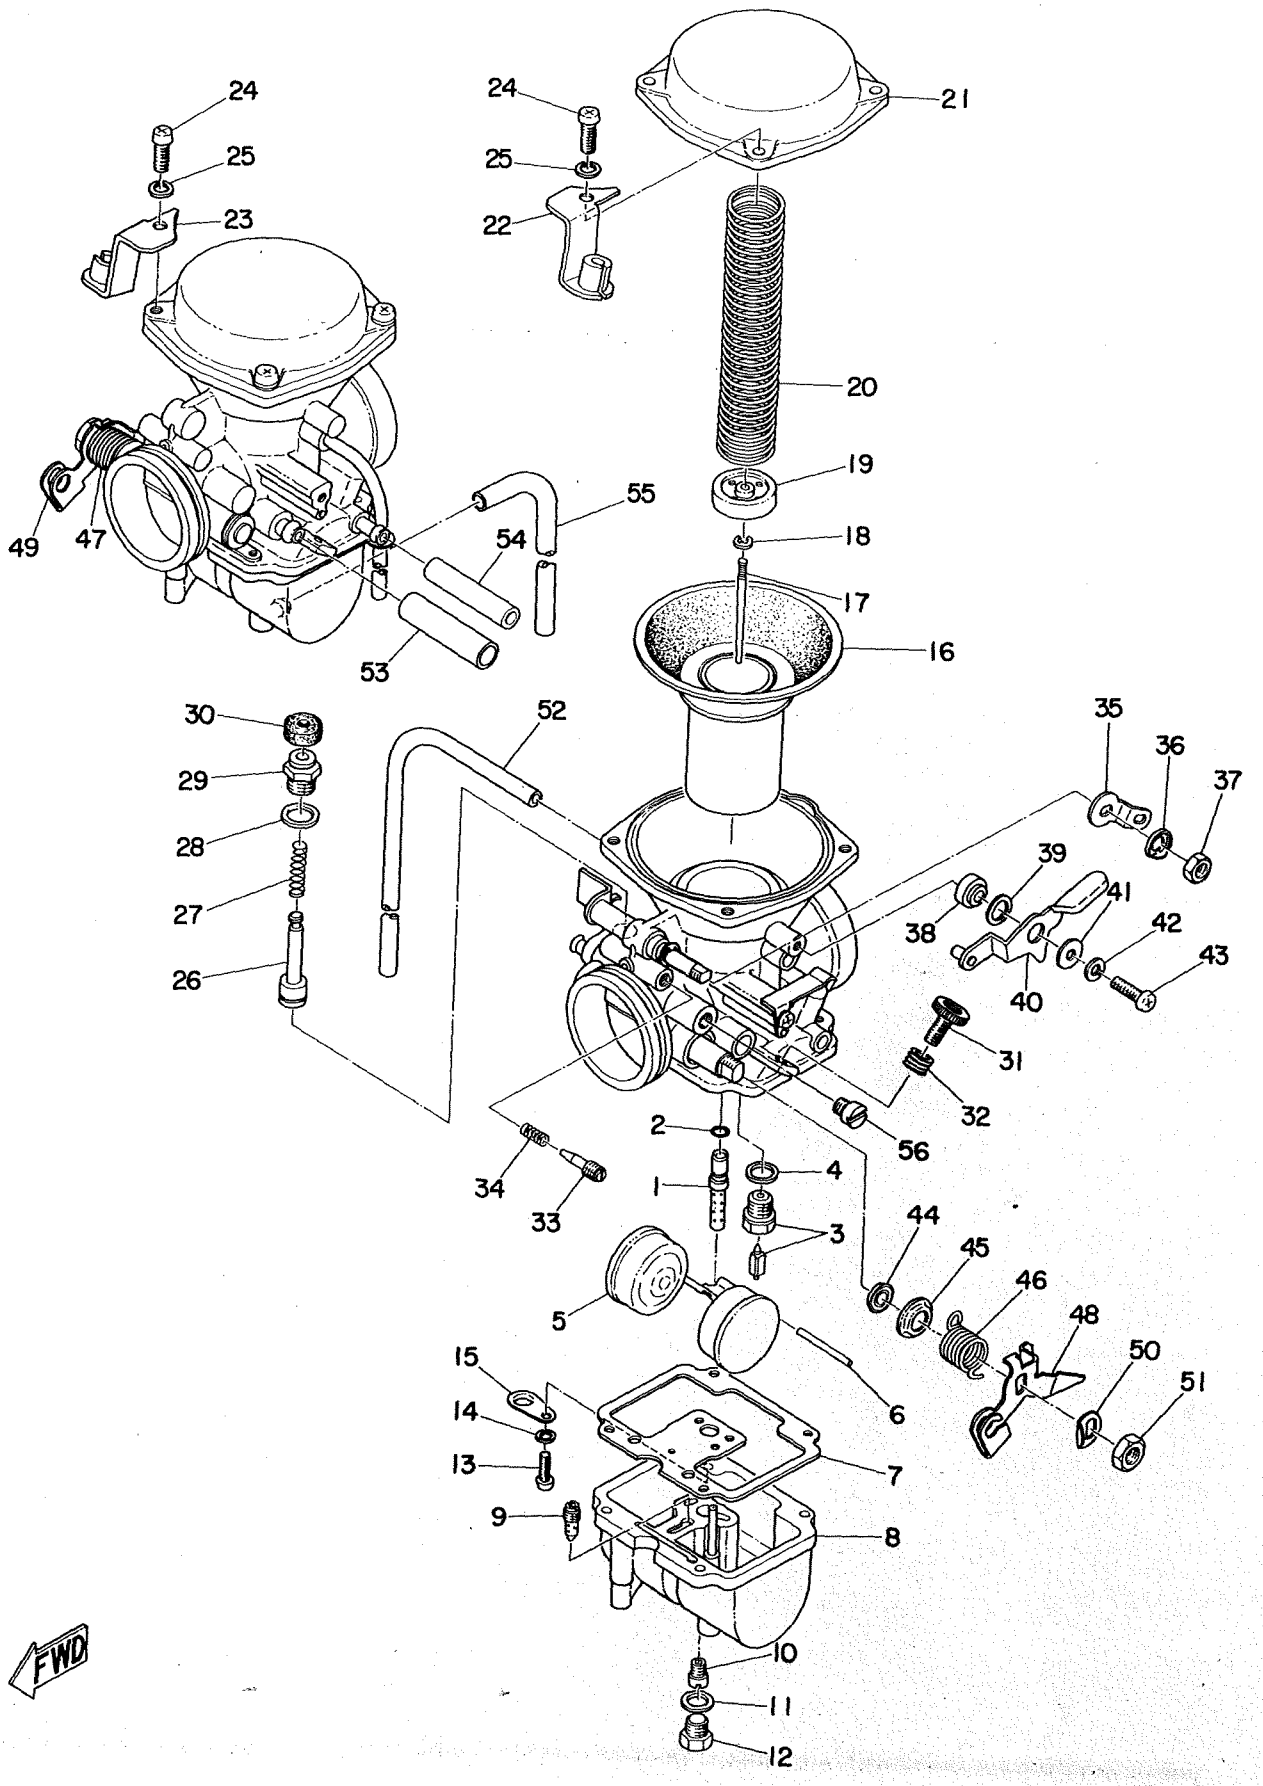

CARBURETOR


Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
22- 0-1	341-14901-04	CARBURETOR ASS'Y, left	1		
22- 0-2	341-14902-04	CARBURETOR ASS'Y, right	1		
22- 1	341-14941-86	. NOZZLE, main (Z-6)	2		
22- 2	93210-03142	. O-RING	2		
22- 3	168-14190-20	. VALVE SEAT ASS'Y (#2.0) ...	2		
22- 4	214-14195-00	. WASHER	2		
22- 5	256-14985-00	. FLOAT	2		
22- 6	137-14186-00	. PIN, float	2		
22- 7	256-14984-00	. PACKING float chamber	2		
22- 8	341-14981-00	. BODY, float chamber	2		
22- 9	256-14942-45	. JET, pilot (#45)	2		
22-10	256-14944-24	. JET, main (#120)	2		
	256-14944-26	. JET, main (#130)	2		STD
	256-14944-28	. JET, main (#140)	2		
22-11	256-14956-01	. WASHER	2		
22-12	256-14991-00	. SCREW, plug	2		
22-13	98501-04012	. SCREW, roundhead	8		
22-14	92901-04100	. WASHER, spring	8		
22-15	306-14146-00	. PLATE	2		
22-16	306-14940-00	. DIAPHRAGM ASS'Y	2		
22-17	341-14916-08	. NEEDLE (4N08-3)	2		
22-18	256-14919-00	. CLIP	2		
22-19	256-14946-00	. PLATE, set needle	2		
22-20	341-14933-00	. SPRING, diaphragm	2		

Fig. 22 CARBURETOR

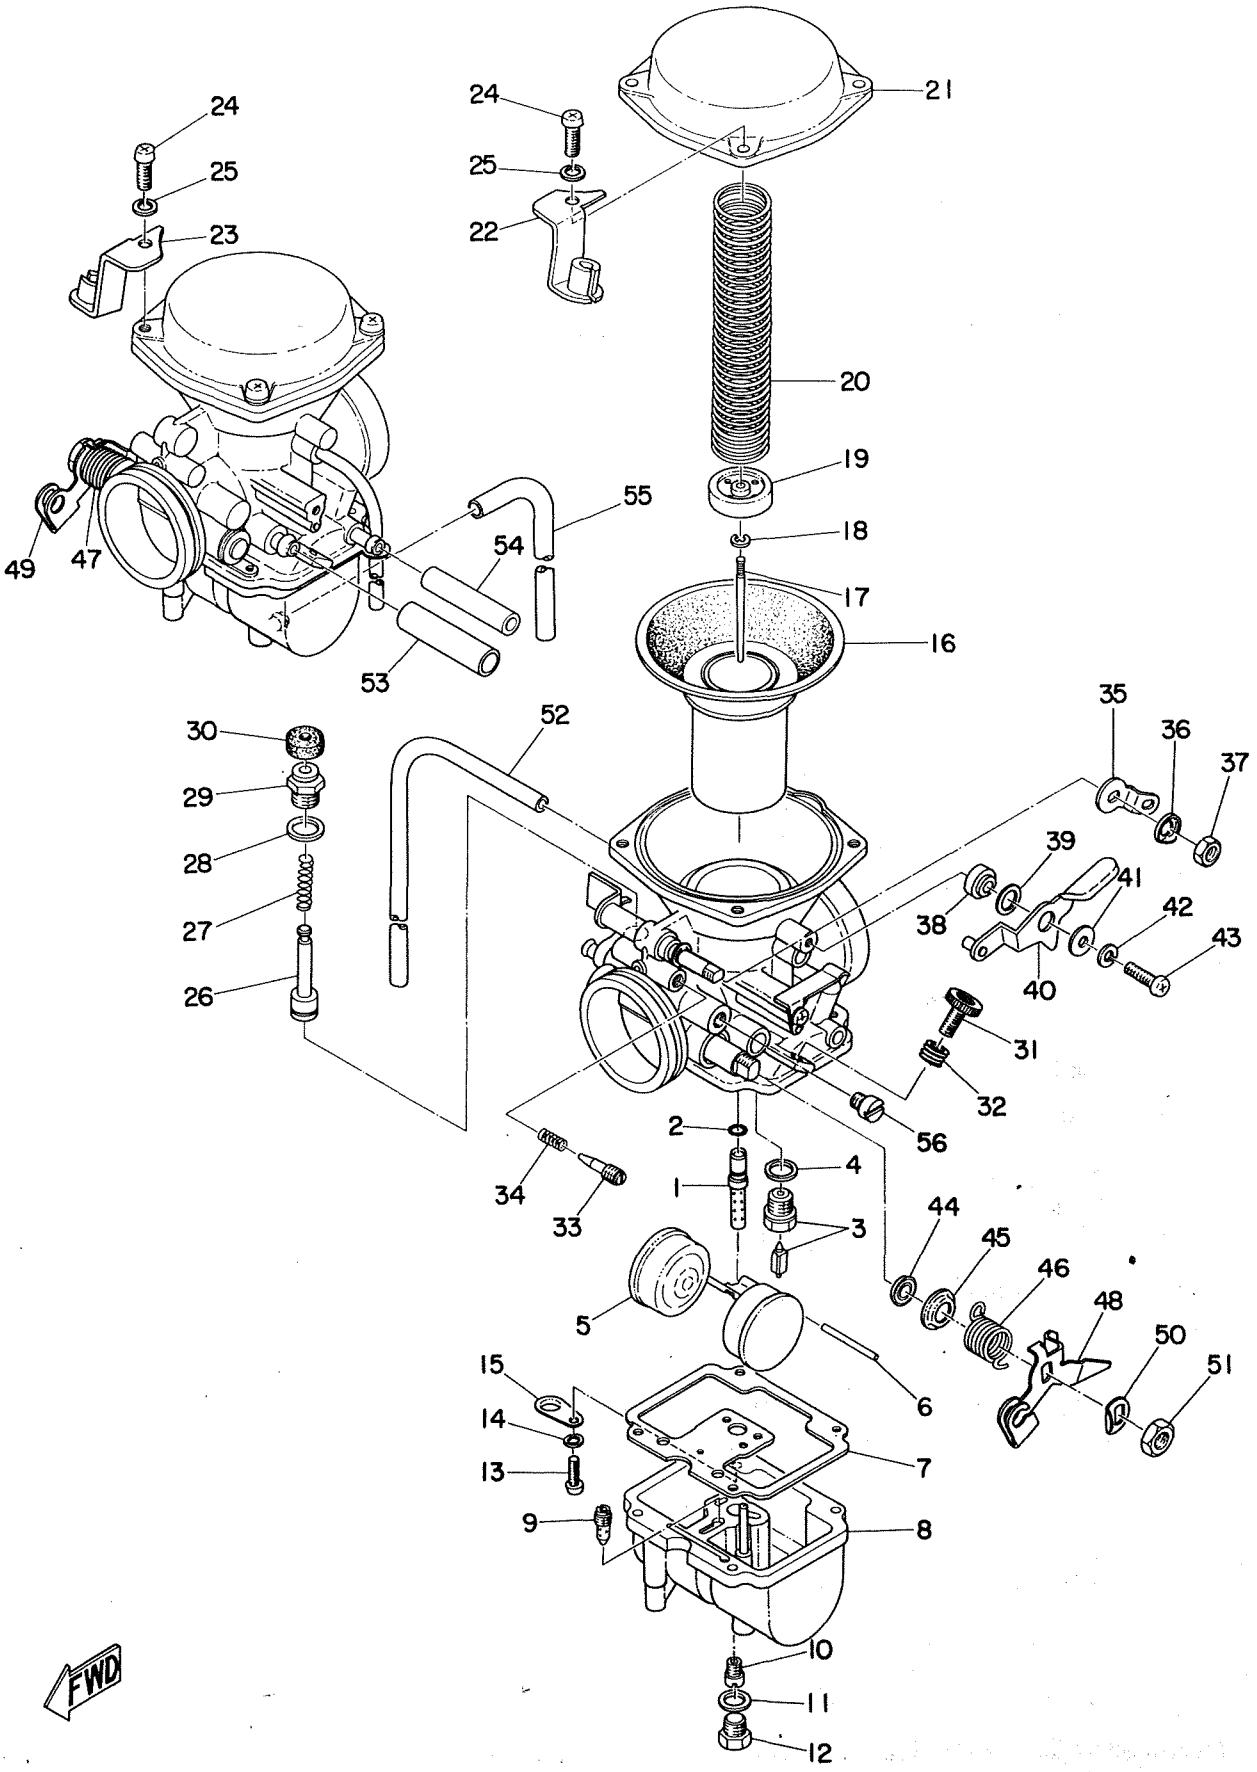


Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
22-21	256-14958-00	. COVER, diaphragm	2		
22-22	341-14926-00	. BRACKET THROTTLE ASS'Y, left	1		
22-23	341-14927-00	. BRACKET THROTTLE ASS'Y, right	1		
22-24	98501-05014	. SCREW, roundhead	8		
22-25	92901-05100	. WASHER, spring	8		
22-26	306-14171-01	. PLUNGER, starter	1		
22-27	256-14135-00	. SPRING, plunger	1		
22-28	306-14954-00	. WASHER	1		
22-29	306-14174-00	. CAP, plunger	1		
22-30	306-14173-00	. COVER, plunger cap	1		
22-31	341-14922-00	. SCREW, throttle stop	2		
22-32	256-14934-01	. SPRING, throttle stop	2		
22-33	256-14923-00	. SCREW, pilot	2		
22-34	127-14134-00	. SPRING, pilot screw	2		
22-35	306-14975-00	. LEVER, starter	1		
22-36	256-14973-00	. WASHER	1		
22-37	92801-10300	. NUT	1		
22-38	256-14918-00	. RING	1		
22-39	256-14955-00	. WASHER	1		
22-40	306-14905-00	. LEVER ASS'Y	1		
22-41	256-14952-00	. WASHER	1		
22-42	92901-04100	. WASHER	1		

Fig. 22 CARBURETOR

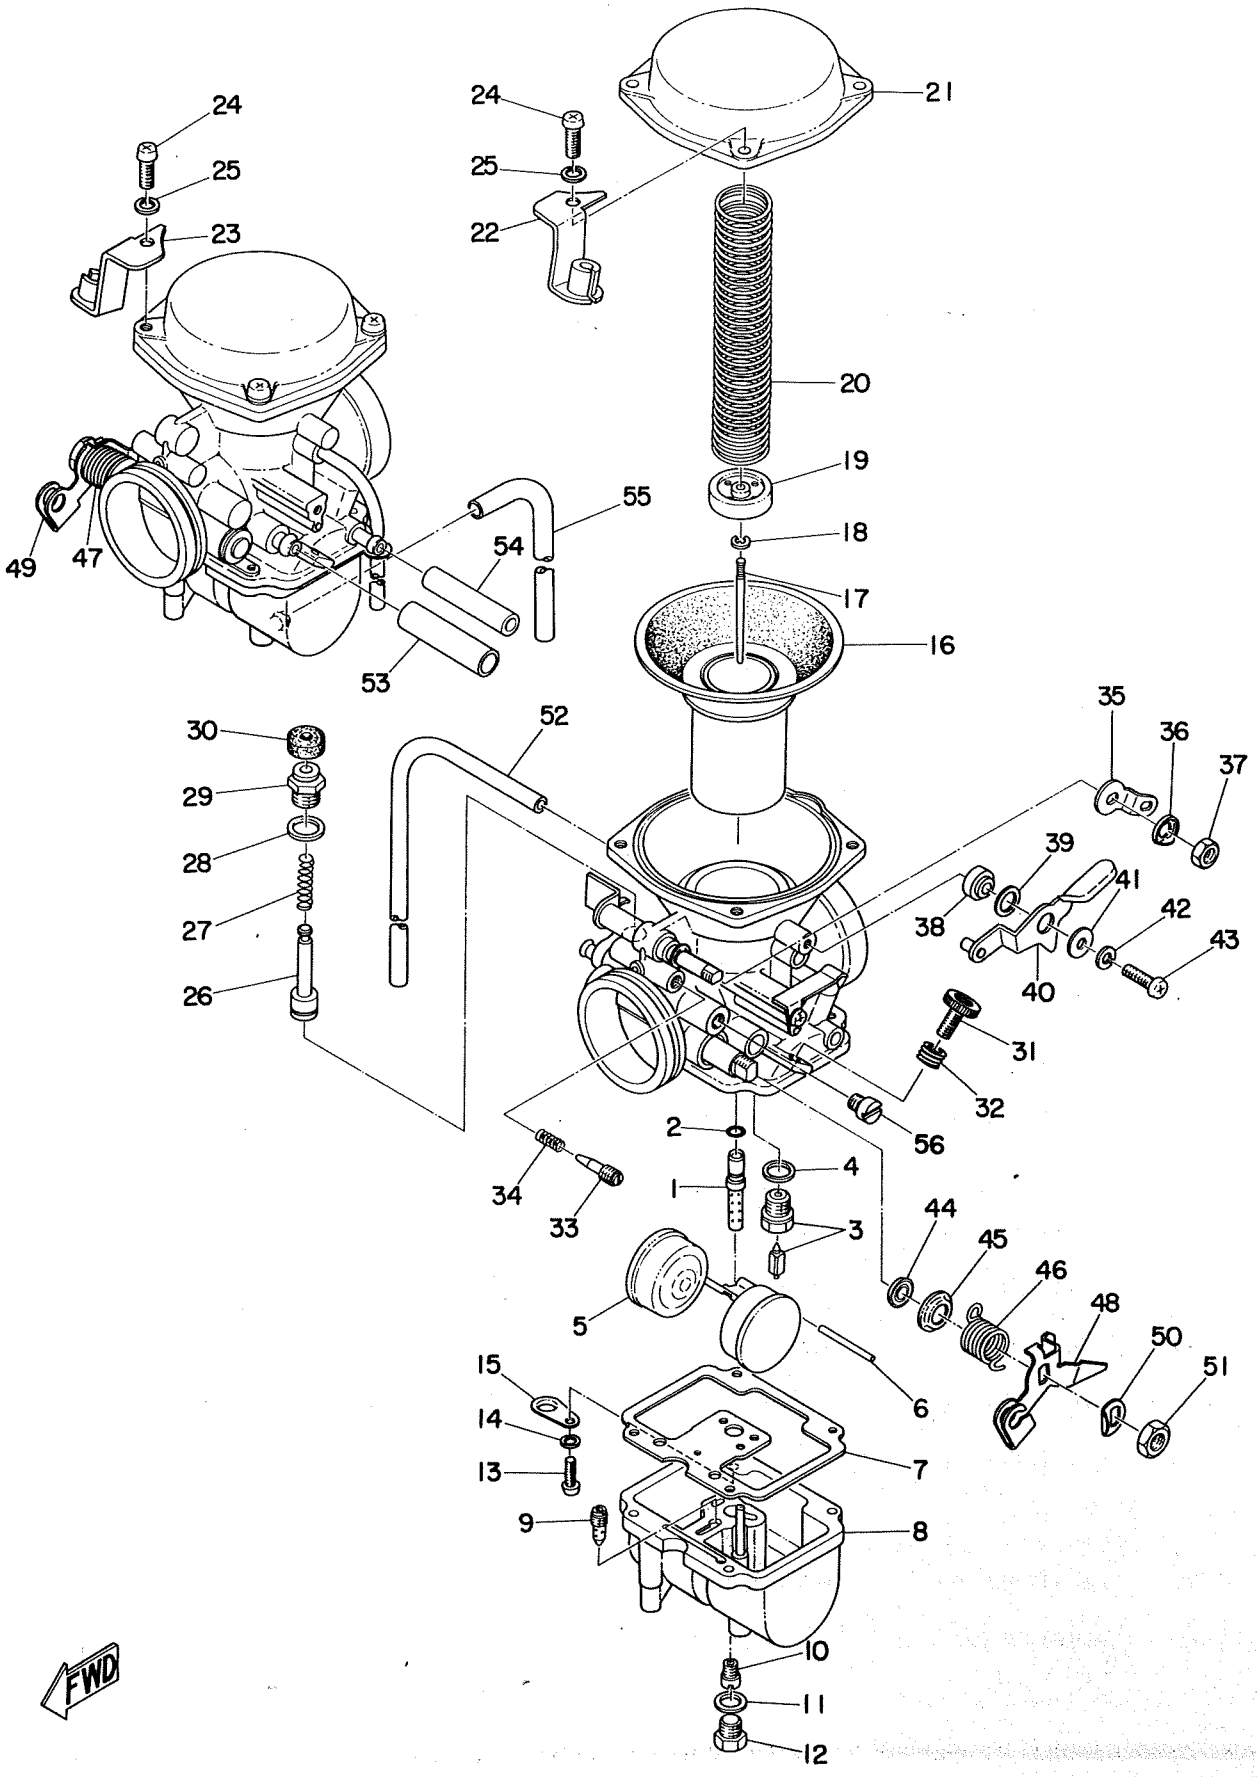

Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
22-43	98501-04012	. SCREW, roundhead	1		
22-44	256-14997-00	. SEAL	4		
22-45	306-14969-00	. CAP	2		
22-46	306-14931-00	. SPRING, throttle left	1		
22-47	306-14932-00	. SPRING, throttle right	1		
22-48	341-14914-00	. LEVER, throttle left	1		
22-49	341-14915-00	. LEVER, throttle right	1		
22-50	256-14953-00	. WASHER	2		
22-51	98801-12200	. NUT	2		
22-52	256-14197-01	. PIPE, over flow	2		
22-53	256-14988-00	. HOSE	1		
22-54	341-14988-00	. HOSE	1		
22-55	256-14987-00	. HOSE	2		
22-56	341-14991-00	. PLUG	2		

Fig. 23 EXHAUST

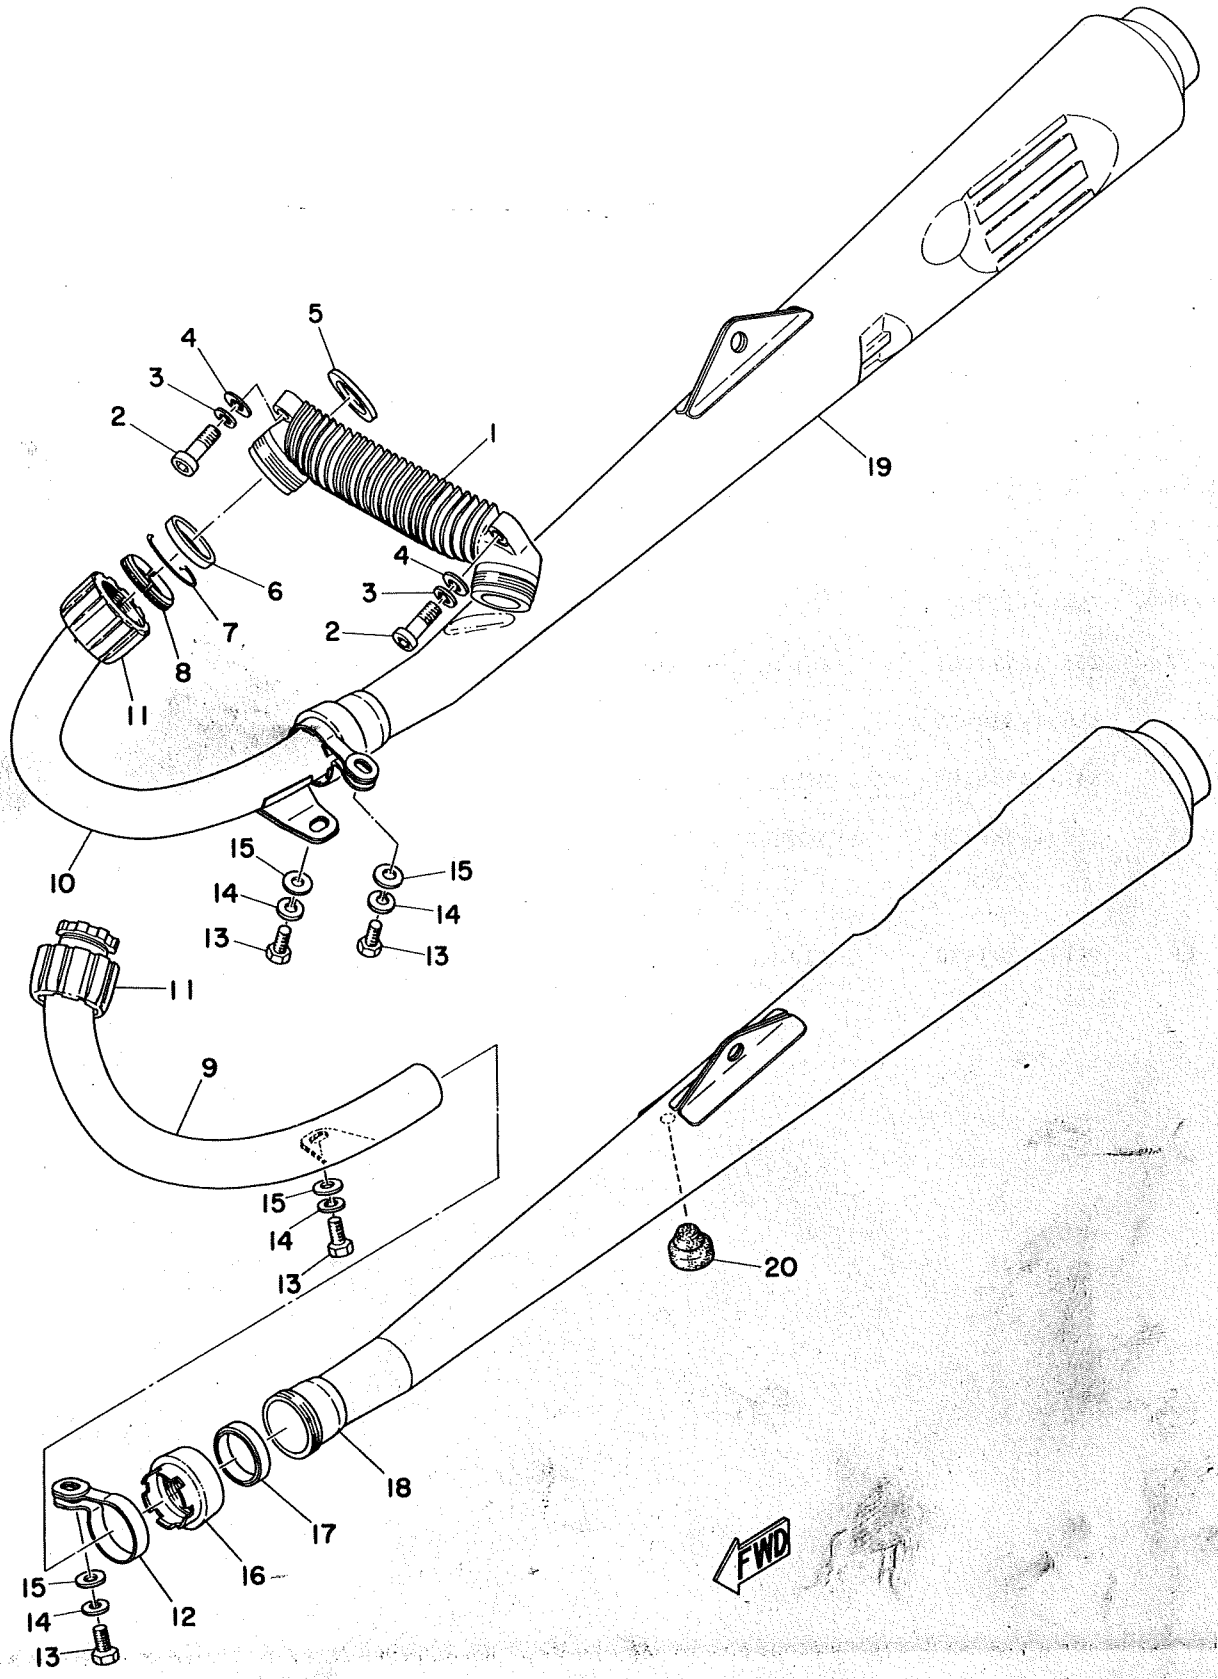

EXHAUST

Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
23- 1	341-14615-01	JOINT, exhaust	1		
23- 2	341-11398-00	BOLT	4		
23- 3	92903-10100	WASHER, spring	4		
23- 4	92903-10200	WASHER, plain	4		
23- 5	341-14623-00	GASKET, exhaust 2	2		
23- 6	341-14613-00	GASKET, exhaust 1	2		
23- 7	341-14624-00	CLIP, ring stopper	2		
23- 8	341-14618-01	RING, stopper	4		
23- 9	341-14611-01	PIPE, exhaust left	1		
23-10	341-14621-01	PIPE, exhaust right	1		
23-11	341-14612-01	NUT, ring	2		
23-12	341-14715-01	BAND, muffler	2		
23-13	91101-10020	BOLT	2		
23-14	92901-10100	WASHER, spring	2		
23-15	92901-10200	WASHER, plain	2		
23-16	341-14713-00	NUT, muffler joint	2		
23-17	341-14714-00	GASKET, muffler joint	2		
23-18	341-14711-10	MUFFLER, left	1		
23-19	341-14721-10	MUFFLER, right	1		
23-20	116-27114-00	STOPPER, main stand	1		

CHASSIS

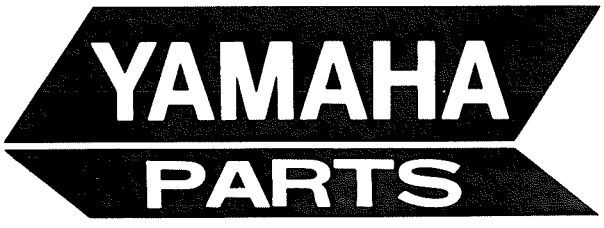
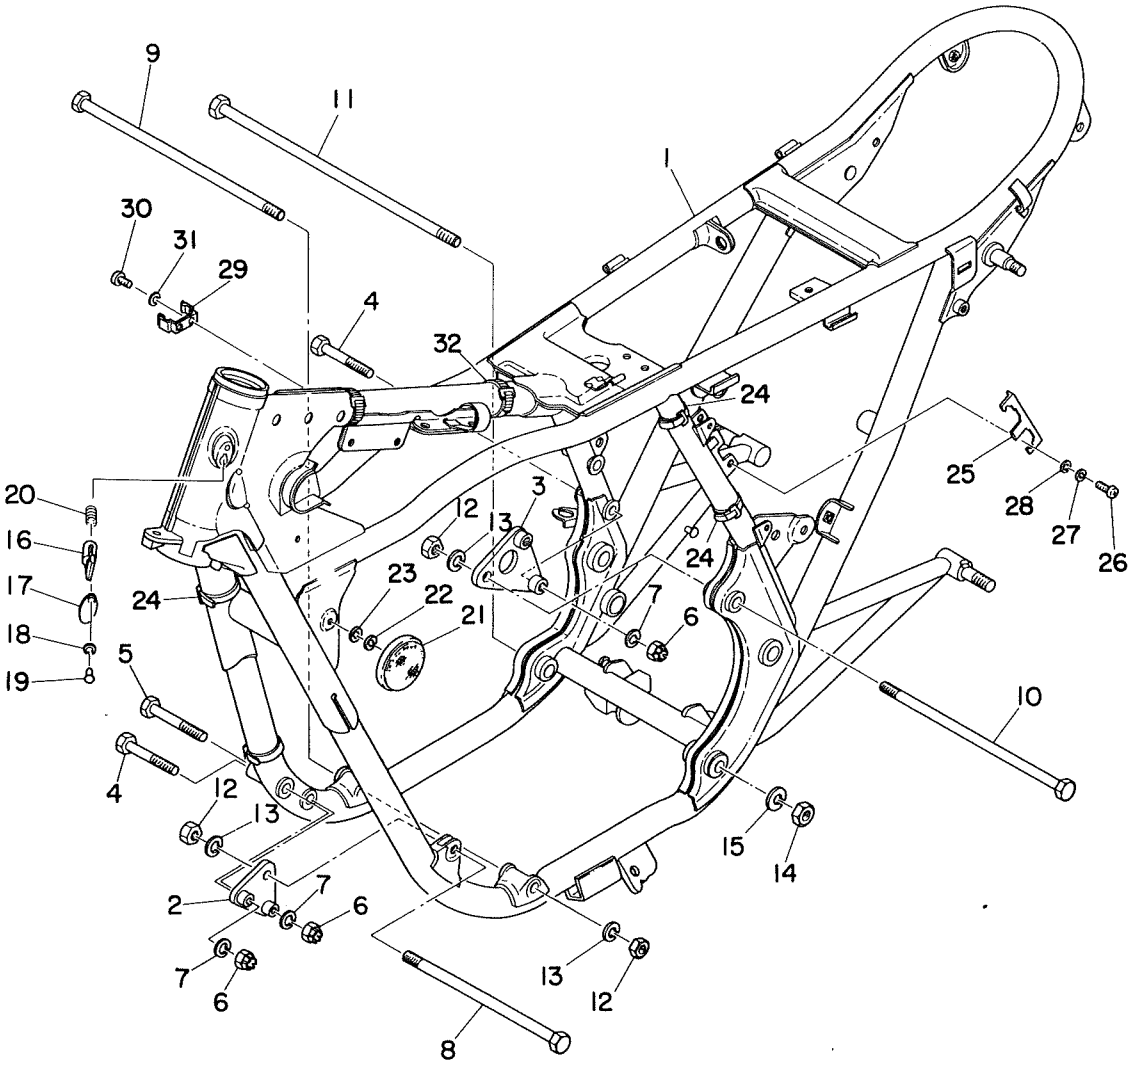



Fig. 24 FRAME


9
11
1
30
31
29
4
32
24
25
28
27
26
20
16
17
18
19
8
5
4
12
13
3
23
22
21
24
7
6
10
15
14
2
7
6
7
6
13
12
8
FWD

FRAME


Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
24- 1	341-21110-04-33	FRAME COMP.	1		Yamaha Black
24- 2	341-21416-00	BRACKET, front upper right ...	1		
24- 3	341-21425-00	BRACKET, rear upper right ...	1		
24- 4	97101-08065	BOLT	3		
24- 5	97101-08070	BOLT	1		
24- 6	183-22143-00	NUT	4		
24- 7	92901-08100	WASHER, spring	4		
24- 8	341-21481-00	BOLT, engine mounting 1 (10-208)..	1		
24- 9	341-21482-00	BOLT, engine mounting 2 (10-277)..	1		
24-10	341-21483-01	BOLT, engine mounting 3 (10-261)..	1		
24-11	341-21484-01	BOLT, engine mounting 4 (12-331)..	1		
24-12	98801-10100	NUT	3		
24-13	92901-10100	WASHER, spring	3		
24-14	98801-12100	NUT	1		
24-15	92901-12100	WASHER, spring	1		
24-16	341-23480-00	STEERING LOCK ASS'Y	1		
24-17	134-23484-10	CAP, handle lock	1		
24-18	214-23488-00	WASHER, wave	1		
24-19	214-23483-00	RIVET	1		
24-20	214-23485-00	SPRING	1		
24-21	341-85111-00	REFLECTOR	2		
24-22	92901-05100	WASHER, spring	2		
24-23	92901-05200	WASHER, plain	2		

Fig. 24 FRAME

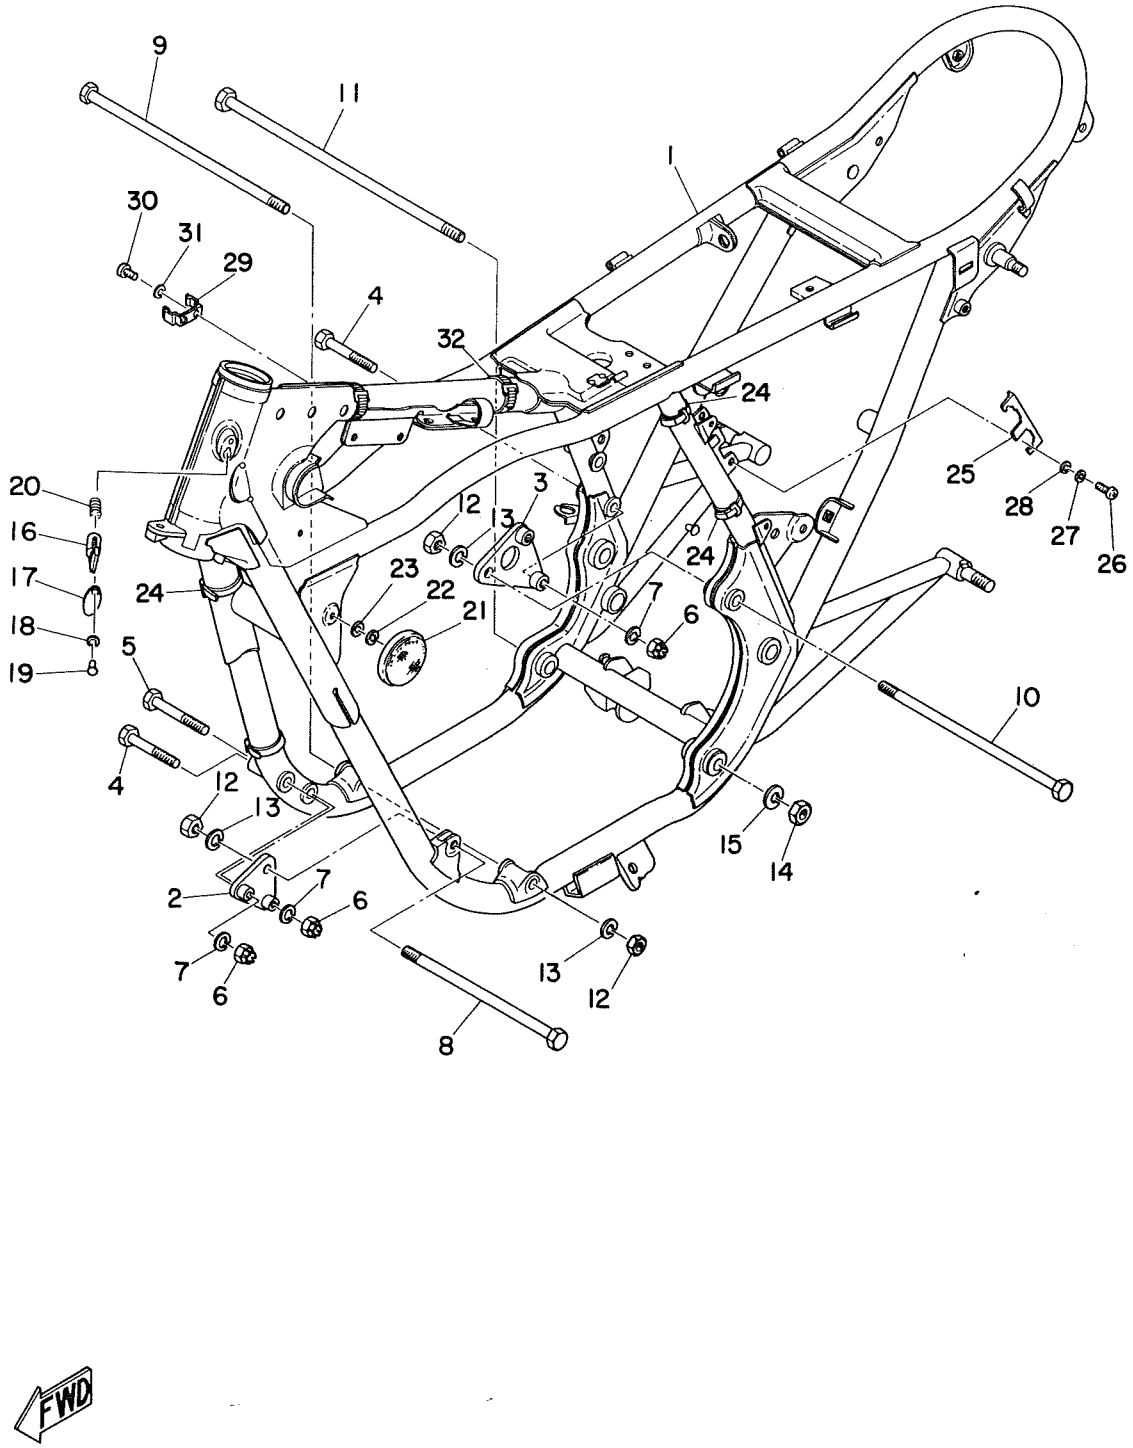
9
11
1
30
31
29
4
32
24
25
28
27
26
20
16
17
18
19
3
12
13
24
23
22
21
7
6
5
10
4
12
13
15
14
2
7
6
7
6
13
12
8
FWD

Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
24-24	341-26397-01	BAND	4		
24-25	341-82524-00	CLAMP, coupler	1		
24-26	98501-04015	SCREW, panhead	2		
24-27	92901-04100	WASHER, spring	2		
24-28	92901-04200	WASHER, plain	2		
24-29	341-82522-00	CLAMP, coupler	1		
24-30	92501-06010	SCREW, panhead	1		
24-31	92901-06100	WASHER, spring	1		
24-32	256-83936-00	BAND	2		


Fig. 25 BOX · SIDE COVER LEFT

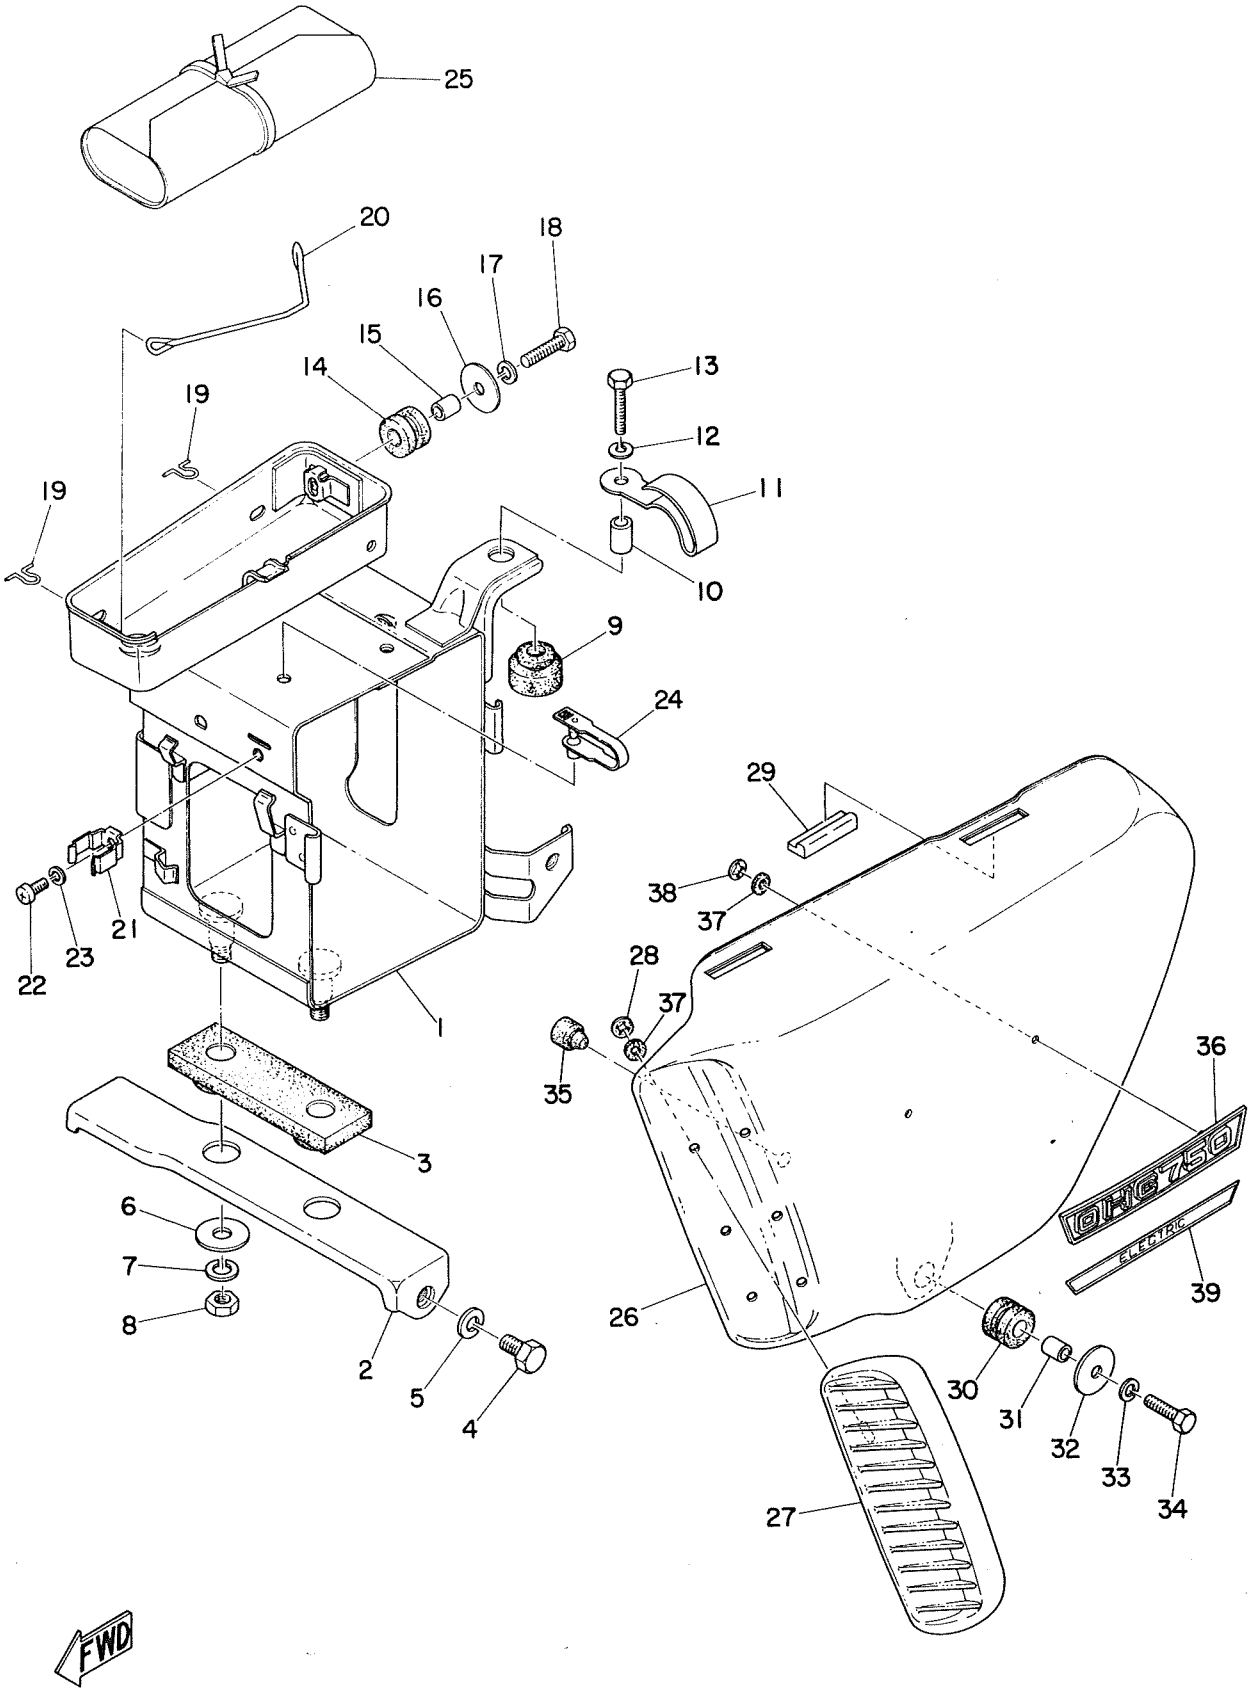

BOX · SIDE COVER LEFT

Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
25- 1	341-21170-01-33	BOX COMP.	1		Yamaha Black
25- 2	341-21166-01	STAY, battery box	1		
25- 3	341-21747-00	DAMPER, battery box 1	1		
25- 4	97201-08015	BOLT	2		
25- 5	92901-08100	WASHER, spring	2		
25- 6	156-24186-00	WASHER, special (8.5-26-1.6)	2		
25- 7	92901-08100	WASHER, spring	2		
25- 8	98801-08100	NUT	2		
25- 9	341-21746-00	DAMPER, battery box 2	1		
25-10	341-21748-00	COLLAR, box mount	1		
25-11	341-24818-00	HOOK, helmet	1		
25-12	92901-06100	WASHER, spring	1		
25-13	91101-06030	BOLT	1		
25-14	214-21717-00	DAMPER, battery box 1	1		
25-15	214-21633-00	COLLAR, fender mount 1	1		
25-16	101-28323-00	WASHER, special (6.5-20-2) ...	1		
25-17	92901-06100	WASHER, spring	1		
25-18	97101-06025	BOLT	1		
25-19	256-21366-00	HOOK, tool band	2		
25-20	341-21376-00	BAND, tool	1		
25-21	341-82523-00	CLAMP, coupler	1		
25-22	98501-06010	SCREW, panhead	1		
25-23	92901-06100	WASHER, spring	1		


Fig. 25 BOX · SIDE COVER LEFT

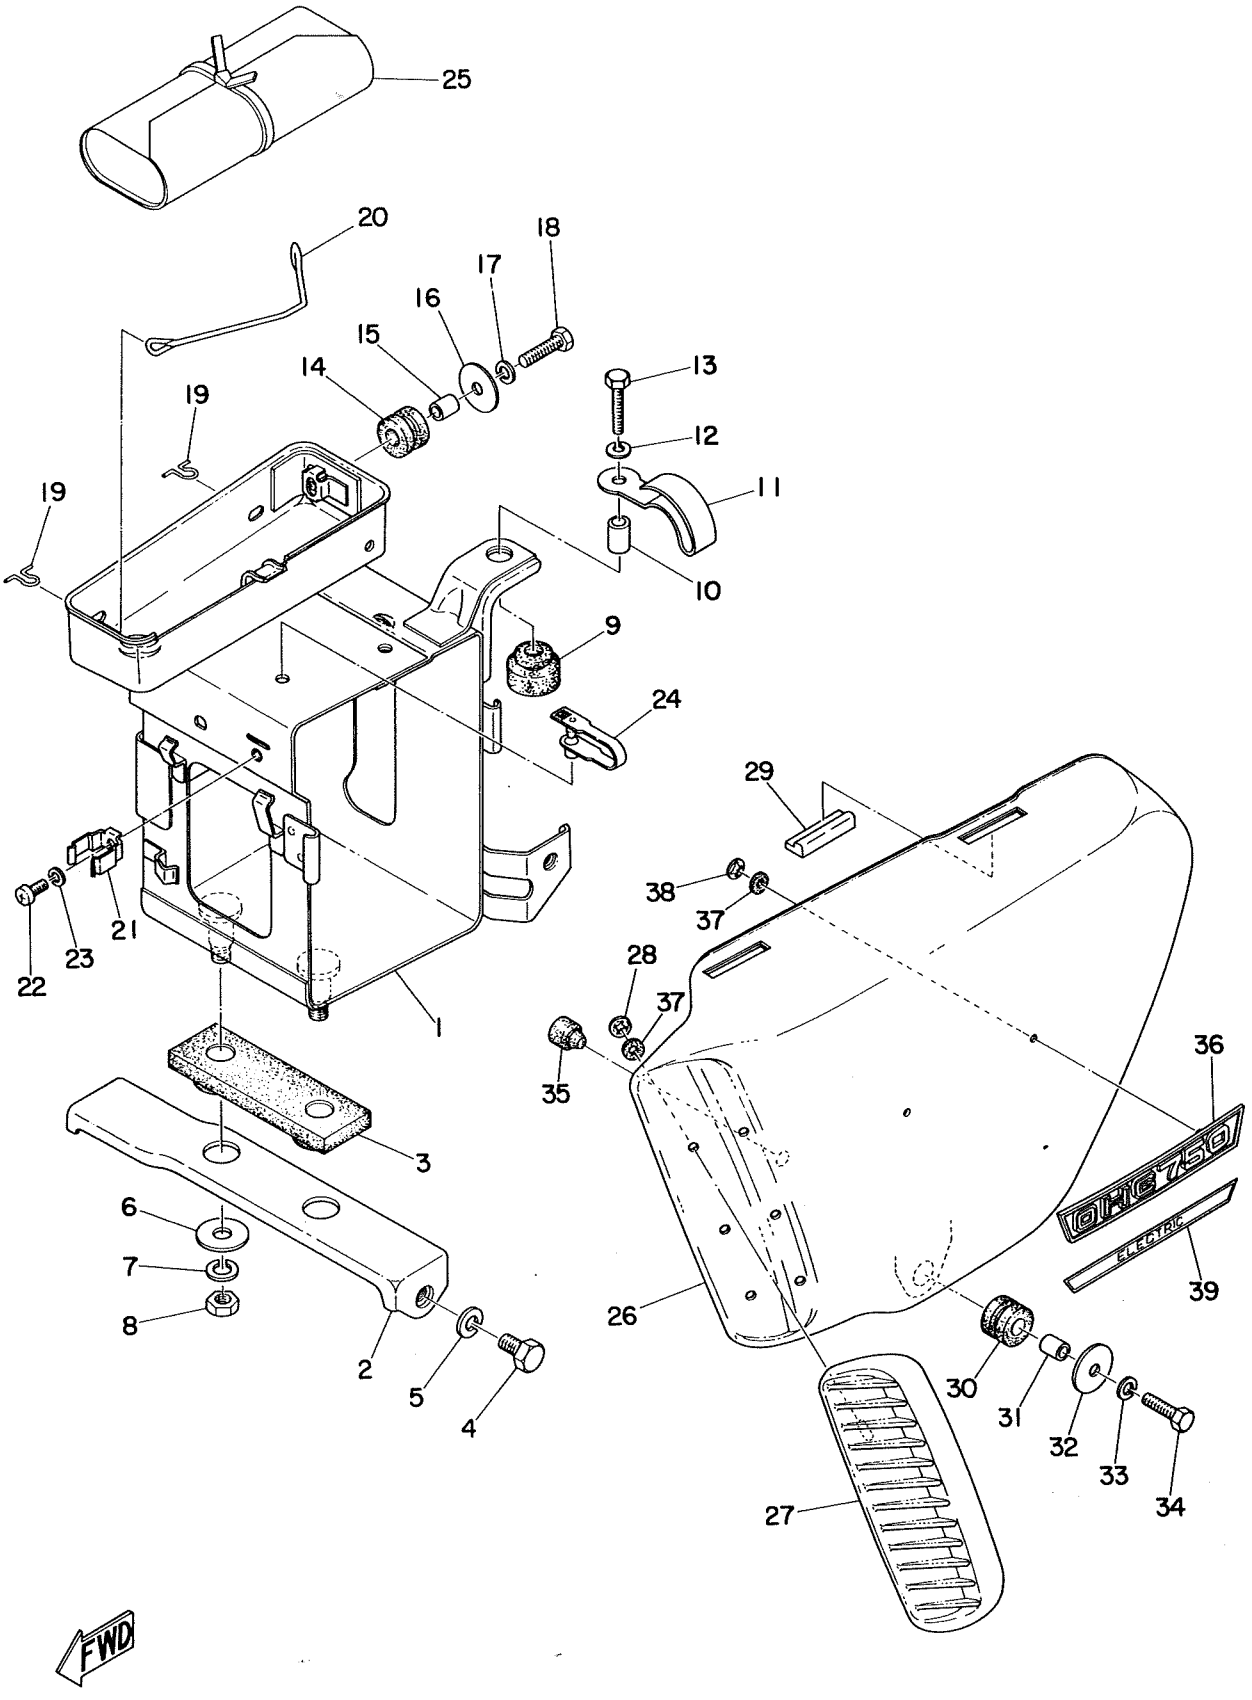

BOX · SIDE COVER LEFT

Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
25-24	341-21647-00	BAND	1		
25-25	341-28100-10	TOOL ASS'Y	1		
25-26	341-21711-00-M5	COVER, side left	1		Metallic Flake Gold
	341-21711-00-K1	COVER, side left	1		Competition Green
25-27	341-21781-00	MOLD, left	1		
25-28	116-28317-01	NUT	6		
25-29	341-21717-00	DAMPER, side cover	2		
25-30	214-21717-00	DAMPER, battery box 1	1		
25-31	214-21633-00	COLLAR, fender mount 1	1		
25-32	101-28323-00	WASHER 1 (6.5-20-2)	1		
25-33	92901-06100	WASHER, spring	1		
25-34	91103-06025	BOLT	1		
25-35	137-21778-00	DAMPER, oil tank	1		
25-36	341-21787-02	EMBLEM (OHC750)	1		
25-37	174-28316-00	DAMPER, emblem	8		
25-38	116-28317-01	NUT	2		
25-39	341-21785-00	EMBLEM, electric	1		


Fig. 26 OIL TANK · SIDE COVER RIGHT

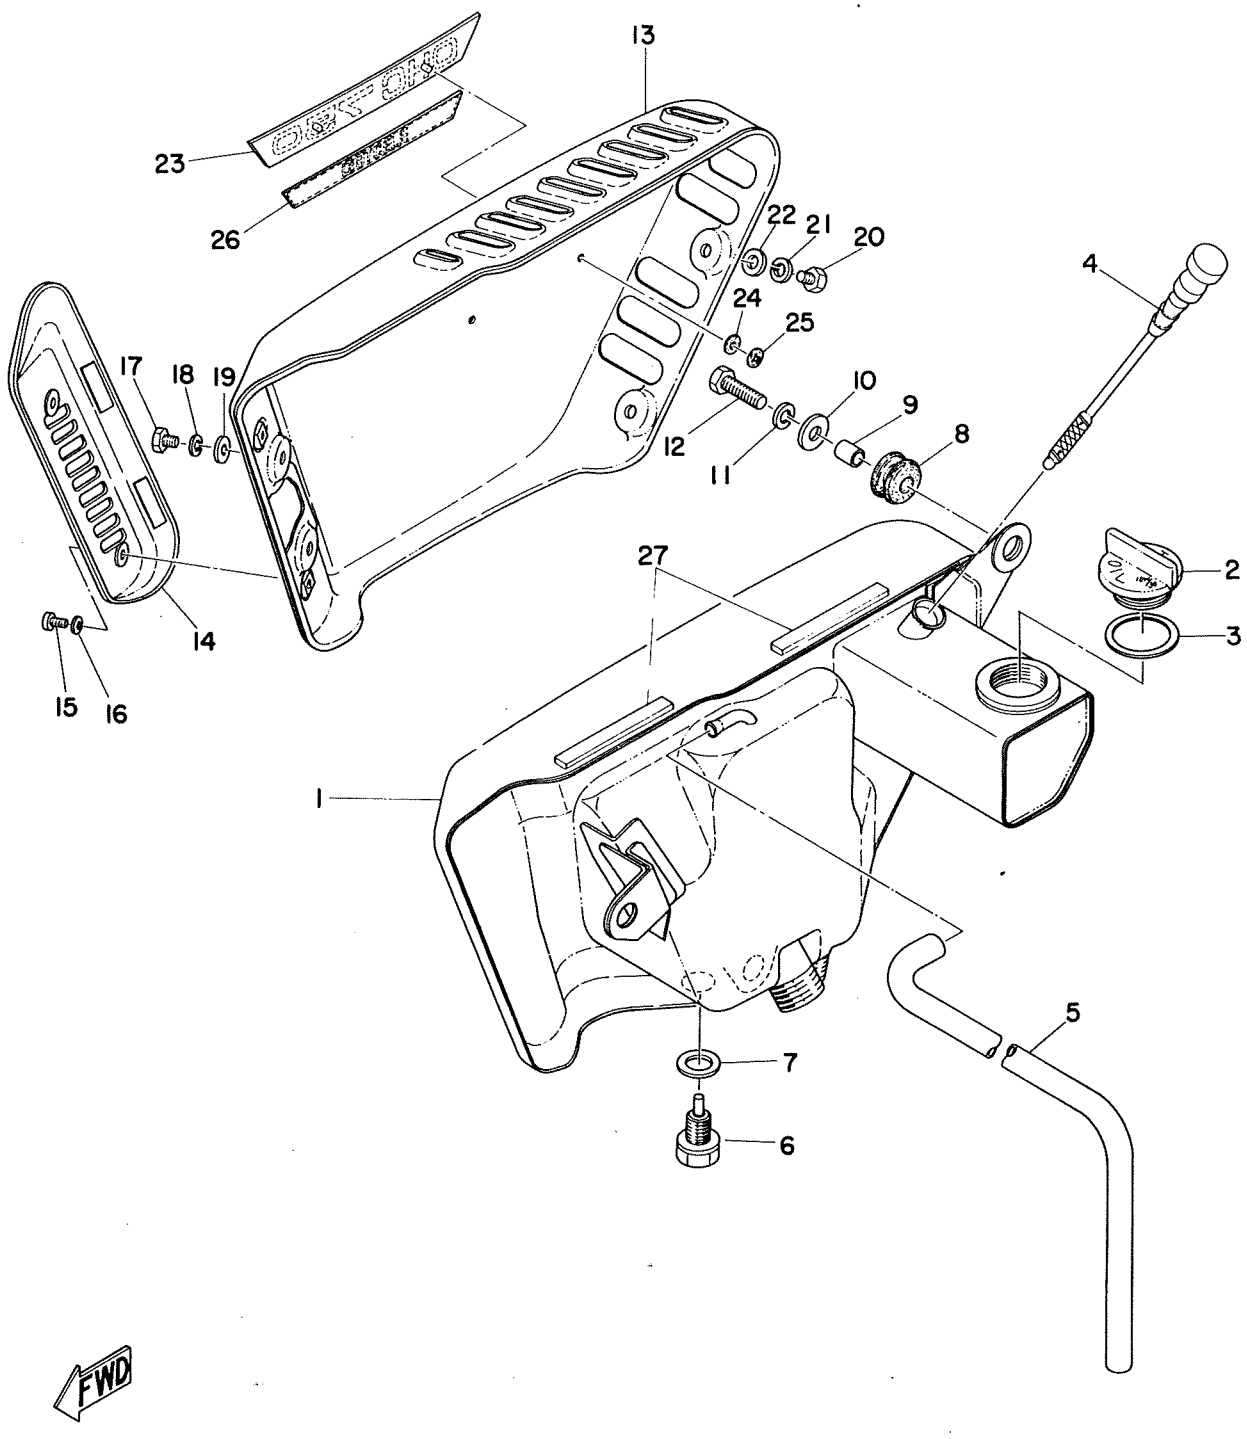

OIL TANK · SIDE COVER RIGHT

Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
26- 1	341-21751-01-33	TANK, oil	1		Yamaha Black
26- 2	341-21771-00	CAP, oil tank	1		
26- 3	214-21772-00	GASKET, cap	1		
26- 4	341-21792-00	GAUGE, oil level	1		
26- 5	341-21745-03	PIPE, breather (9-400)	1		
26- 6	341-21775-01	BOLT	1		
26- 7	341-21757-00	WASHER, special	1		
26- 8	341-21778-00	DAMPER, oil tank	3		
26- 9	214-21633-00	COLLAR, fender mount 1	3		
26-10	101-28323-00	WASHER, special (6.5-20-2) ...	3		
26-11	92901-06100	WASHER, spring	3		
26-12	91103-06025	BOLT	3		
26-13	341-21721-01-M5	COVER, side right	1		Metallic Frake Gold
	341-21721-01-K1	COVER, side right	1		Competition Green
26-14	341-21782-01	MOLD, right	1		
26-15	92506-04010	SCREW, panhead	2		
26-16	92906-04100	WASHER, spring	2		
26-17	97206-05008	BOLT	2		
26-18	92906-05100	WASHER, spring	2		
26-19	92906-05200	WASHER, plain	2		
26-20	97201-05008	BOLT	2		
26-21	92901-05100	WASHER, spring	2		
26-22	92901-05200	WASHER, plain	2		


Fig. 26 OIL TANK · SIDE COVER RIGHT

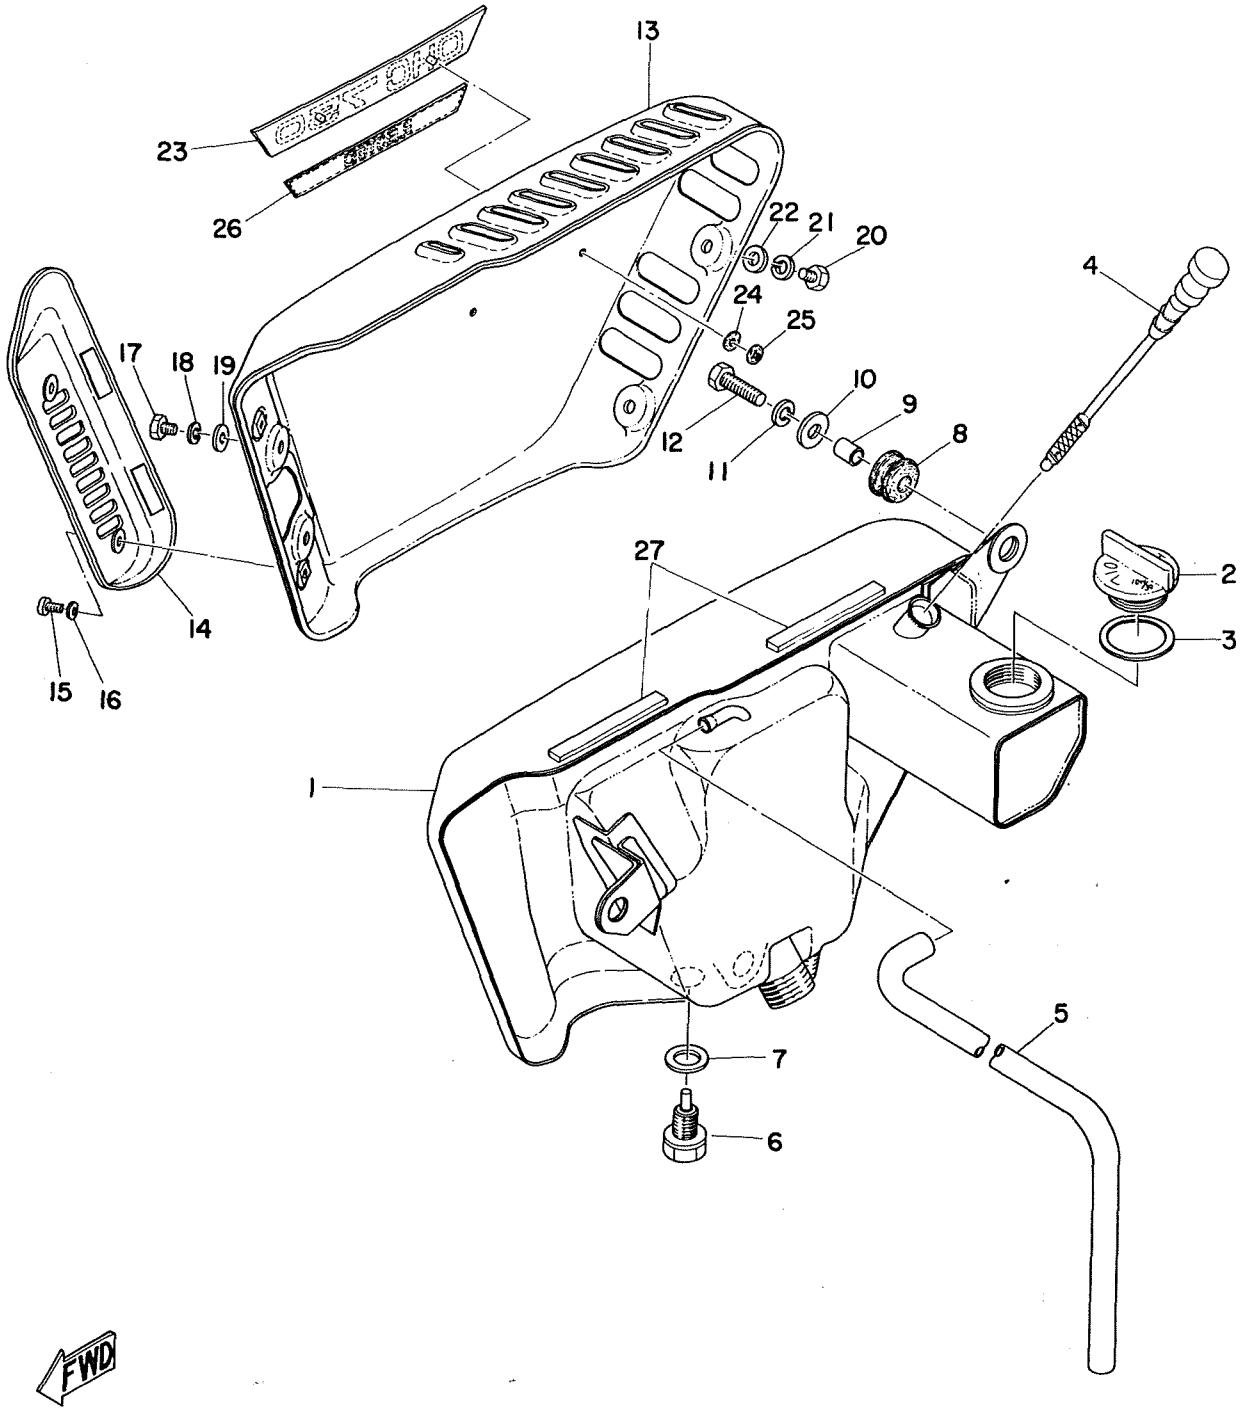

OIL TANK · SIDE COVER RIGHT

Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
26-23	341-21787-02	EMBLEM (OHC 750)	1		
26-24	174-28316-00	DAMPER, emblem	2		
26-25	116-28317-01	NUT	2		
26-26	341-21785-00	EMBLEM, electric	1		
26-27	341-21779-00	DAMPER	2		


Fig. 27 STAND · FOOTREST · BRAKE PEDAL

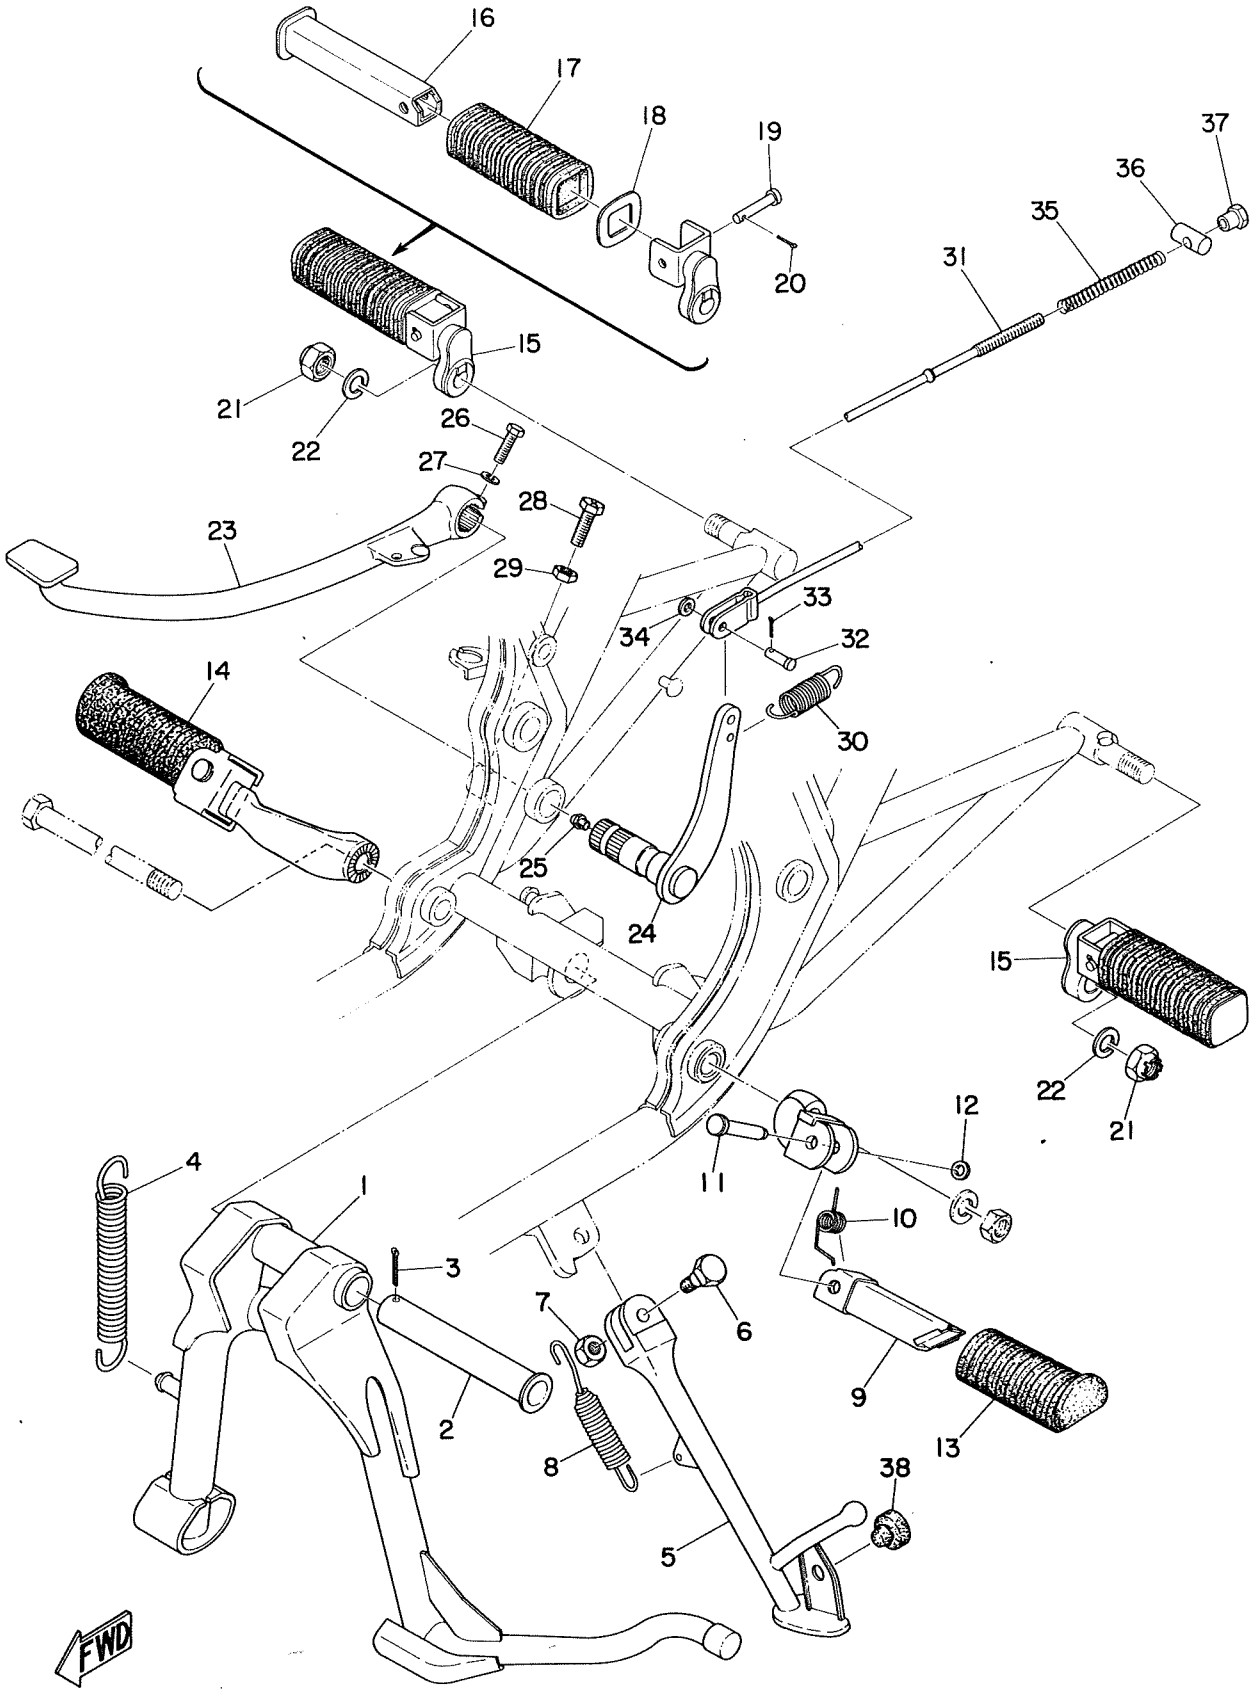

STAND · FOOTREST · BRAKE PEDAL

Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
27- 1	341-27111-00	STAND, main	1		
27- 2	341-27112-00	SHAFT, main stand	1		
27- 3	91401-30025	PIN, cotter	1		
27- 4	278-27116-00	SPRING, main stand	1		
27- 5	341-27311-00	STAND, side	1		
27- 6	266-27317-00	BOLT, side stand	1		
27- 7	98801-08300	NUT	1		
27- 8	183-27316-00	SPRING, side stand	1		
27- 0-1	341-27410-01	FOOTREST ASS'Y, left	1		
27- 0-2	341-27420-01	FOOTREST ASS'Y, right	1		
27- 9	341-27451-00	. FOOTREST 3	2		
27-10	214-27426-00	. SPRING, return	2		
27-11	214-27418-00	. PIN, clevis	2		
27-12	214-27417-00	. WASHER, special	2		
27-13	341-27423-00	. COVER, footrest left	1		
27-14	341-27413-00	. COVER, footrest right	1		
27-15	341-27430-00	REAR FOOTREST ASS'Y	2		
27-16	341-27431-00	. FOOTREST, rear	2		
27-17	168-27433-10	. COVER, rear footrest	2		
27-18	341-27437-00	. WASHER, special	2		
27-19	91501-06035	. PIN, clevis	2		
27-20	91401-16012	. PIN, cotter	2		
27-21	214-22143-00	. NUT	2		


Fig. 27 STAND · FOOTREST · BRAKE PEDAL

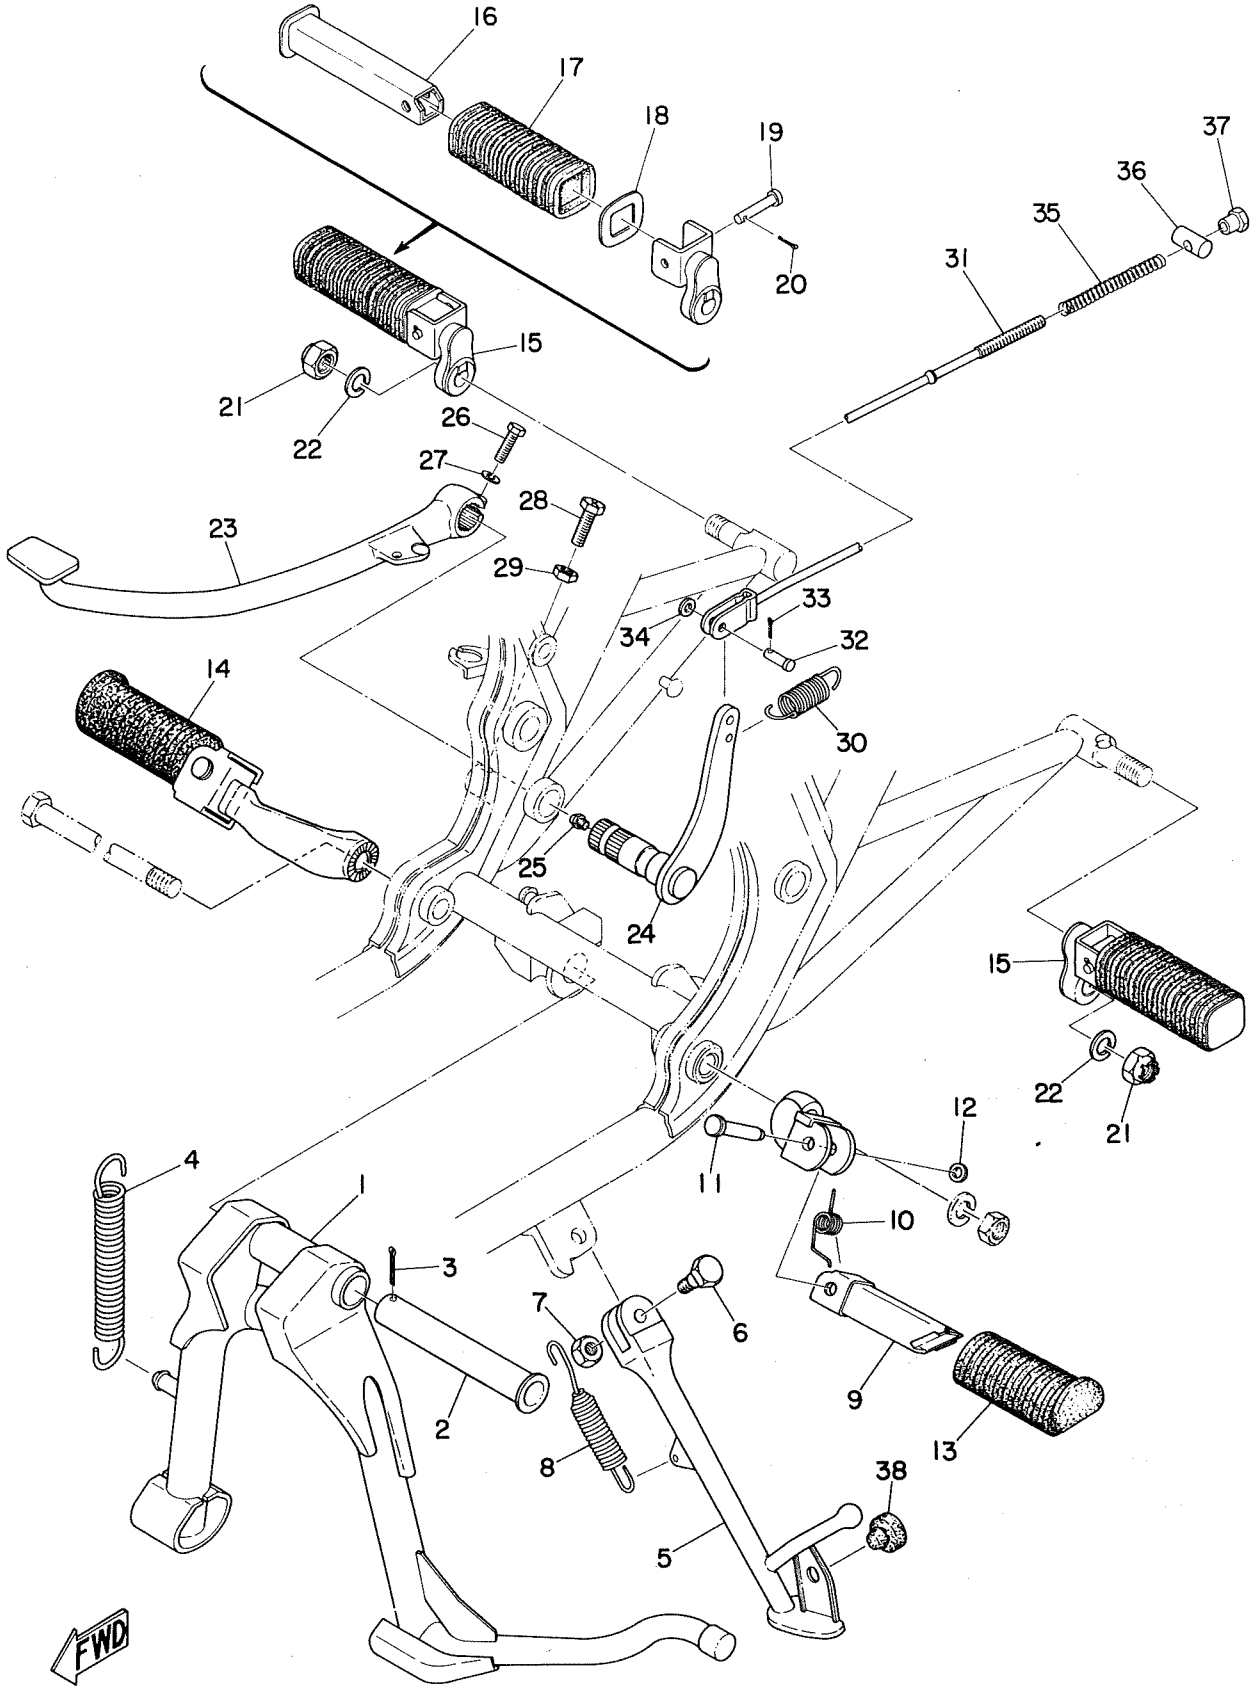

STAND · FOOTREST · BRAKE PEDAL

Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
27-22	92903-12100	WASHER, spring	2		
27-23	341-27211-02-93	PEDAL, brake	1		
27-24	341-27212-01	SHAFT, brake pedal	1		
27-25	93700-06001	NIPPLE, grease	1		
27-26	91103-06025	BOLT	1		
27-27	92903-06100	WASHER, spring	1		
27-28	341-27217-00	BOLT, special	1		
27-29	98803-06300	NUT	1		
27-30	341-27216-00	SPRING, brake pedal	1		
27-31	341-27231-00	ROD, brake	1		
27-32	156-27237-00	PIN, clevis	1		
27-33	91401-25012	PIN, cotter	1		
27-34	92901-06200	WASHER, plain	1		
27-35	180-27236-00	SPRING, rod	1		
27-36	248-27228-00	PIN, link joint	1		
27-37	206-27238-00	NUT, adjusting	1		
27-38	341-27314-00	STOPPER, side stand	1		


Fig. 28 REAR ARM · REAR CUSHION · CHAIN CASE

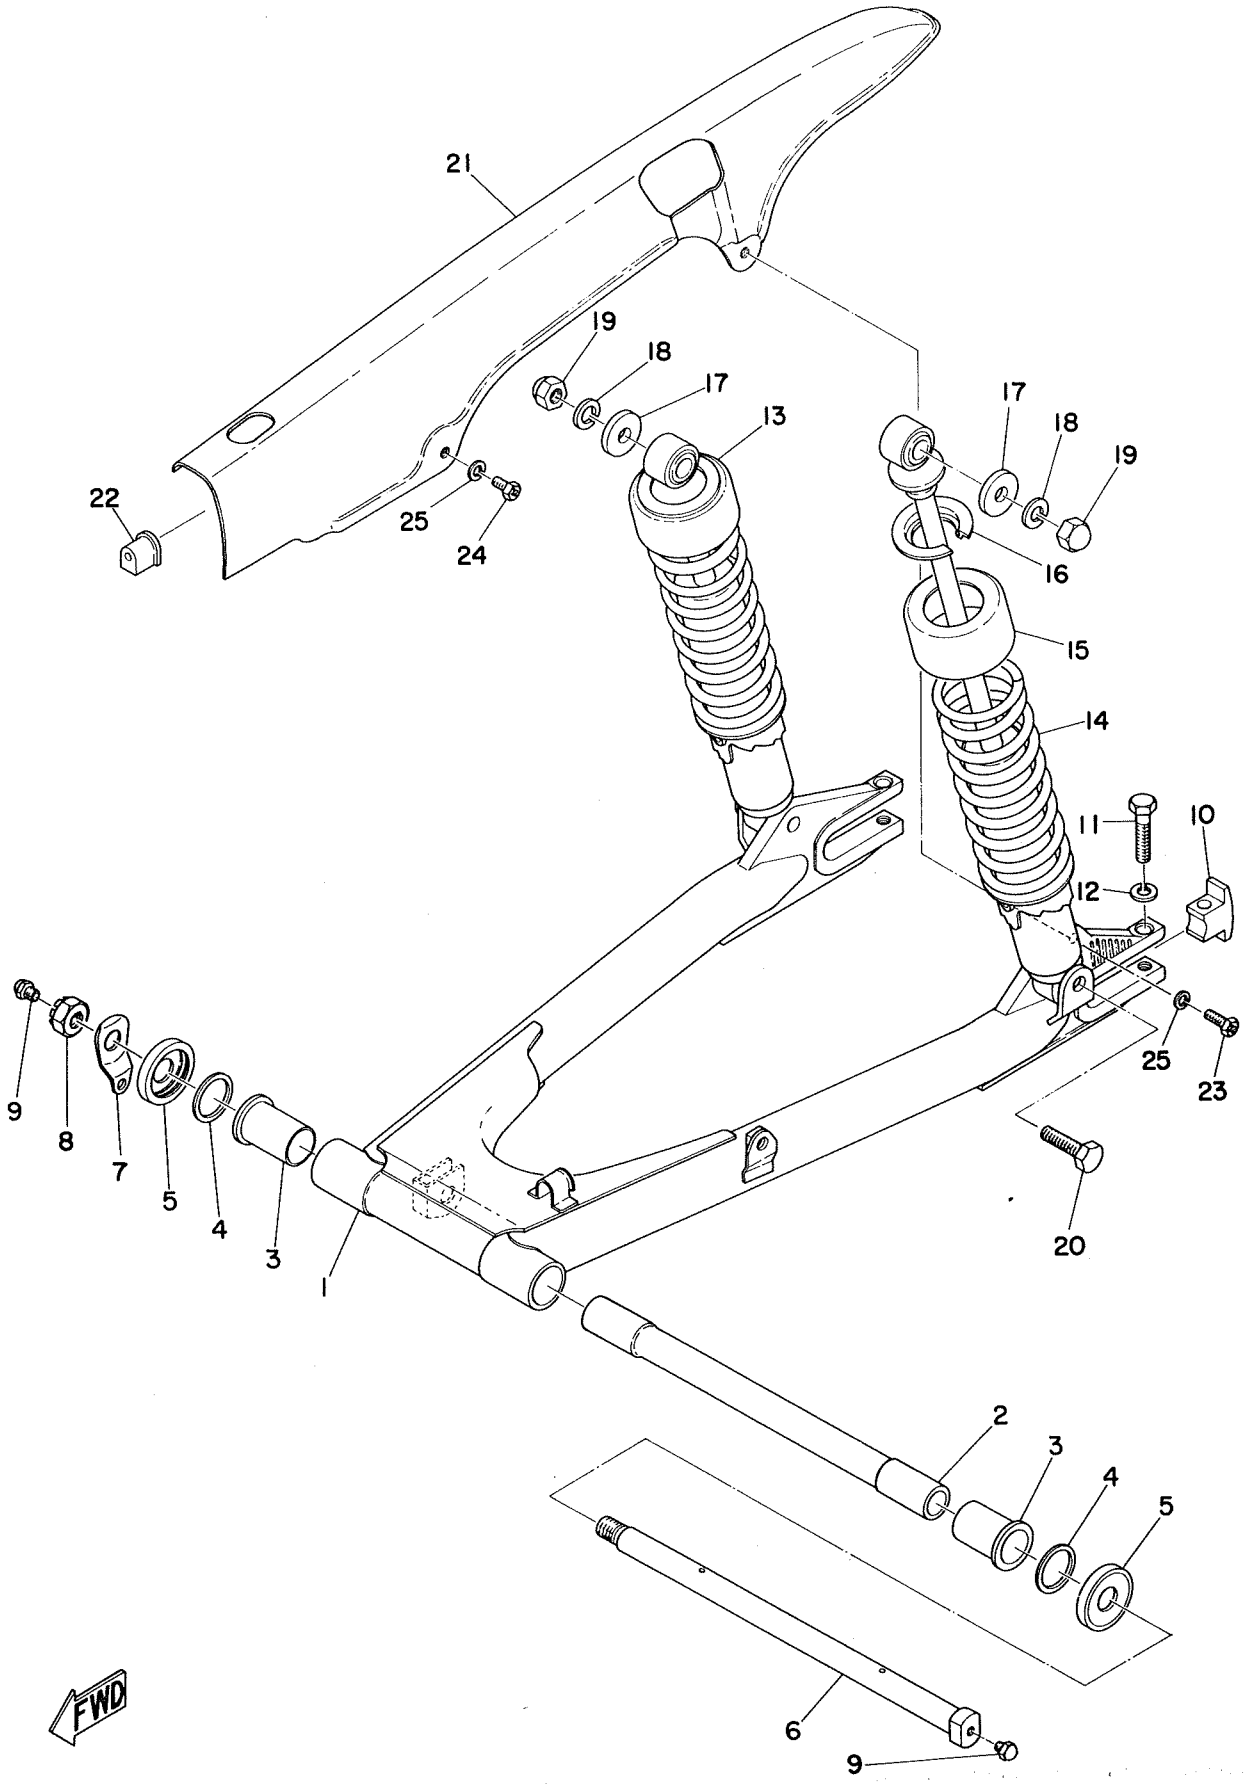

REAR ARM · REAR CUSHION · CHAIN CASE


Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
28- 1	341-22110-01-33	REAR ARM COMP.	1		Yamaha Black
28- 2	341-22184-00	BUSHING	1		
28- 3	256-22123-01	BUSHING, rear arm	2		
28- 4	156-22127-00	SHIM, rear arm (26-34-0.3)	U.N		
28- 5	341-22128-00	COVER, thrust	2		
28- 6	341-22141-01	SHAFT, pivot	1		
28- 7	341-22149-00	WASHER, lock	1		
28- 8	341-22143-00	NUT	1		
28- 9	93700-06001	NIPPLE, grease	2		
28-10	341-22177-00	END, rear arm	2		
28-11	97201-08040	BOLT	2		
28-12	92901-08100	WASHER, spring	2		
28-13	341-22210-20	REAR CUSHION ASS'Y	2		
28-14	341-22212-20	. SPRING, rear cushion	2		
28-15	341-22211-20	. COVER, outer	2		
28-16	341-22213-20	. GUIDE, spring	2		
28-17	341-22243-00	WASHER, special	2		
28-18	92903-10100	WASHER, spring	2		
28-19	92803-10700	NUT, crown	2		
28-20	214-22241-00	BOLT, rear cushion	2		
28-21	341-22311-02-98	CHAIN CASE	1		Frosting Black
28-22	341-22332-00	DAMPER, chain case	1		
28-23	341-22331-00	BOLT, chain case 1	1		

Fig. 28 REAR ARM · REAR CUSHION · CHAIN CASE

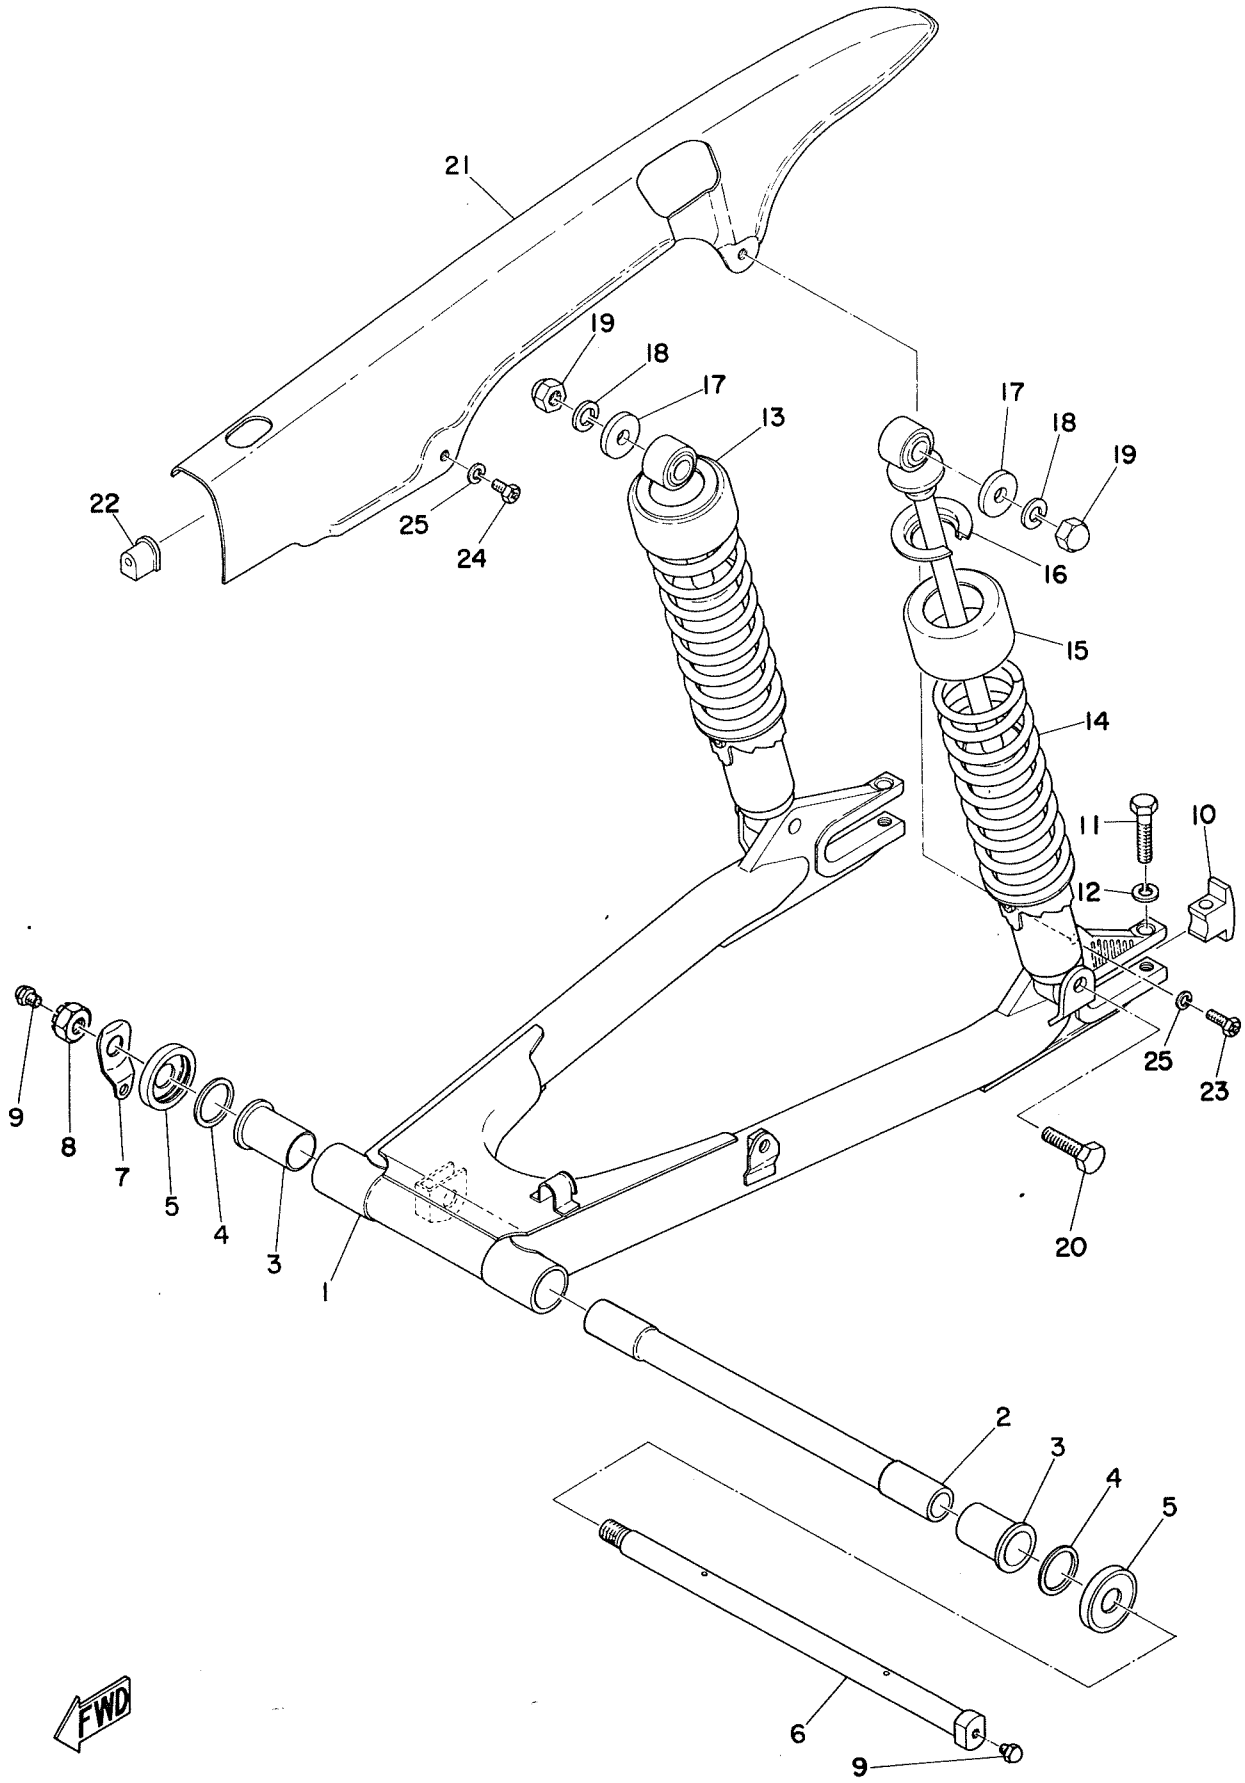

Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
28-24	341-22334-00	BOLT, chain case 2	1		
28-25	92903-06100	WASHER, spring	2		


Fig. 29 FRONT FENDER · REAR FENDER

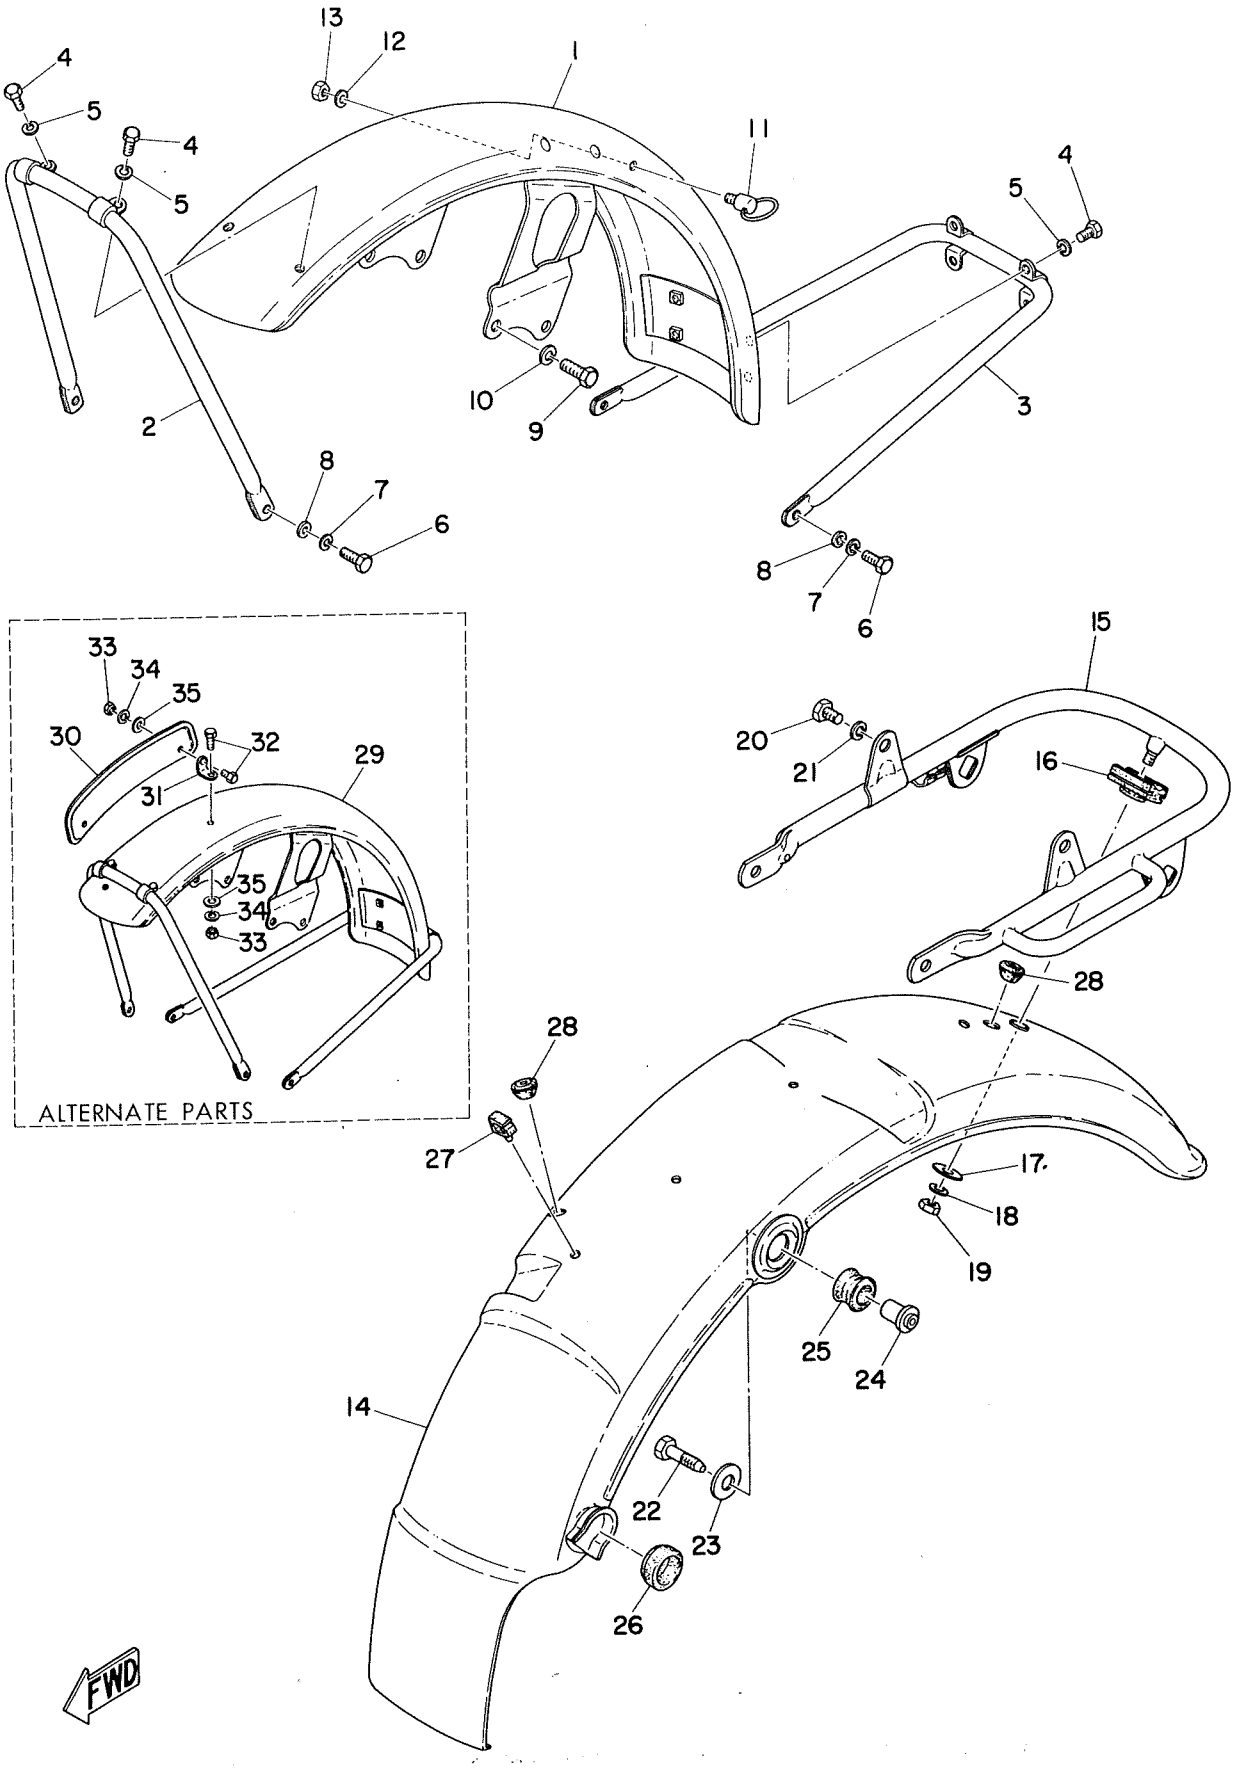

FRONT FENDER · REAR FENDER

Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
29- 1	341-21511-01-93	FENDER, front	1		
29- 2	341-21513-01	STAY, fender front	1		
29- 3	341-21514-01	STAY, fender rear	1		
29- 4	91103-06012	BOLT	6		
29- 5	92903-06100	WASHER, spring	6		
29- 6	91103-06018	BOLT	4		
29- 7	92903-06100	WASHER, spring	4		
29- 8	92903-06200	WASHER, plain	4		
29- 9	97101-08020	BOLT	4		
29-10	92901-08100	WASHER, spring	4		
29-11	174-21518-00	HOLDER, wire	1		
29-12	92901-06100	WASHER, spring	1		
29-13	98801-06100	NUT	1		
29-14	341-21611-00-93	FENDER, rear	1		
29-15	341-21645-00	STAY, rear	1		
29-16	341-21638-00	DAMPER, rear fender	1		
29-17	135-21491-00	WASHER, special	1		
29-18	92901-06100	WASHER, spring	1		
29-19	98801-06100	NUT	1		
29-20	97203-08015	BOLT	2		
29-21	92901-08100	WASHER, spring	2		
29-22	341-21631-00	BOLT	2		
29-23	156-24186-00	WASHER, special	2		

Fig. 29 FRONT FENDER · REAR FENDER

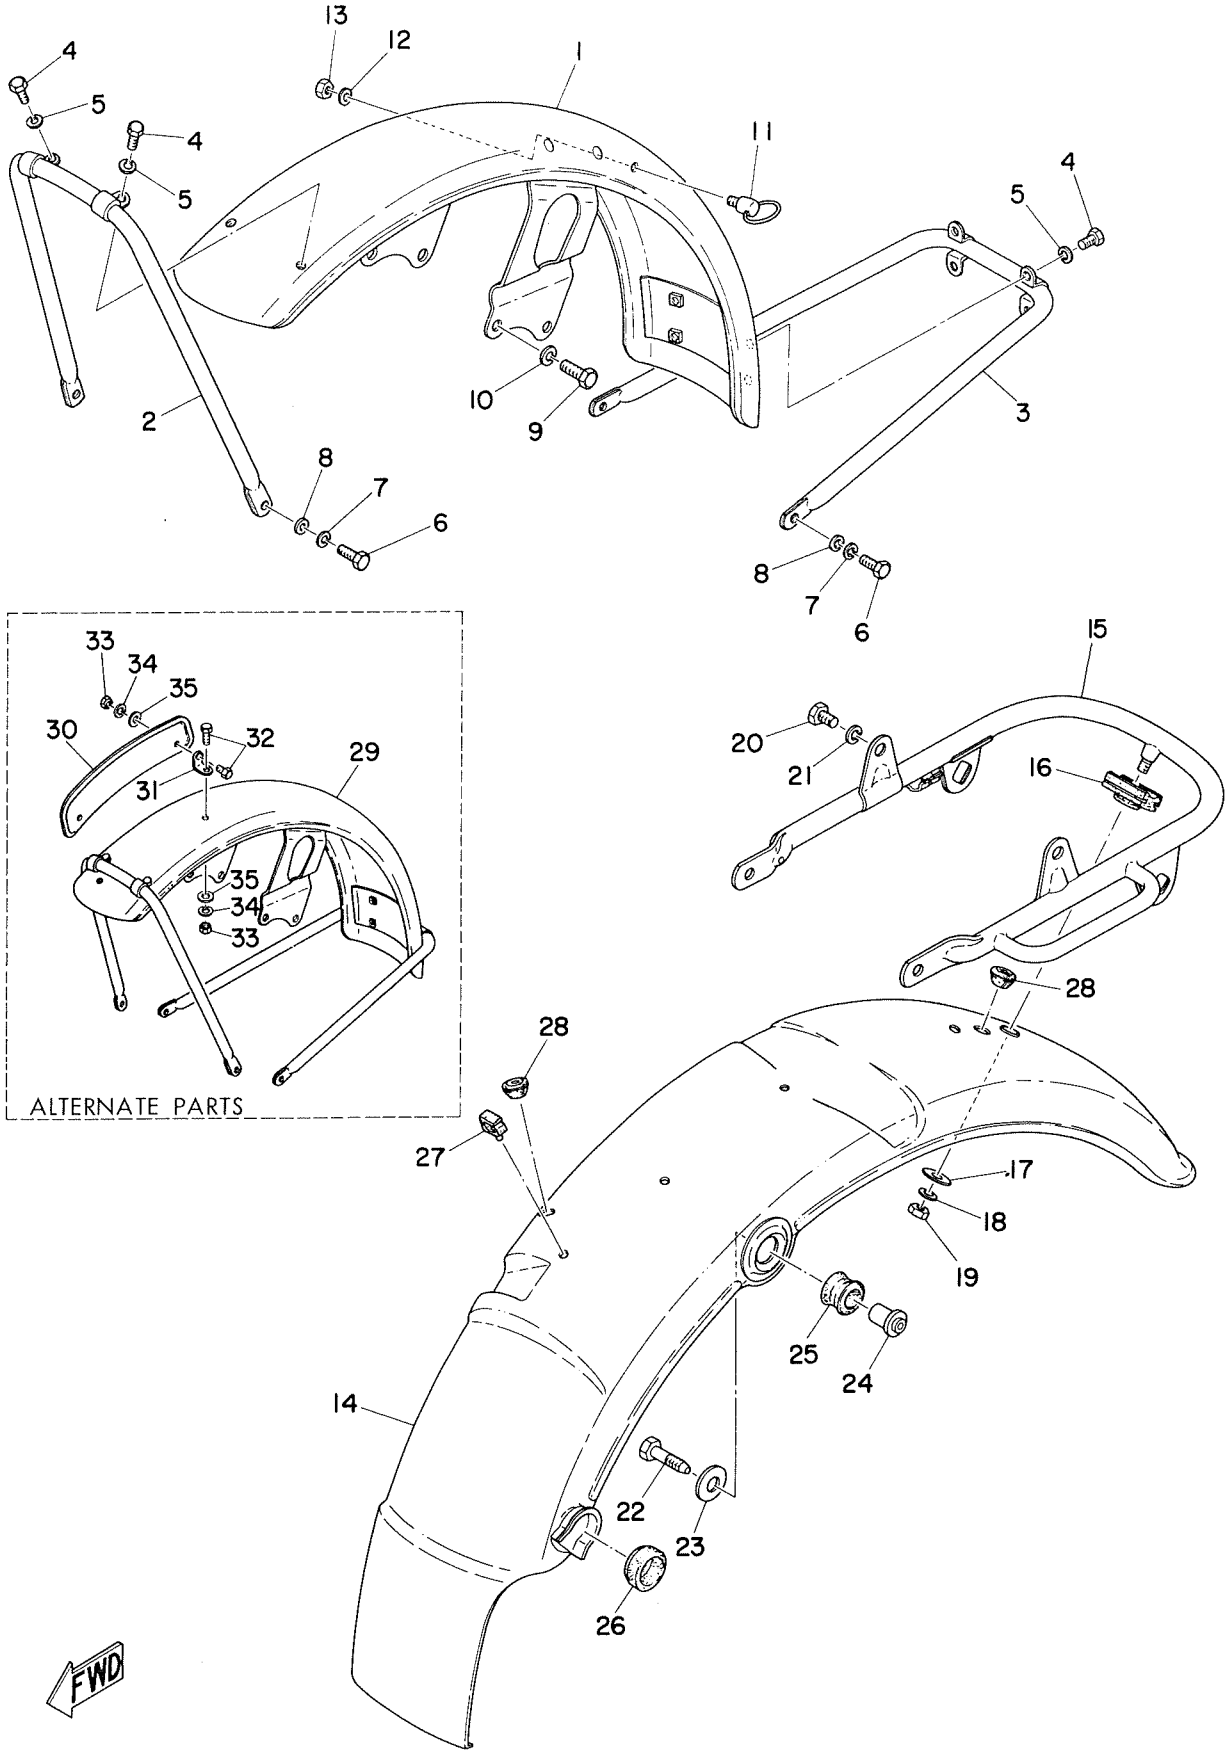


Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
29-24	341-21626-01	COLLAR, rear fender	2		
29-25	341-21639-00	DAMPER, rear fender	2		
29-26	122-24181-00	DAMPER, locating 1	2		
29-27	341-21637-00	CLAMP, wireharness	3		
29-28	152-84518-00	GROMMET, tail lamp	2		

ALTERNATE PARTS


29-29	341-21511-80	FENDER, front	1		
29-30	122-21582-81	PLATE, license	1		
29-31	156-21581-81	STAY, plate fitting	2		
29-32	91203-06012	BOLT	4		
29-33	98803-06100	NUT	4		
29-34	92901-06100	WASHER, spring	4		
29-35	92903-06200	WASHER, plain	4		

Fig. 30 STEERING

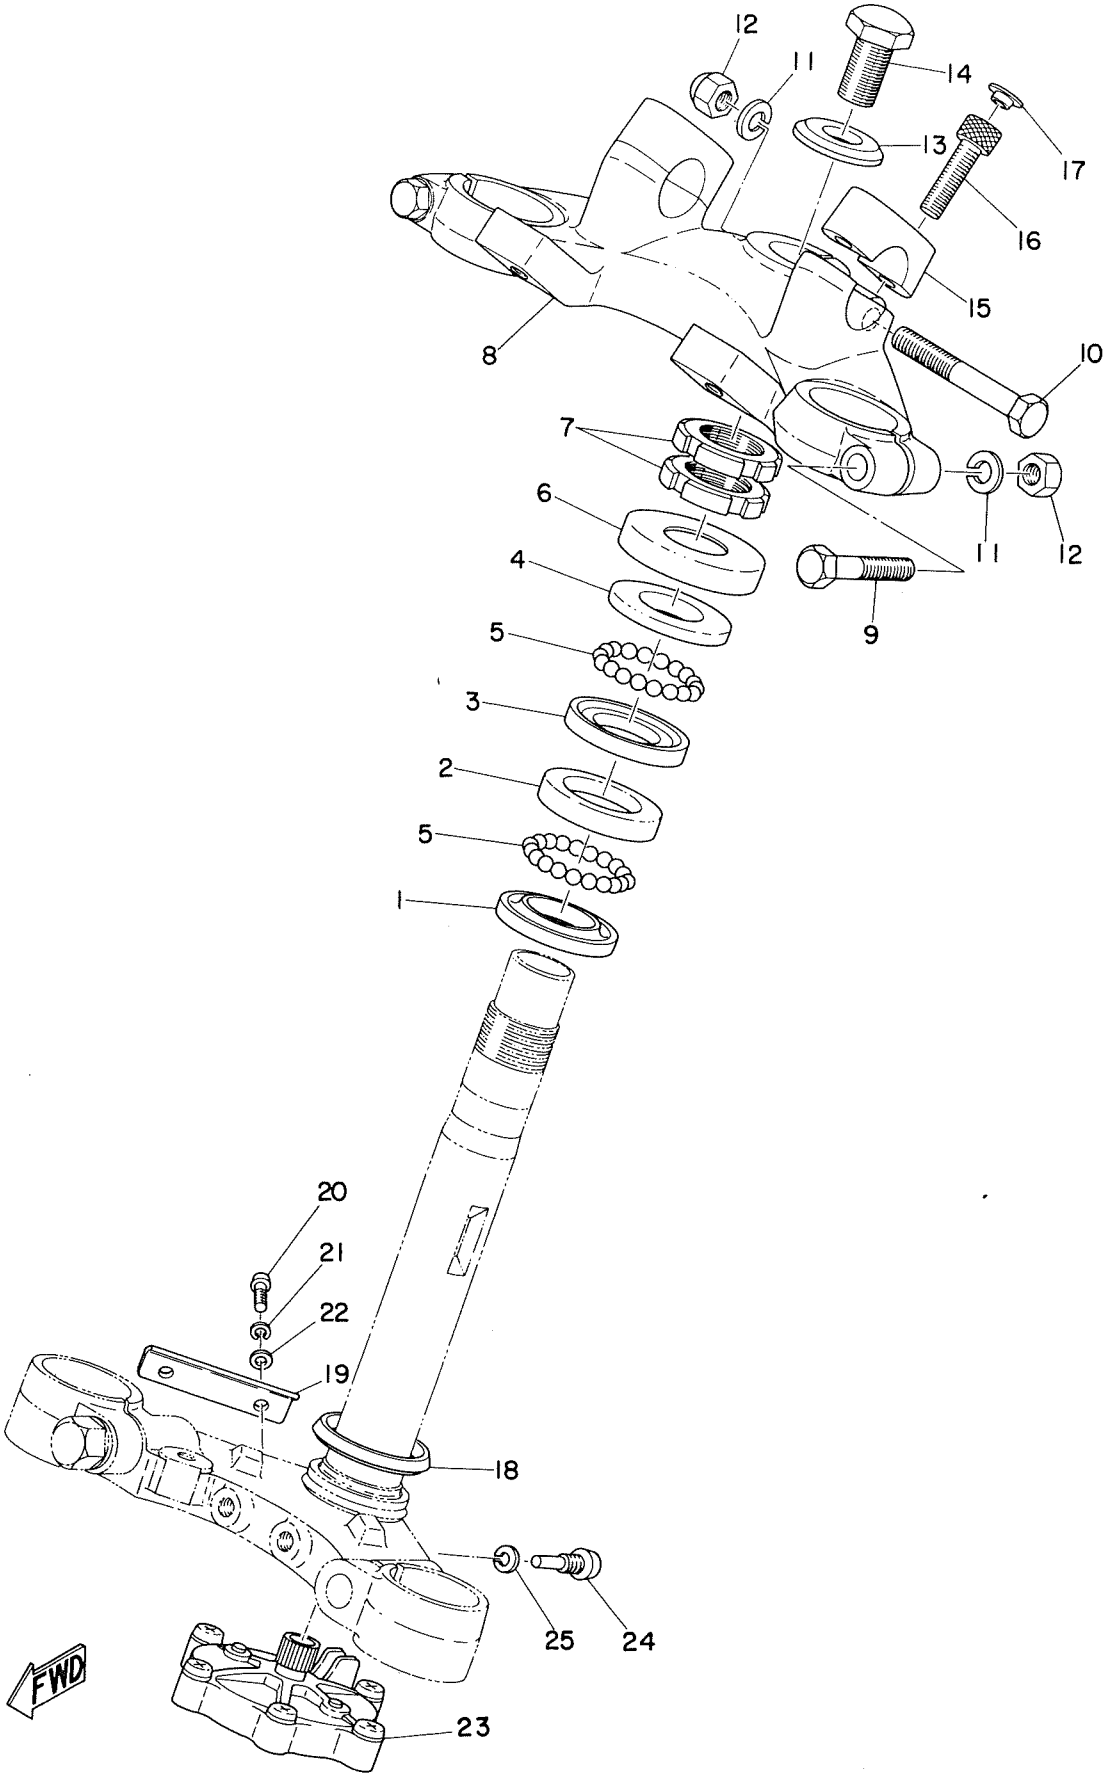


Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
30- 1	256-23411-00	RACE, ball 1	1		
30- 2	256-23412-00	RACE, ball 2	1		
30- 3	256-23413-00	RACE, ball 3	1		
30- 4	256-23414-00	RACE, ball 4	1		
30- 5	93501-04011	BALL (1/4 inch)	38		
30- 6	136-23415-00	COVER, ball race	1		
30- 7	137-23454-00	NUT, fitting	2		
30- 8	341-23435-00	CROWN, handle	1		
30- 9	97203-08050	BOLT	2		
30-10	97203-08065	BOLT	1		
30-11	92903-08100	WASHER, spring	3		
30-12	98803-08700	NUT, crown	3		
30-13	341-23443-00	WASHER, crown	1		
30-14	341-23451-00	BOLT, special	1		
30-15	341-23441-00	HOLDER, handle upper	2		
30-16	341-23452-00	BOLT, fitting	4		
30-17	341-23469-00	CAP, bolt	4		
30-18	164-23462-00	SEAL, dust	1		
30-19	341-23472-00	PROTECTOR	1		
30-20	98501-04010	SCREW, panhead	2		
30-21	92901-04100	WASHER, spring	2		
30-22	92901-04200	WASHER, plain	2		

Fig. 30 STEERING

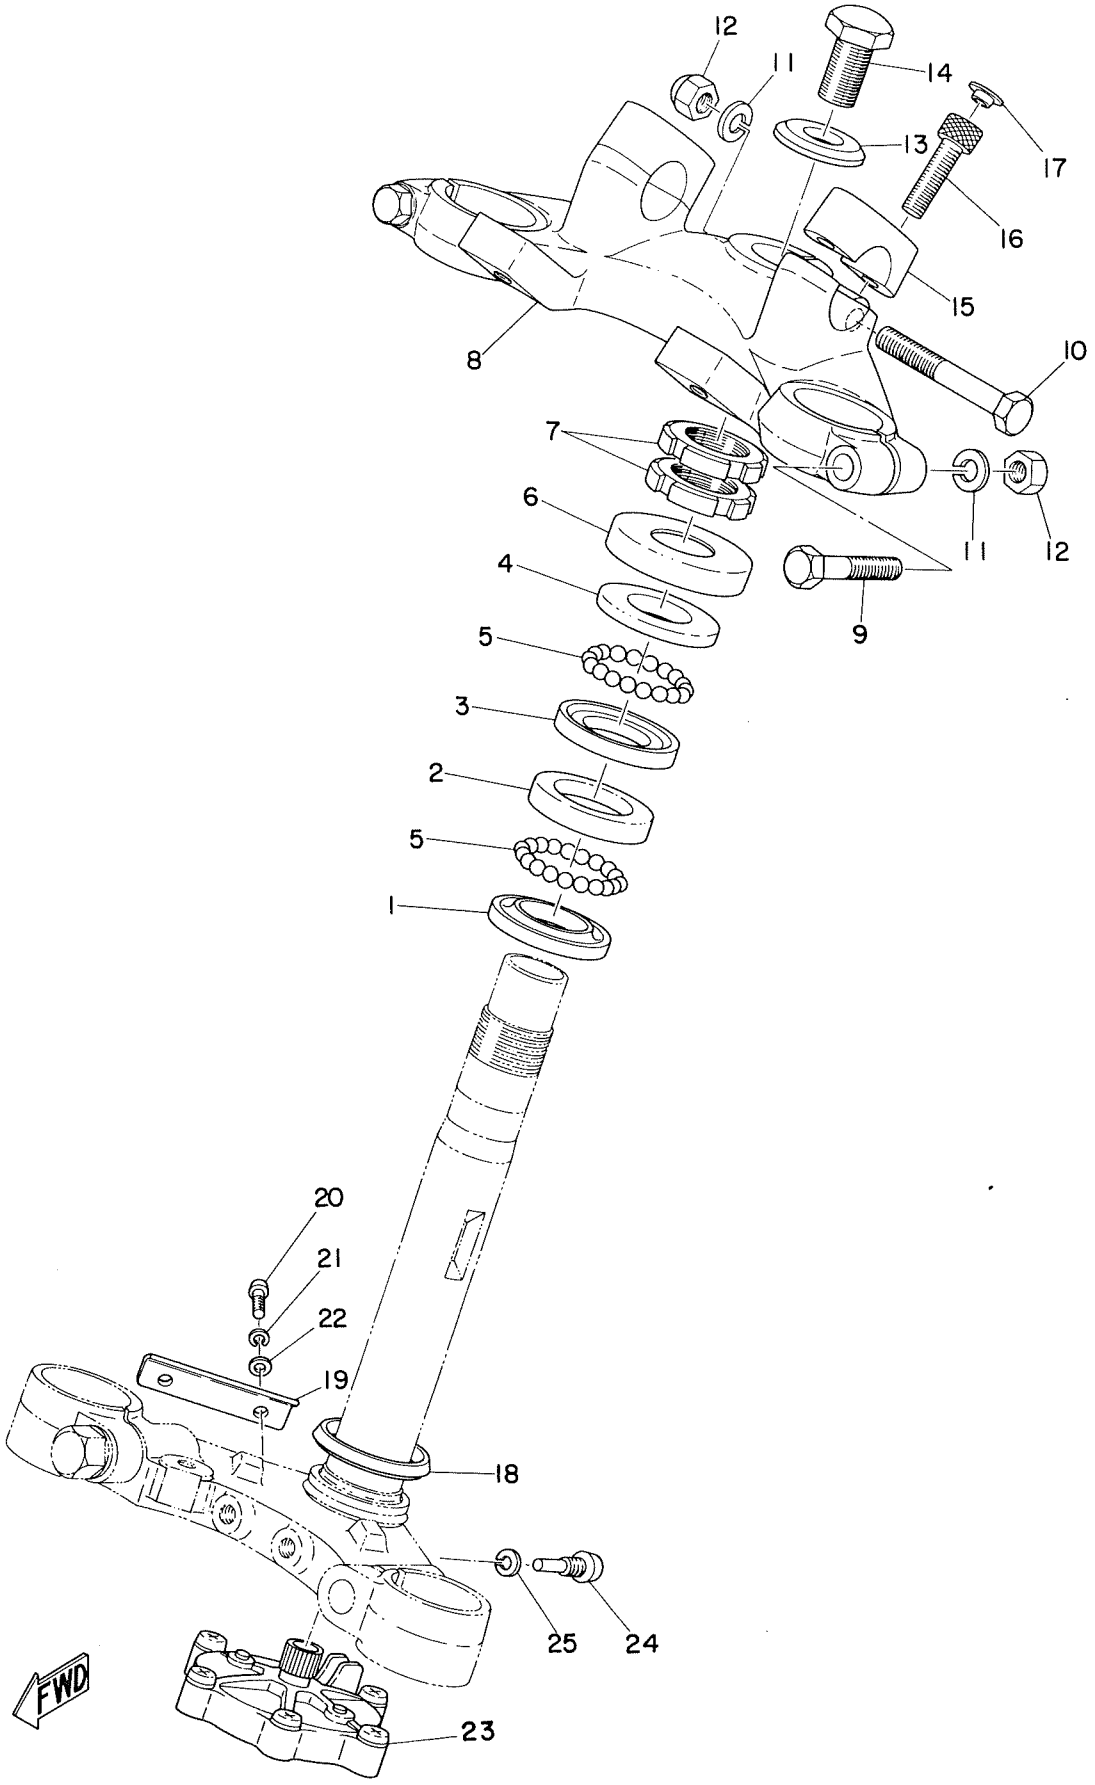

Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
30-23	214-23490-00	OIL DAMPER ASS'Y	1		
30-24	214-23492-00	BOLT	1		
30-25	92901-06100	WASHER, spring	1		


Fig. 31 FRONT FORK

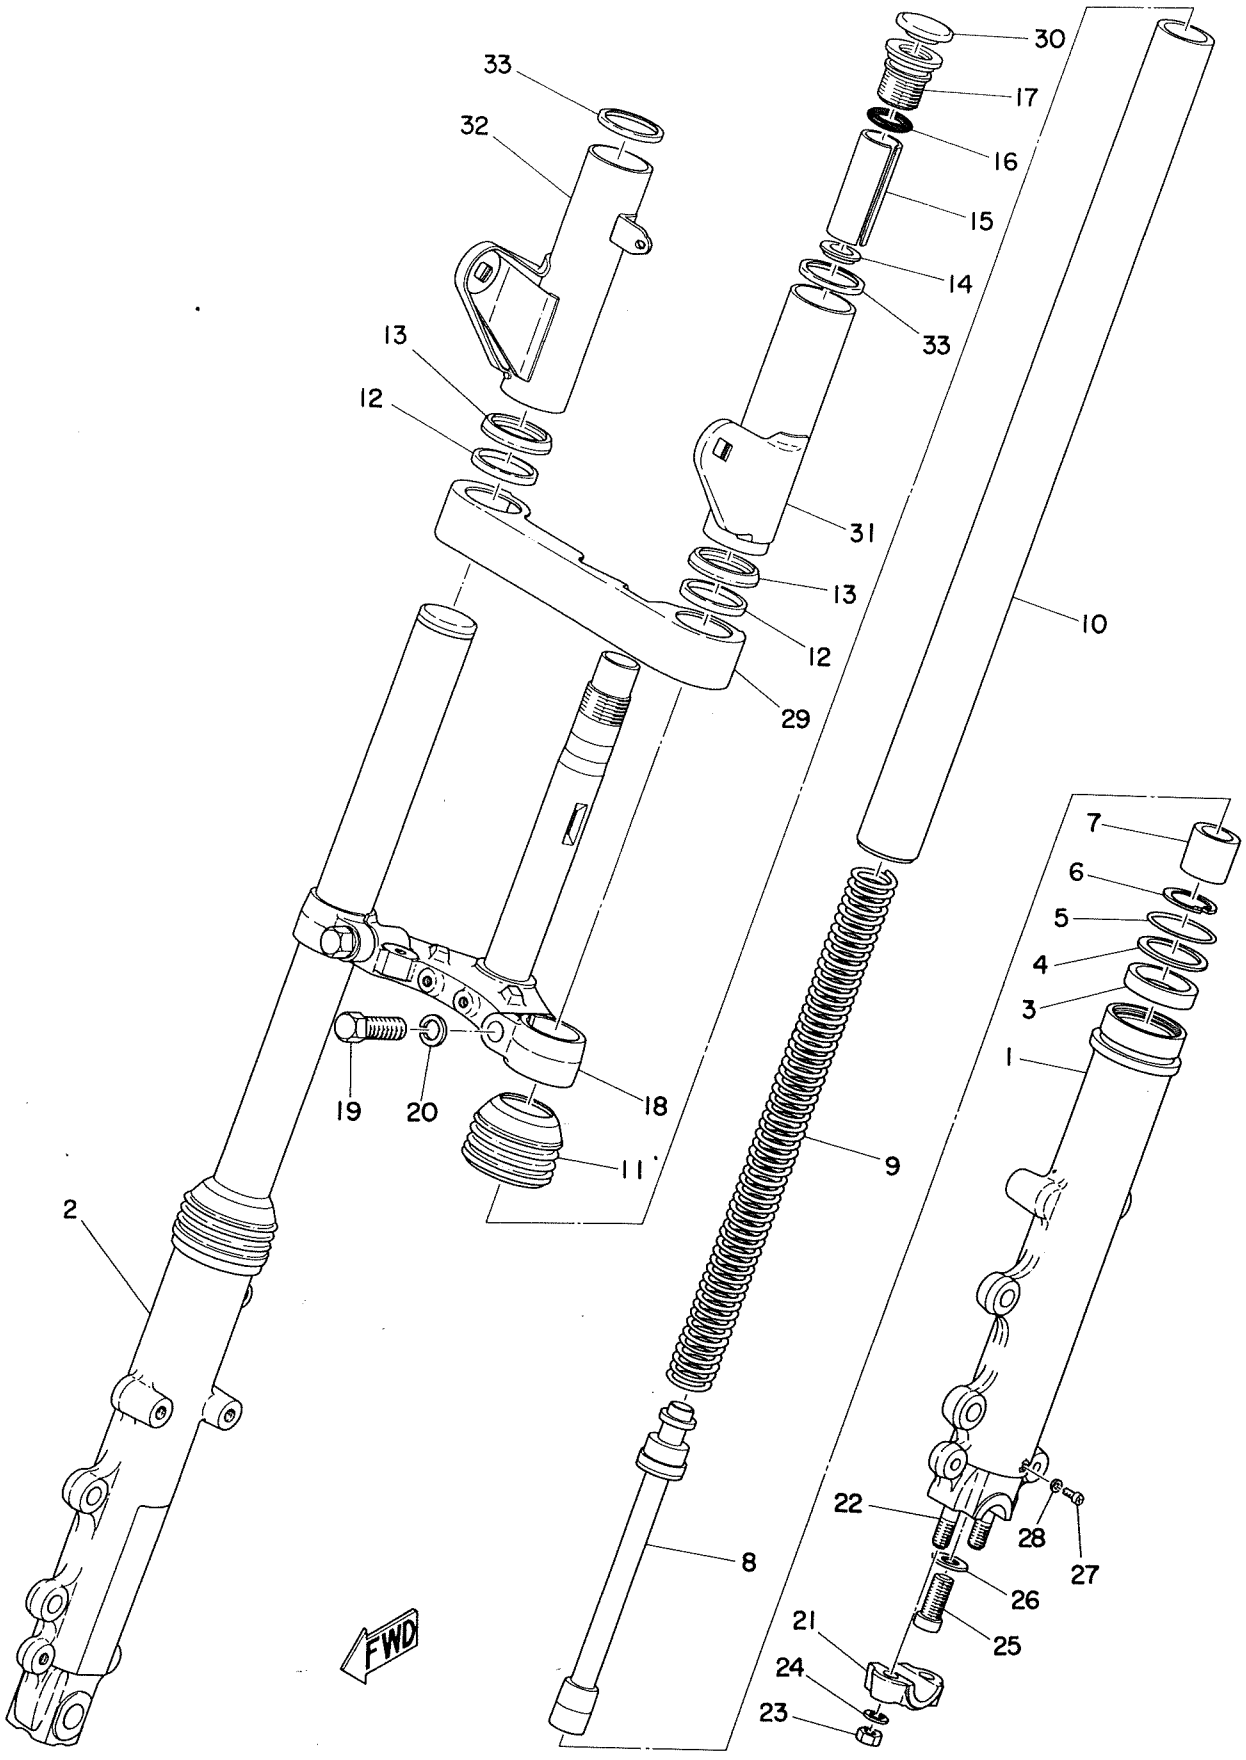

FRONT FORK


Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
31- 0-1	341-23101-50	FRONT FORK ASS'Y	1		
31- 1	341-23126-50	. TUBE, outer left	1		
31- 2	341-23136-50	. TUBE, outer right	1		
31- 3	341-23145-50	. . OIL SEAL	2		
31- 4	341-23146-50	. . WASHER, oil seal	2		
31- 5	341-23156-50	. . CLIP, oil seal	2		
31- 6	93420-28025	. CIRCLIP (R-28)	2		
31- 7	278-23171-50	. PISTON	2		
31- 8	341-23170-50	. CYLINDER COMP.	2		
31- 9	341-23141-50	. SPRING	2		
31-10	341-23124-50	. TUBE, inner	2		
31-11	341-23144-50	. SEAL, dust	2		
31-12	341-23163-50	. PACKING	2		
31-13	256-23116-61	. COVER GUIDE, under	2		
31-14	278-23142-50	. SEAT, spring upper	2		
31-15	341-23118-50	. SPACER	2		
31-16	214-23114-00	. PACKING	2		
31-17	341-23111-51	. BOLT, cap	2		
31-18	341-23340-51-33	. UNDER BRACKET COMP. ...	1		Yamaha Black
31-19	306-23346-60	. BOLT	2		
31-20	92901-12100	. WASHER, spring	2		
31-21	341-23167-50	. HOLDER, axle	1		
31-22	278-23128-50	. BOLT, stud	2		

Fig. 31 FRONT FORK

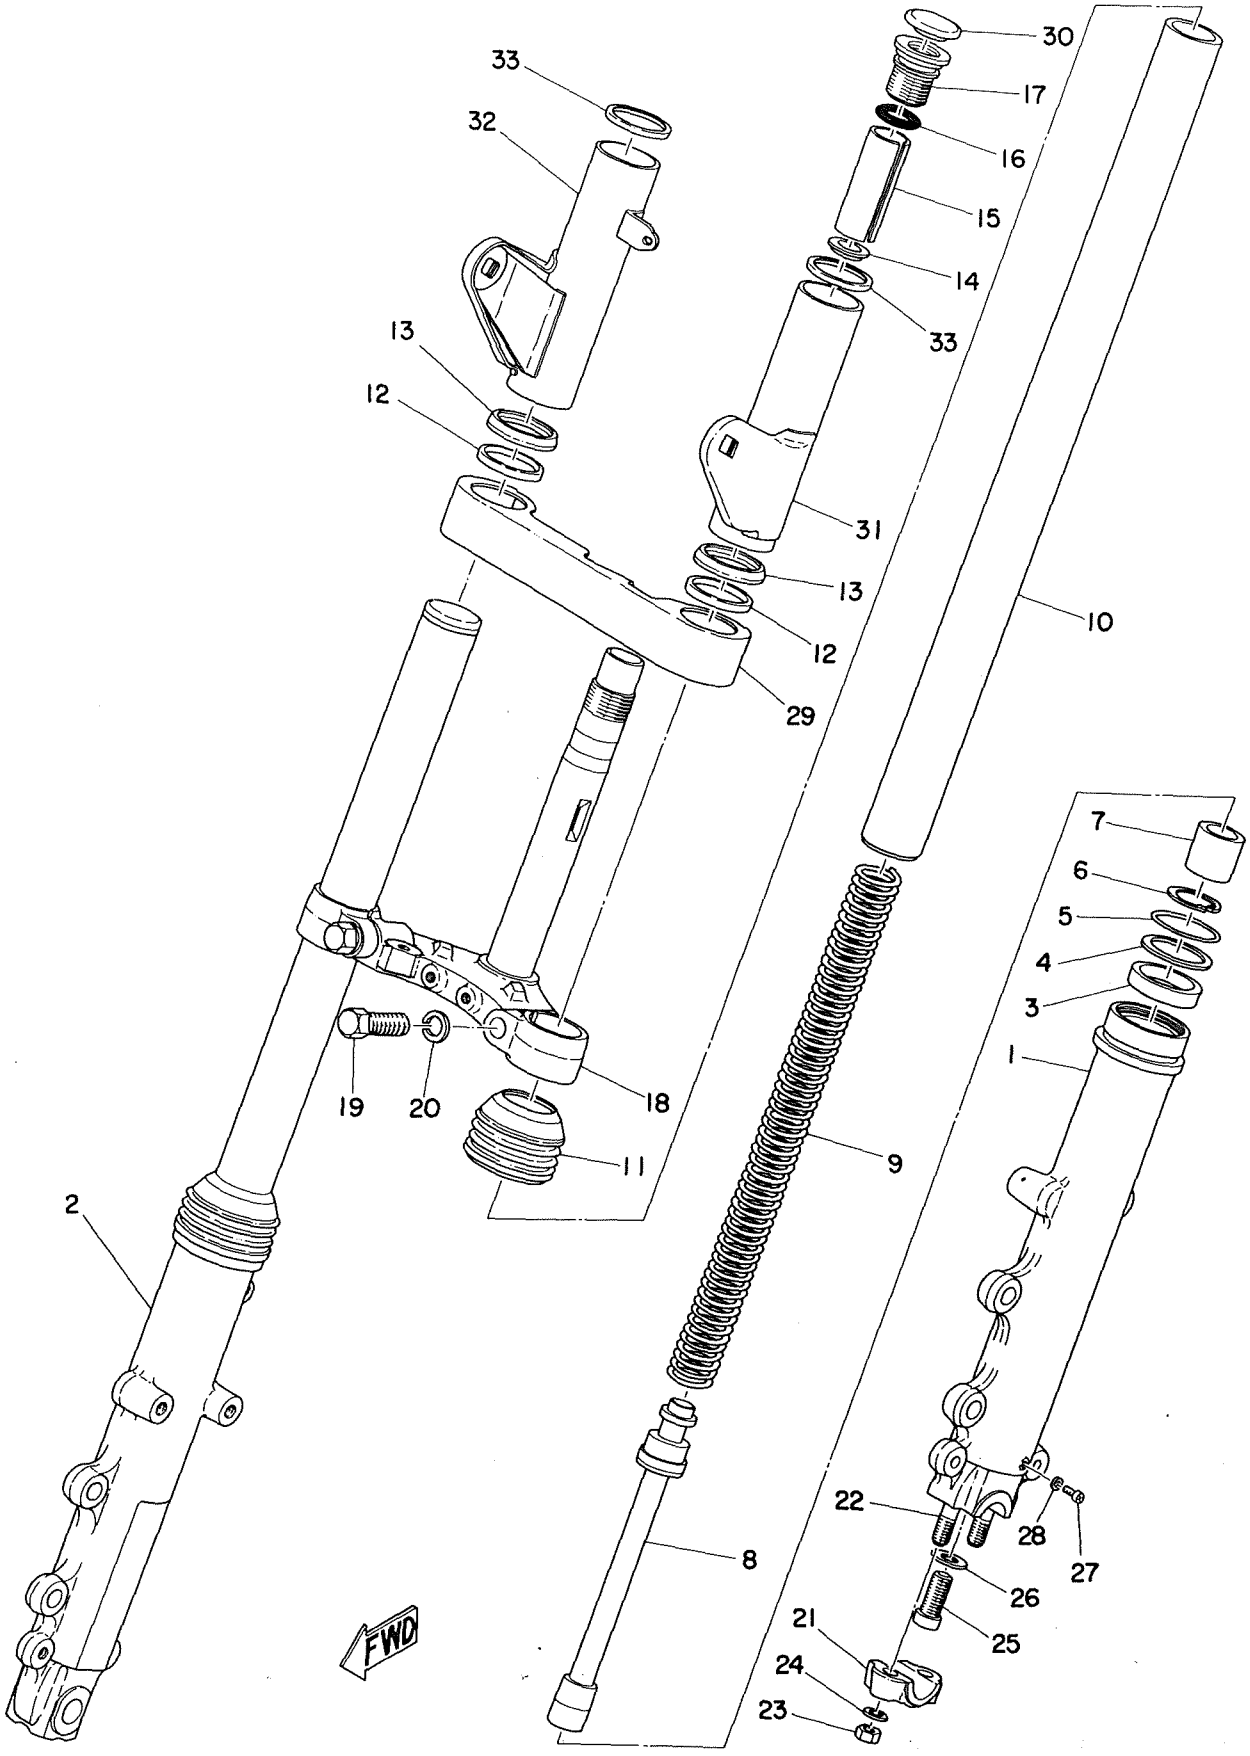

Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
31-23	98801-08100	. NUT	2		
31-24	92901-08100	. WASHER, spring	2		
31-25	278-23181-50	. BOLT	1		
31-26	278-23158-50	. PACKING	1		
31-27	122-23119-01	. PLUG, drain	2		
31-28	122-23129-00	. PACKING	2		
31-29	341-23122-51	. COVER, outer	2		
31-30	341-23168-50	. CAP	2		
31-31	341-23121-50-M5	COVER, upper left	1		Metallic Frake Gold
	341-23121-50-K1	COVER, upper left	1		Competition Green
31-32	341-23131-50-M5	COVER, upper right	1		Metallic Frake Gold
	341-23131-50-K1	COVER, upper right	1		Competition Green
31-33	341-23115-50	GUIDE, cover upper	2		


Fig. 32 HANDLE · WIRE

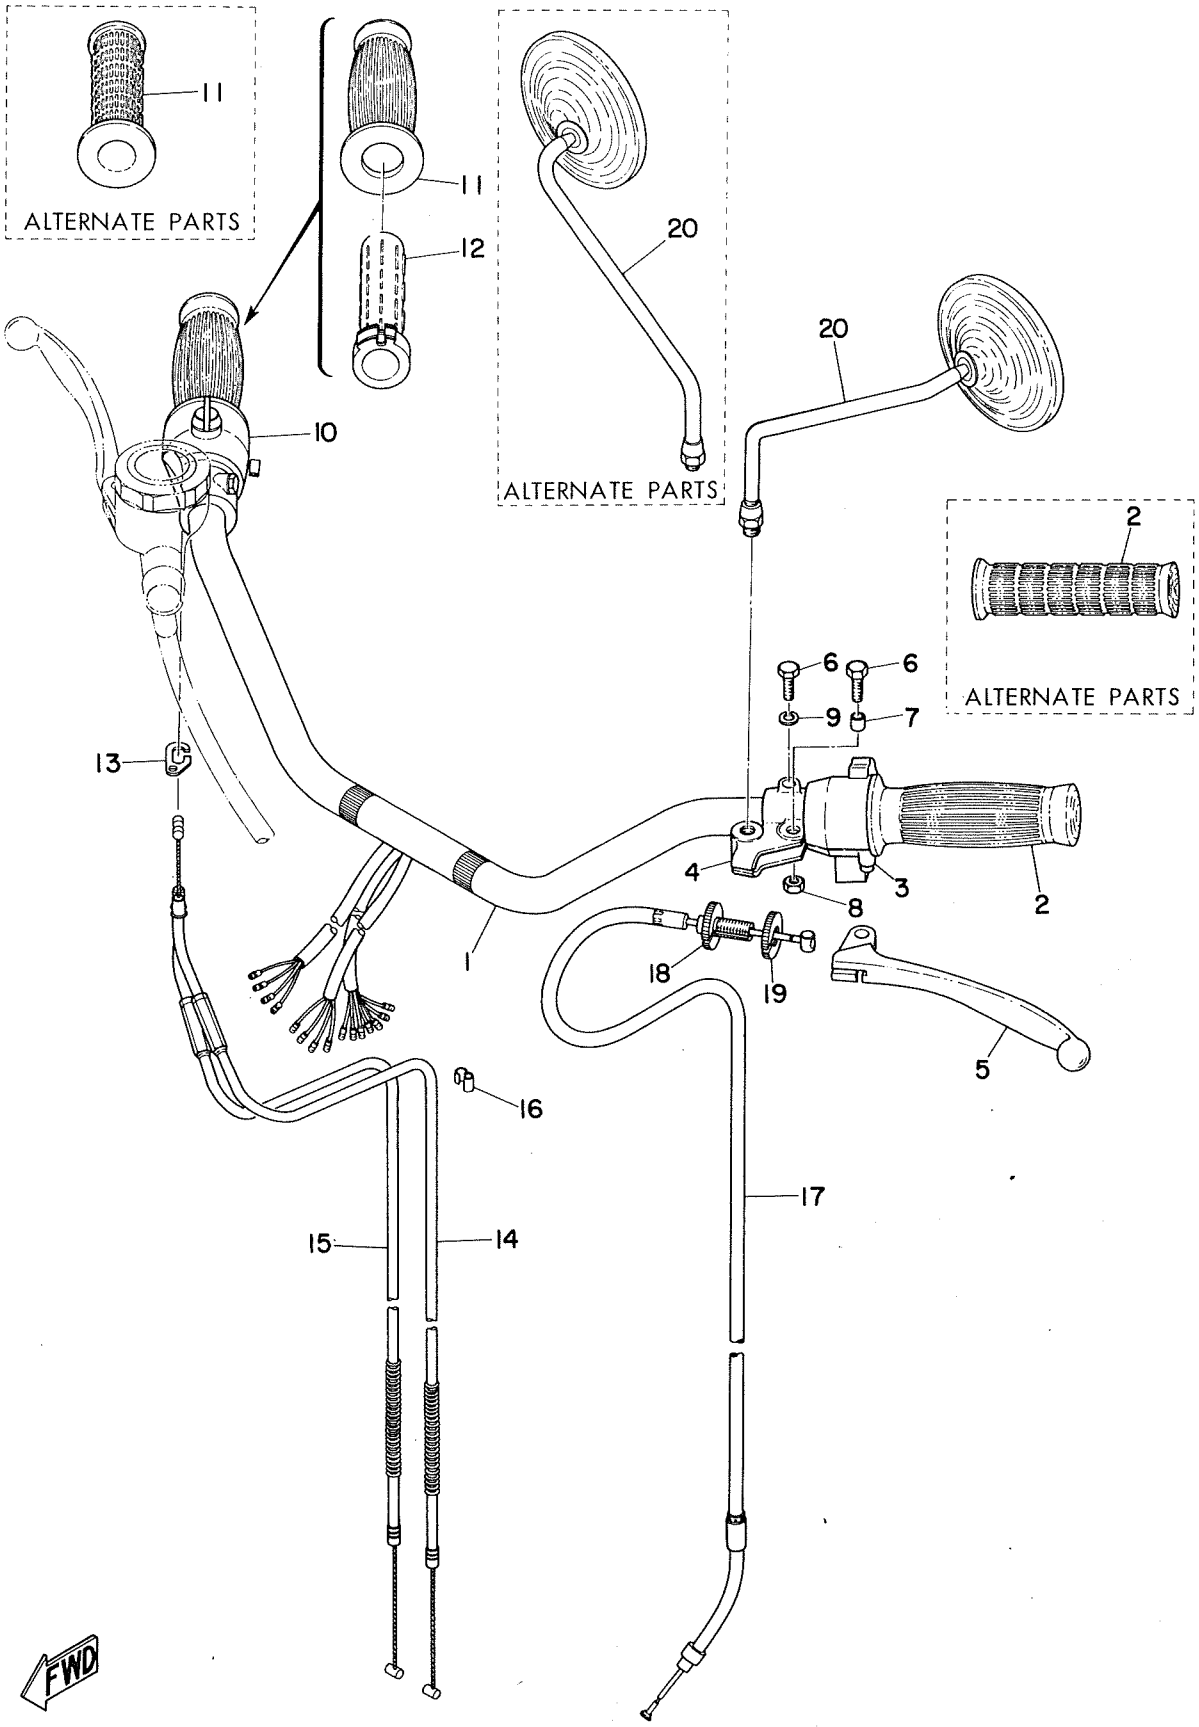

HANDLE · WIRE

Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
32- 1	341-26111-00	HANDLE	1		
32- 2	235-26241-00	GRIP, left	1		
	341-26241-00	GRIP, left	1		Alternate Parts
32- 3	341-83972-00	SWITCH, handle 4 left	1		
32- 0-1	341-82910-00	LEVER HOLDER ASS'Y, left ...	1		
32- 4	341-82911-00	. HOLDER, lever left	1		
32- 5	341-83912-00	. LEVER, left	1		
32- 6	91203-06020	. BOLT	2		
32- 7	214-83913-00	. COLLAR, lever	1		
32- 8	98801-06300	. NUT	1		
32- 9	92901-06100	. WASHER, spring	1		
32-10	341-83963-00	SWITCH, handle 3 right	1		
32-11	235-26242-00	GRIP, right	1		
	341-26242-00	GRIP, right	1		Alternate Parts
32-12	256-26243-00	TUBE, guide	1		
32-13	341-26393-00	HOLDER, wire guide	1		
32-14	341-26311-00	WIRE, throttle 1	1		
32-15	341-26312-00	WIRE, throttle 2	1		
32-16	207-26391-00	CLIP, wire	2		
32-17	341-26335-03	WIRE, clutch	1		
32-18	214-26337-01	BOLT, adjusting 1	1		
32-19	256-26344-00	NUT, wire adjusting	1		
32-20	341-26290-10	BACK MIRROR ASS'Y, left	1		STD
	341-26290-01	BACK MIRROR ASS'Y, right ...	1		Alternate Parts


Fig. 33 MASTER CYLINDER · BRAKE HOSE

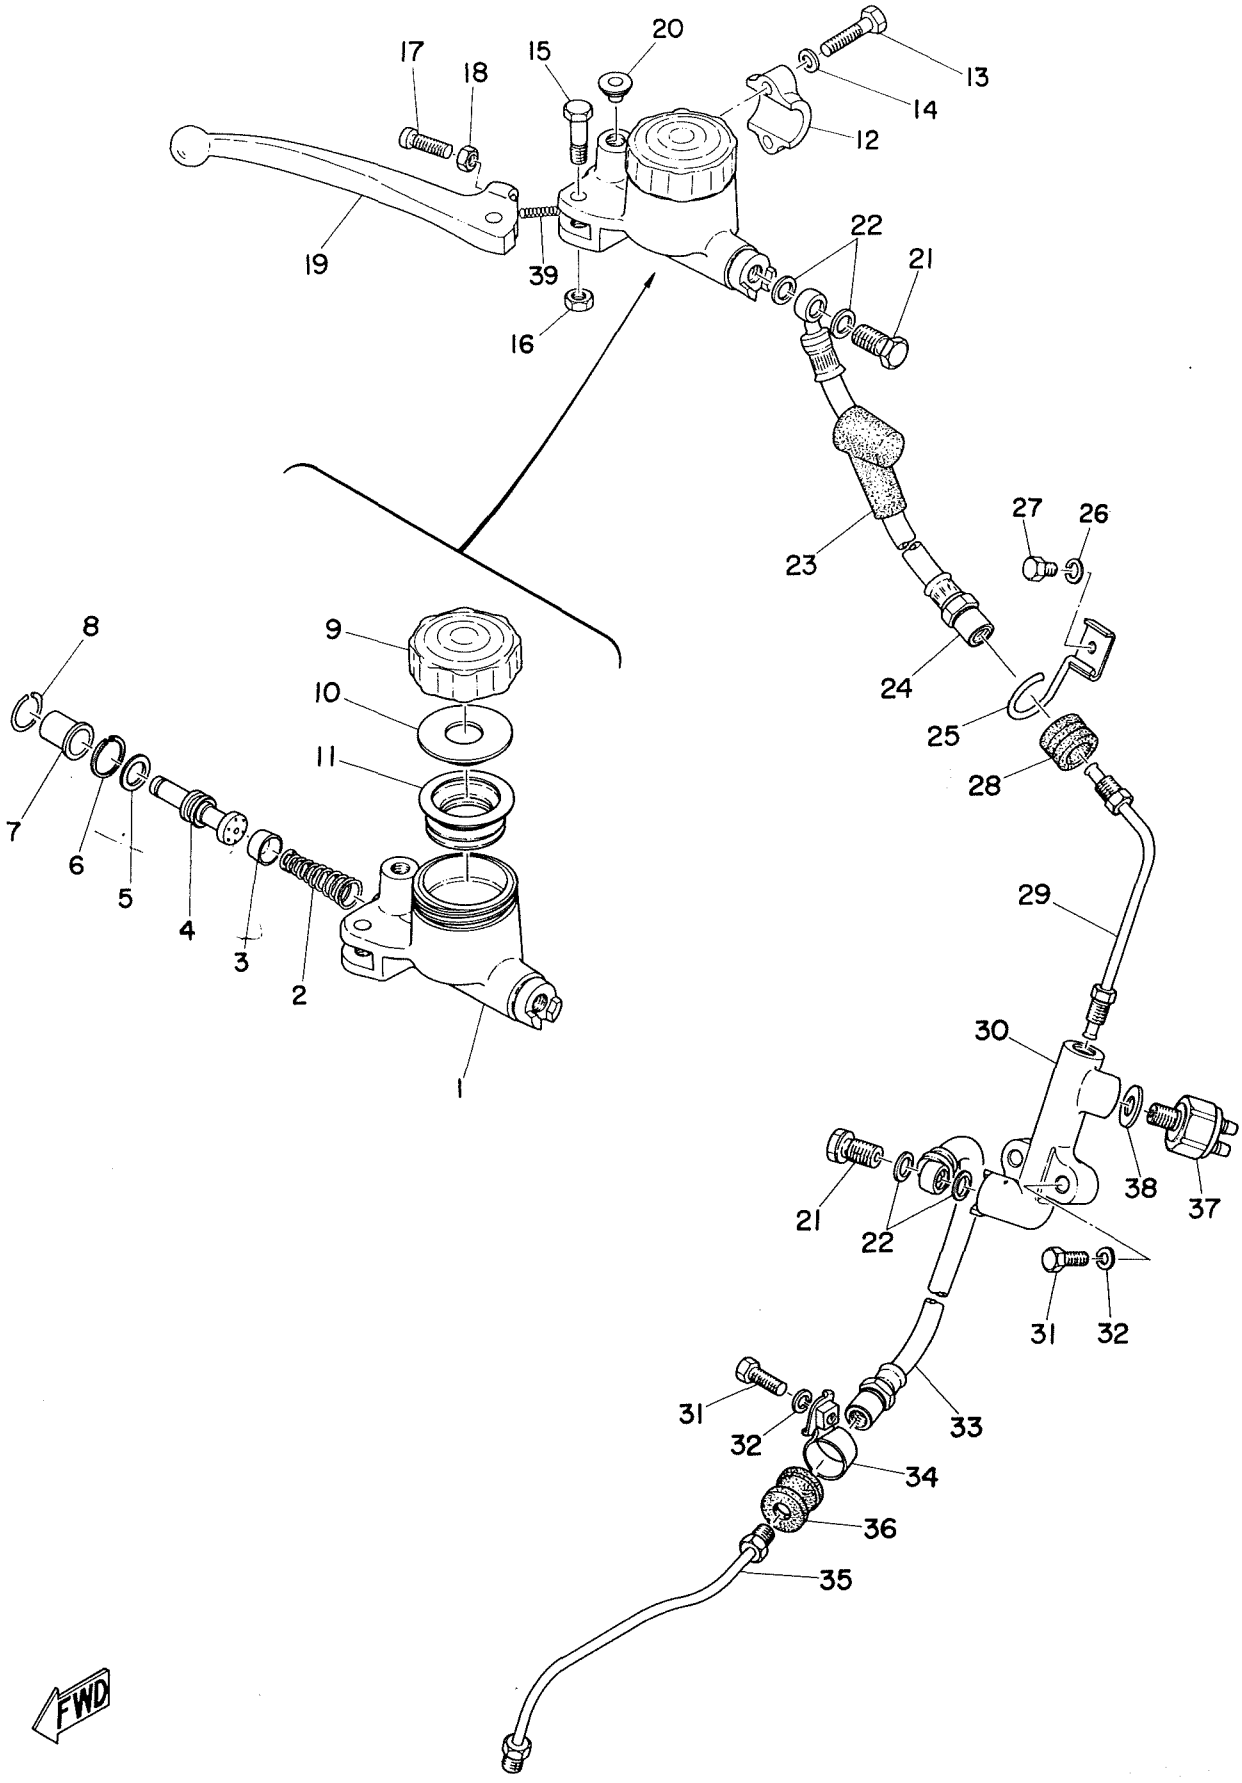

MASTER CYLINDER · BRAKE HOSE


Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
33- 0-1	341-25850-00	MASTER CYLINDER ASS'Y	1		
33- 1	341-25851-00	. BODY, master cylinder	1		Not for sale
33- 2	341-25863-00	. SPRING, conical	1		
33- 3	341-25858-00	. CUP, cylinder 1	1		
33- 4	341-25809-00	. PISTON ASS'Y	1		
33- 5	341-25857-00	. PLATE, stopper	1		
33- 6	341-25866-00	. CIRCLIP	1		
33- 7	341-25868-00	. BOOT, master cylinder	1		
33- 8	341-25869-00	. STOPPER, boot	1		
33- 9	341-25852-00	. CAP, reserver	1		
33-10	341-25855-00	. PLATE, diaphragm	1		
33-11	341-25854-00	. DIAPHRAGM, reserver	1		
33-12	341-25867-00	BRACKET, master	1		
33-13	91101-06025	BOLT	2		
33-14	92901-06100	WASHER, spring	2		
33-15	341-83925-00	SCREW, lever fitting	1		
33-16	98801-06300	NUT	1		
33-17	306-83928-01	SCREW, adjusting	1		
33-18	306-83927-00	NUT, adjusting	1		
33-19	341-83922-00	LEVER, right	1		
33-20	341-26329-00	PLUG, blind	1		
33-21	306-25877-00	BOLT, oil	2		
33-22	306-25878-00	WASHER, oil bolt	4		

Fig. 33 MASTER CYLINDER · BRAKE HOSE

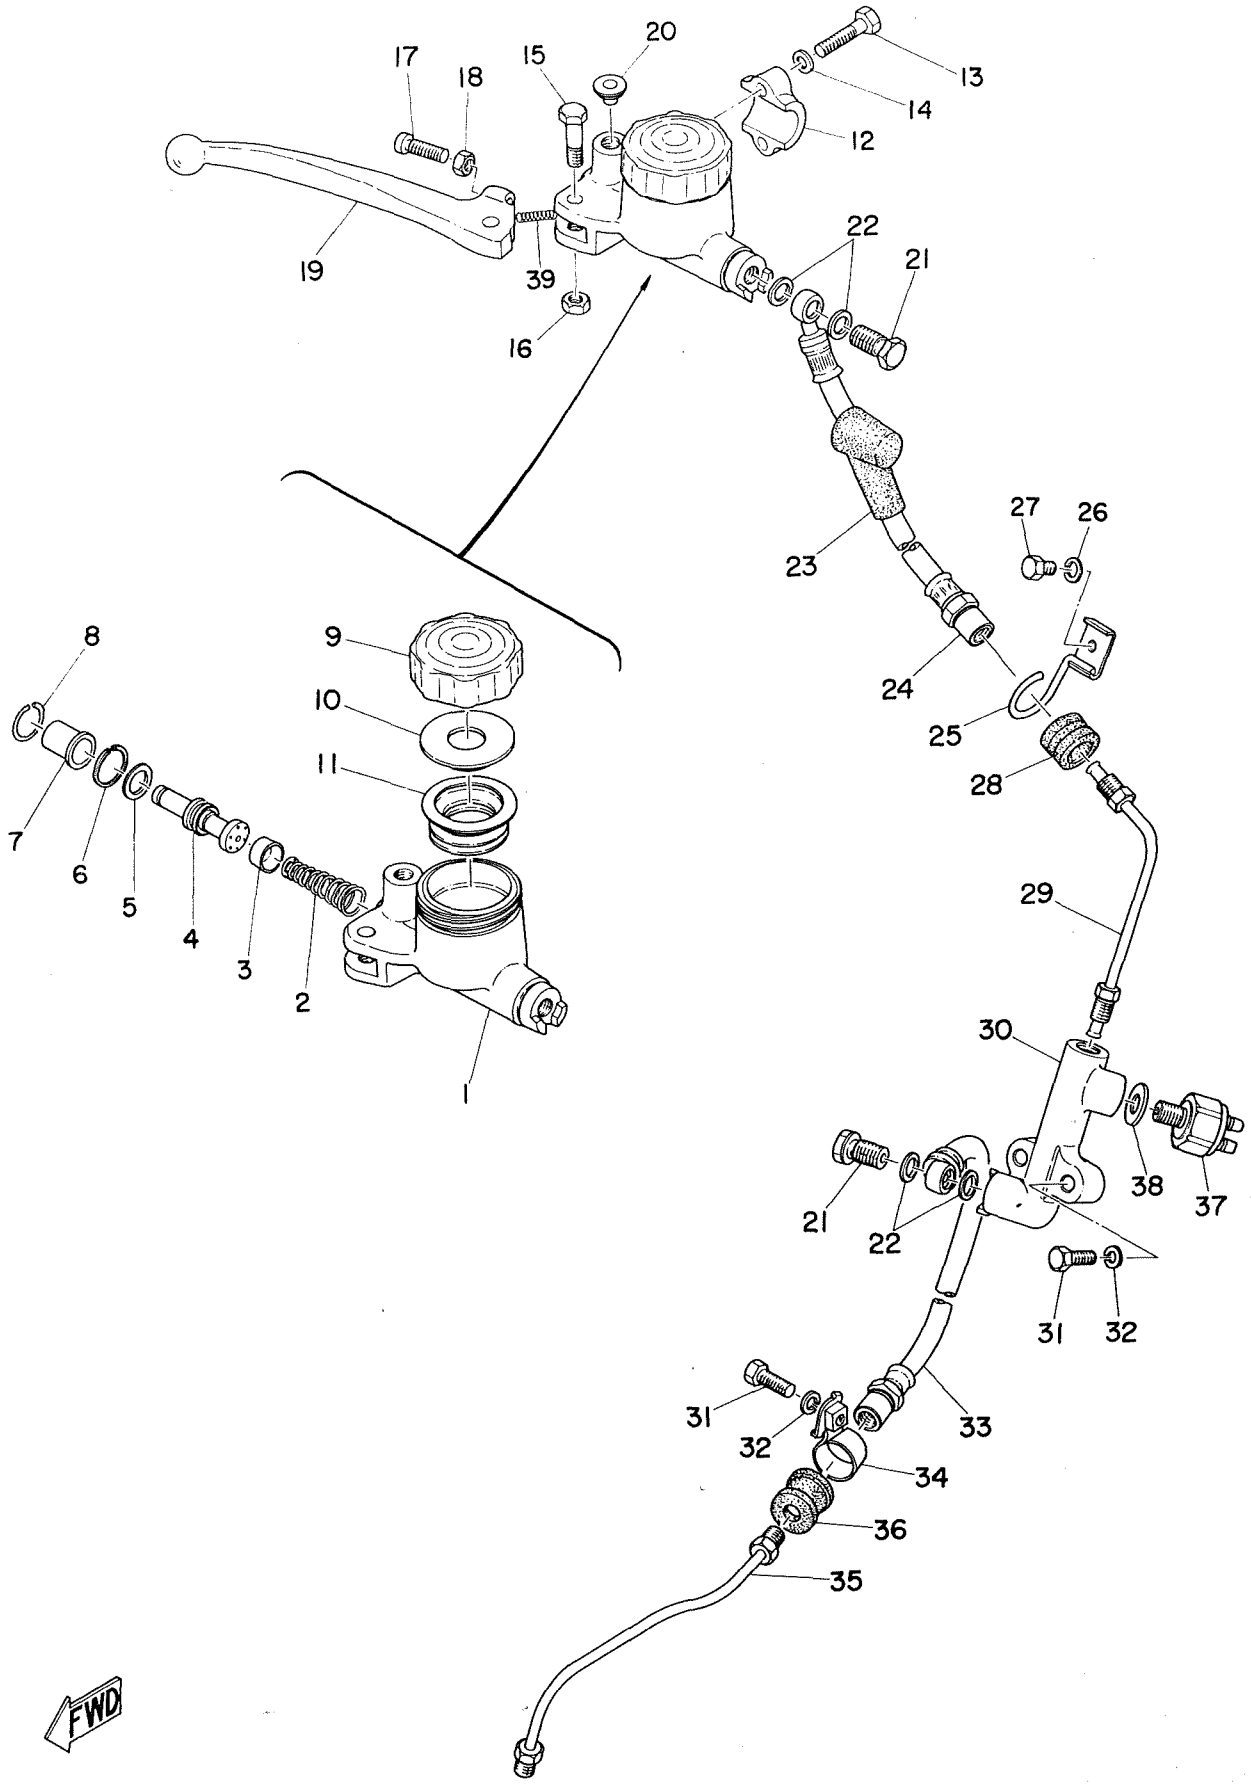

Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
33-23	306-25862-00	BOOT, master cylinder	1		
33-24	341-25872-00	HOSE, brake 1	1		
33-25	341-25887-01	HOLDER, brake hose 3	1		
33-26	92901-06100	WASHER, spring	1		
33-27	91201-06012	BOLT	1		
33-28	341-25881-00	RUBBER, brake hose	1		
33-29	341-25883-01	PIPE, brake 3	1		
33-30	341-25885-03	JOINT	1		
33-31	91201-06025	BOLT	3		
33-32	92901-06100	WASHER, spring	3		
33-33	341-25873-00	HOSE, brake 2	1		
33-34	306-25876-00	HOLDER, brake hose 2	1		
33-35	306-25871-00	PIPE, brake 1	1		
33-36	306-25881-00	RUBBER, brake hose	1		
33-37	341-83980-30	FRONT STOP SWITCH ASS'Y ...	1		
33-38	341-83909-00	WASHER, special	1		
33-39	306-83924-00	SPRING, lever return	1		


Fig. 34 FUEL TANK

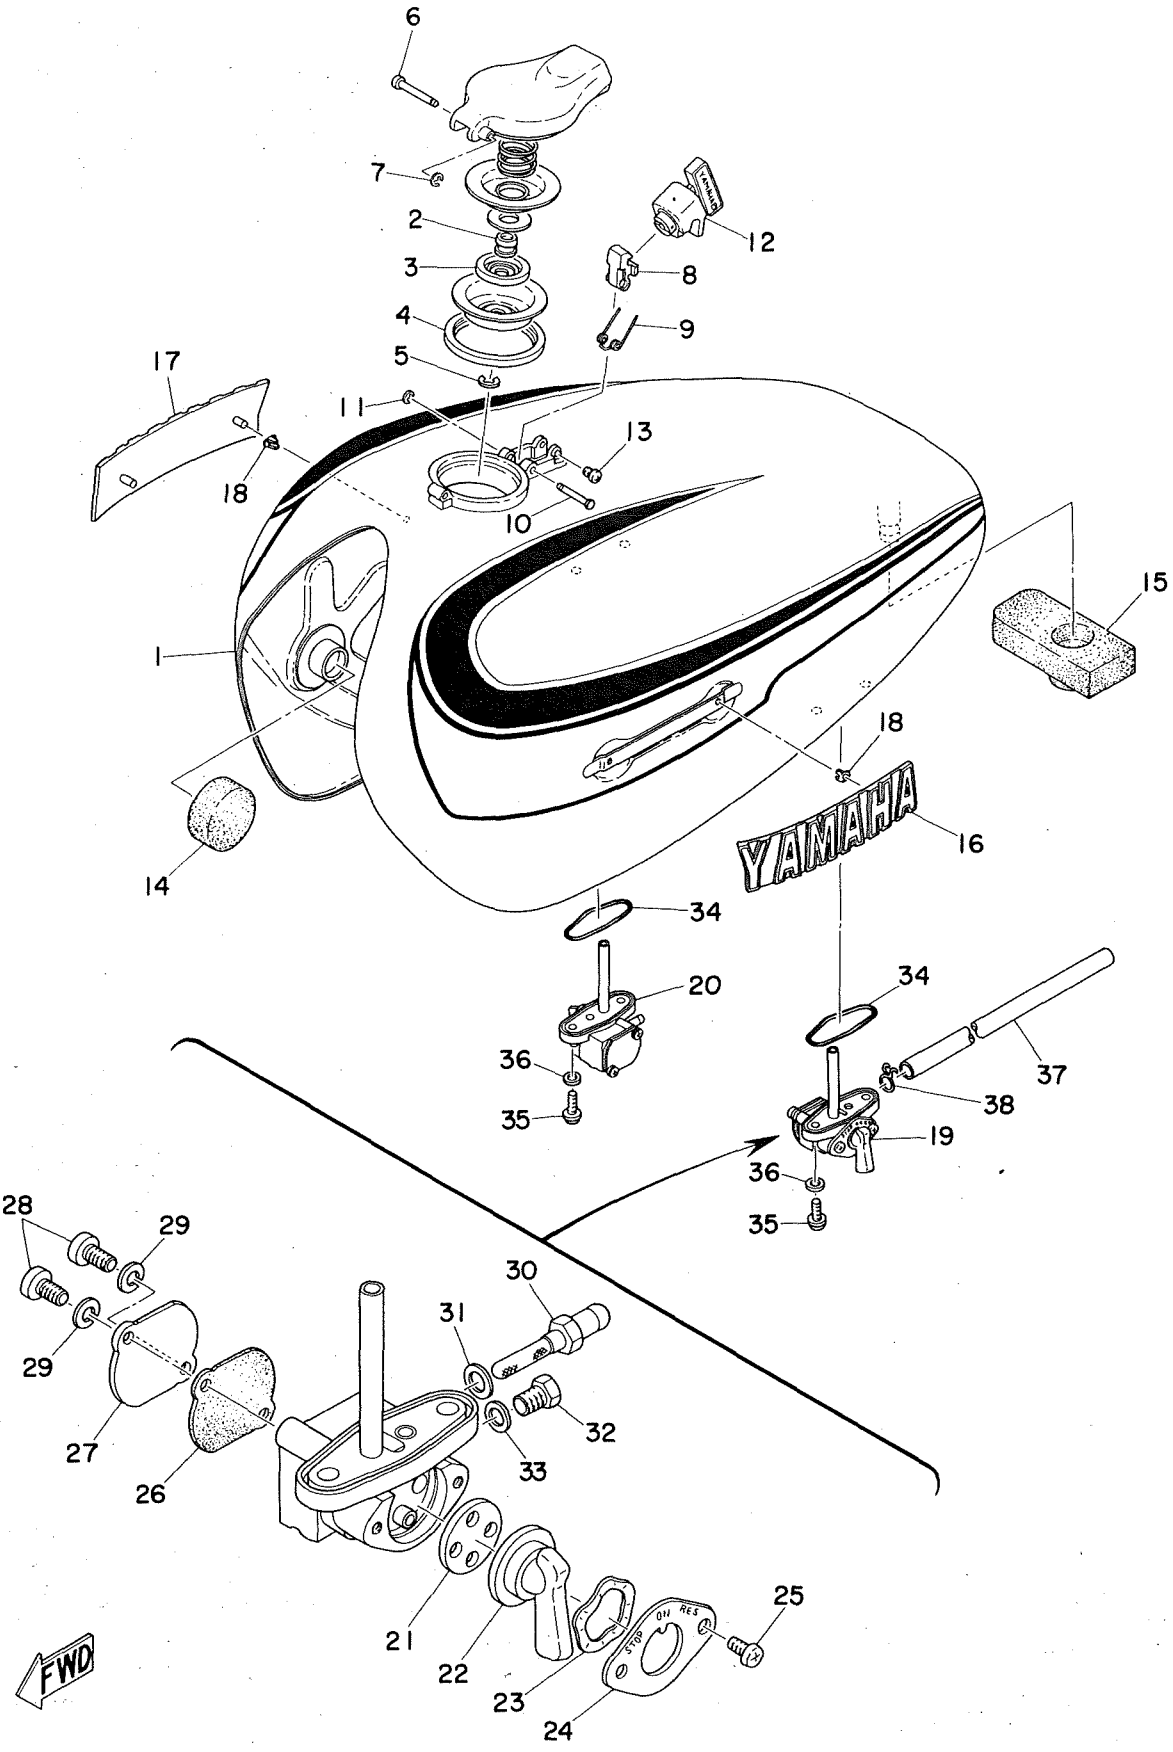

FUEL TANK

Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
34- 1	341-24110-11-01	FUEL TANK COMP. (19 ℓ)	1		Metallic Flake Gold
	341-24110-11-02	FUEL TANK COMP. (19 ℓ)	1		Competition Green
34- 0-1	341-24653-00	CAP ASS'Y	1		
34- 2	308-24642-00	. GASKET, cap 2	1		
34- 3	308-24641-00	. GASKET, cap 1	1		
34- 4	341-24612-00	. PACKING, cap	1		
34- 5	93430-06005	. CIRCLIP (E-6)	1		
34- 6	308-24623-00	PIN 1	1		
34- 7	93430-02001	CIRCLIP (E-2)	1		
34- 8	341-24628-00	HOOK	1		
34- 9	341-24637-00	SPRING	1		
34-10	308-24624-00	PIN 2	1		
34-11	93430-02001	CIRCLIP (E-2)	1		
34-12	341-24602-01	KEY COMP.	1		
34-13	98501-04018	SCREW, panhead	1		
34-14	156-24181-00	DAMPER, tank locating	2		
34-15	341-24181-00	DAMPER, locating	1		
34-16	341-24161-12	EMBLEM, fuel tank left	1		
34-17	341-24162-12	EMBLEM, fuel tank right	1		
34-18	360-24143-00	NUT	4		
34-19	256-24500-00	FUEL COCK ASS'Y, left	1		
34-20	256-24510-00	FUEL COCK ASS'Y, right	1		
34-21	137-24523-00	. VALVE	2		


Fig. 34 FUEL TANK

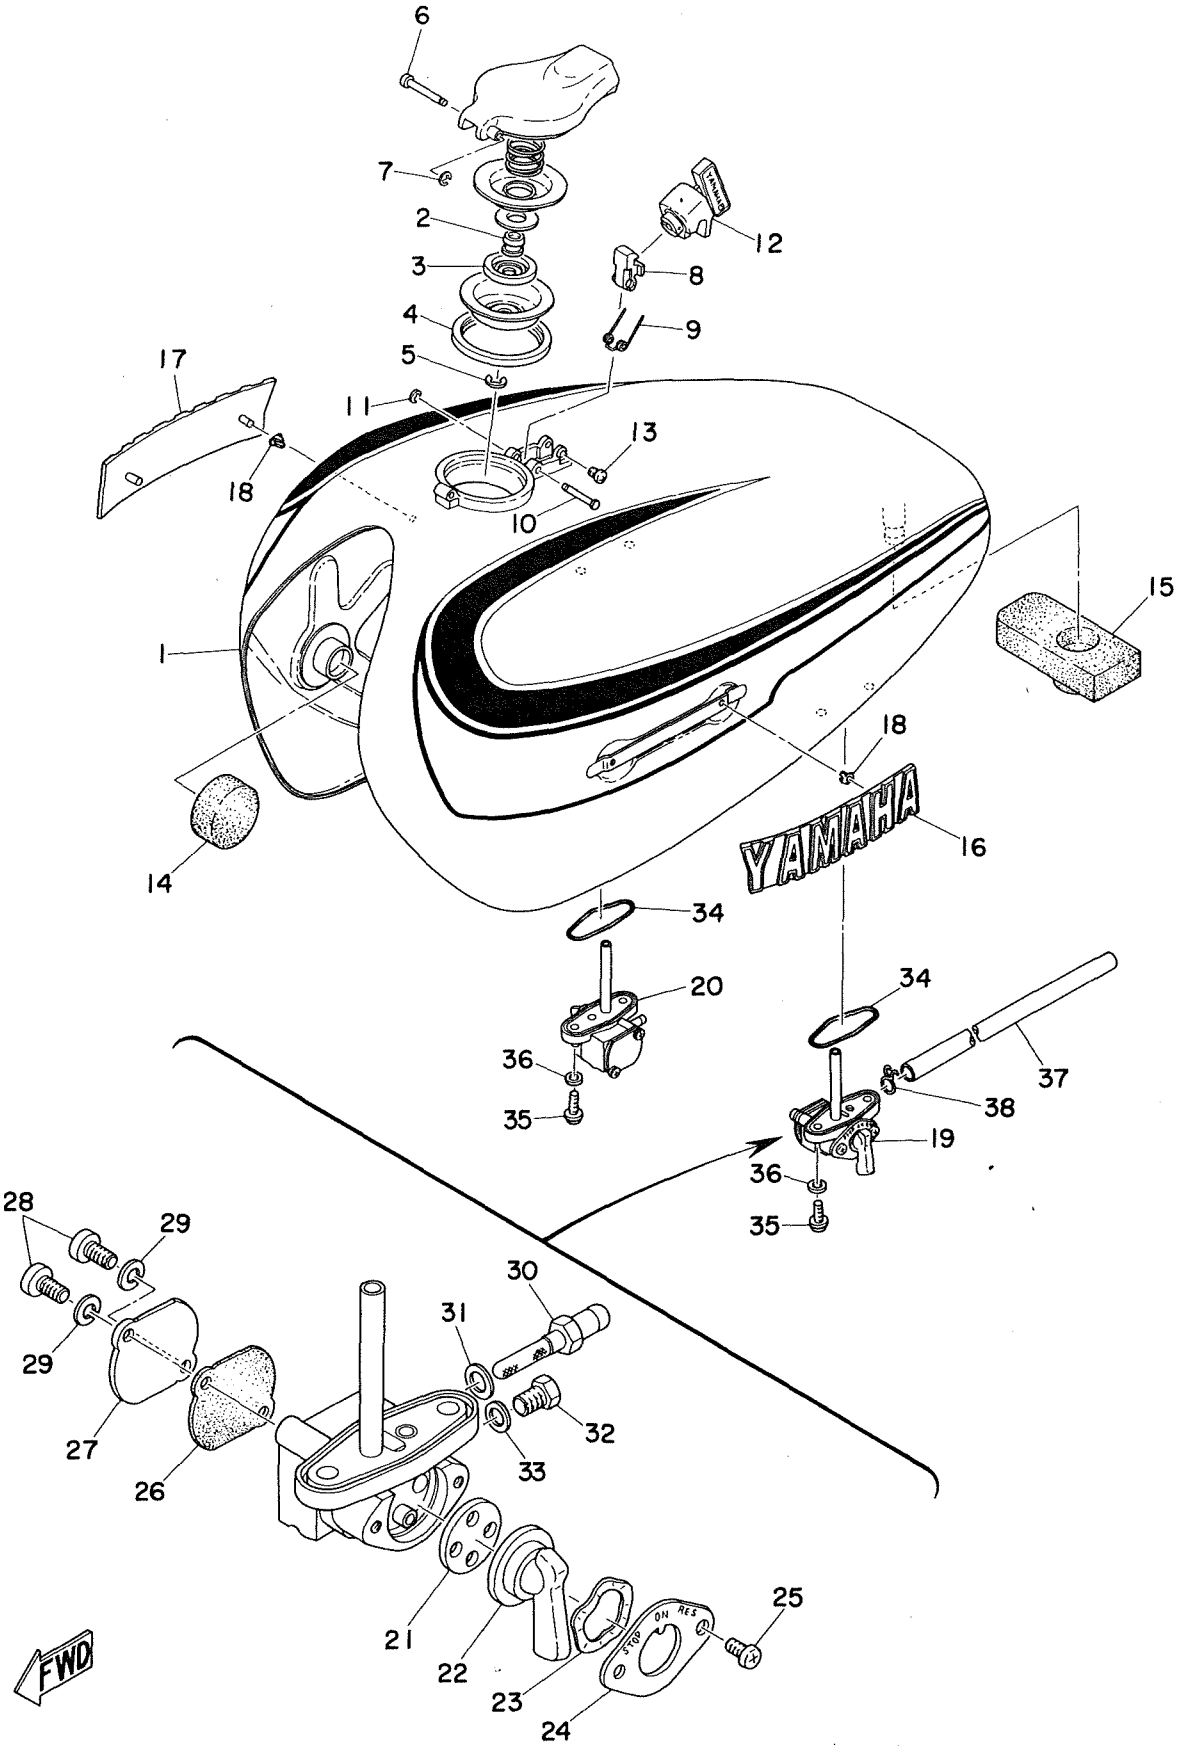

FUEL TANK

Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
34-22	256-24524-00	. LEVER, cock	2		
34-23	132-24518-00	. WASHER, wave	2		
34-24	132-24525-00	. PLATE, lever fitting	2		
34-25	98501-03006	. SCREW, panhead	4		
34-26	256-24522-00	. PACKING, filter	2		
34-27	256-24521-00	. COVER, filter	2		
34-28	98501-04008	. SCREW, panhead	4		
34-29	92901-04100	. WASHER, spring	4		
34-30	256-24537-00	. NIPPLE	2		
34-31	256-24528-00	. GASKET	2		
34-32	256-24543-00	. PLUG, drain	2		
34-33	801-24437-00	. GASKET	2		
34-34	256-24512-00	. GASKET, body	2		
34-35	256-24143-00	BOLT, cock connecting	4		
34-36	178-14766-00	WASHER, protector (6.2-12-1.5) ..	4		
34-37	132-24311-00	PIPE, fuel (5-170)	2		
34-38	101-24356-00	CLIP, pipe 2	4		


Fig. 35 SEAT

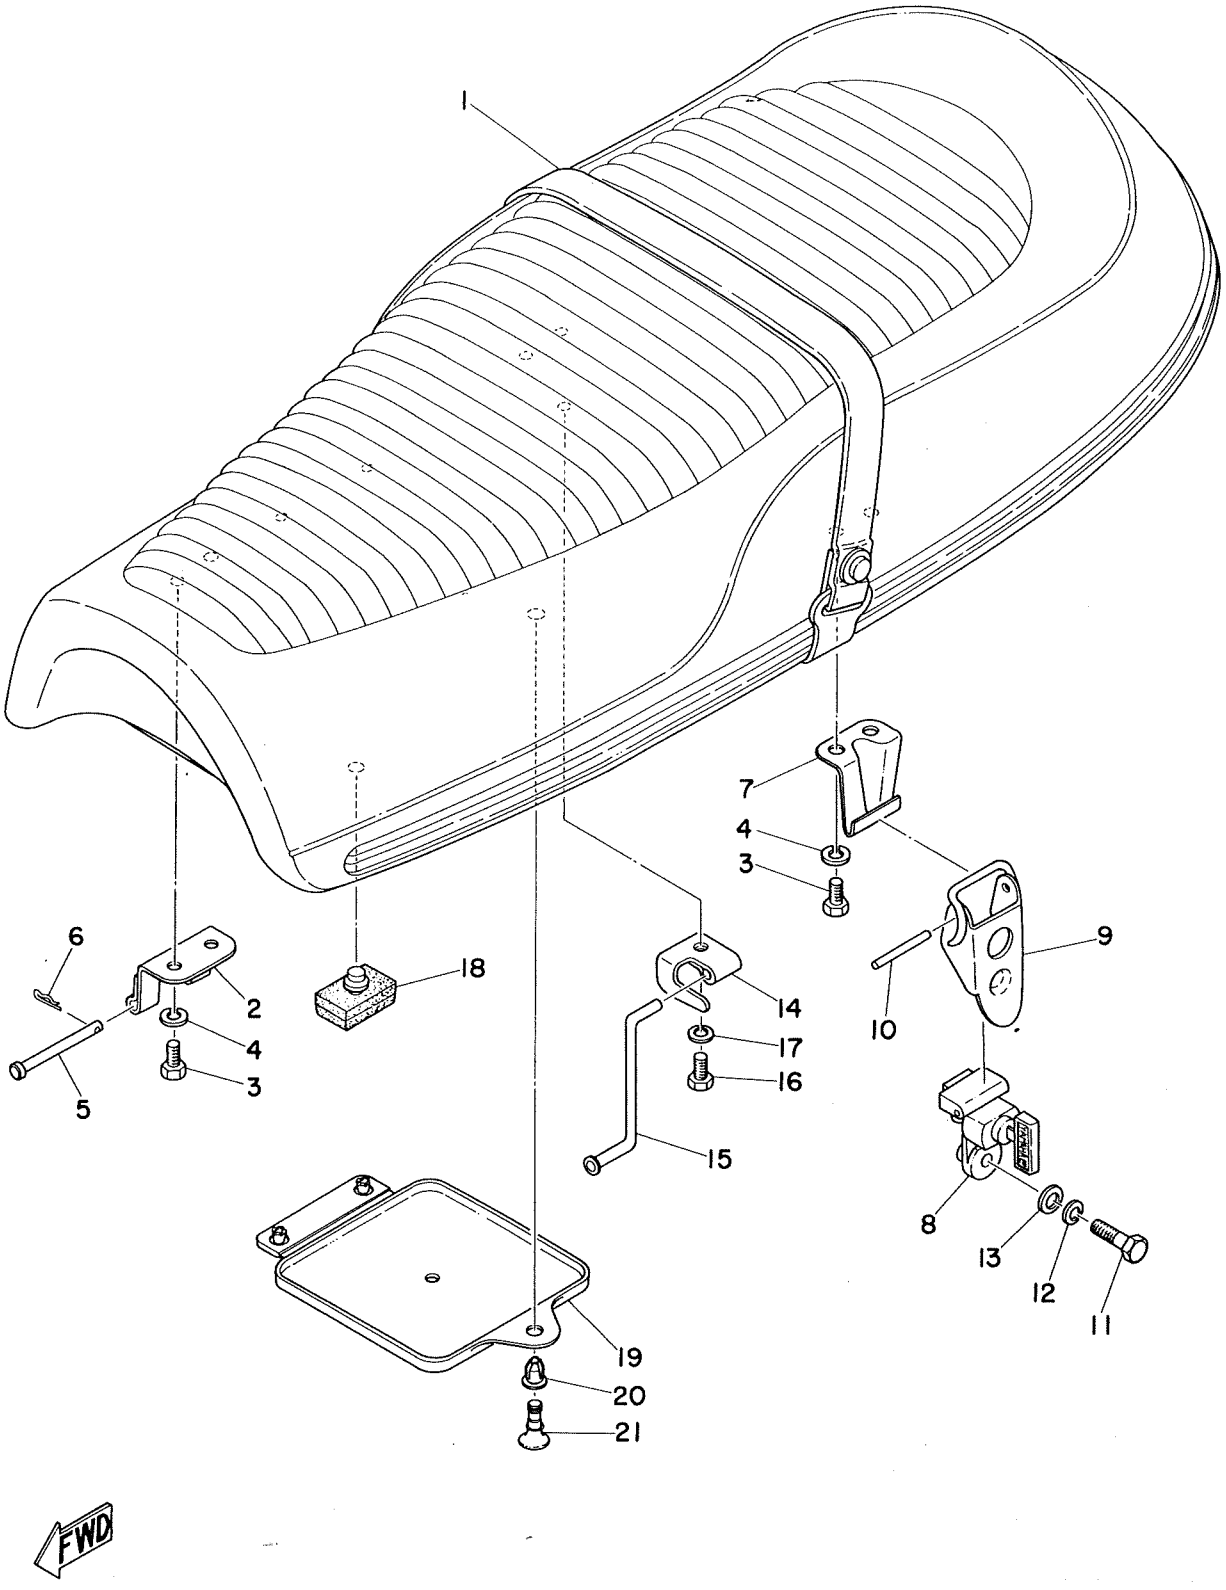

SEAT

Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
35- 1	341-24730-10	DOUBLE SEAT ASS'Y	1		
35- 1-1	341-24731-10	. COVER, double seat	1		
35- 2	307-24726-00-33	HINGE, seat	2		Yamaha Black
35- 3	91201-06012	BOLT	6		
35- 4	92901-06100	WASHER, spring	6		
35- 5	90240-05001	PIN, clevis	2		
35- 6	156-83525-00	CLIP	2		
35- 7	341-24728-00	BRACKET, seat 1	1		
35- 8	341-24705-00	SEAT LEVER ASS'Y	1		
35- 9	341-24776-00	. LEVER, seat	1		
35-10	341-24727-00	. PIN, seat fitting	1		
35-11	91201-06025	BOLT	1		
35-12	92901-06100	WASHER, spring	1		
35-13	92901-06200	WASHER, plain	1		
35-14	276-24748-00	BRACKET, seat stopper	1		
35-15	276-24768-00	STOPPER, seat	1		
35-16	91201-06012	BOLT	1		
35-17	92901-06100	WASHER, spring	1		
35-18	214-24724-00	DAMPER, seat	5		
35-19	341-28185-00	LID	1		
35-20	341-28187-00	GROMMET	1		
35-21	341-28188-00	PLUNGER	1		


Fig. 36 FRONT WHEEL

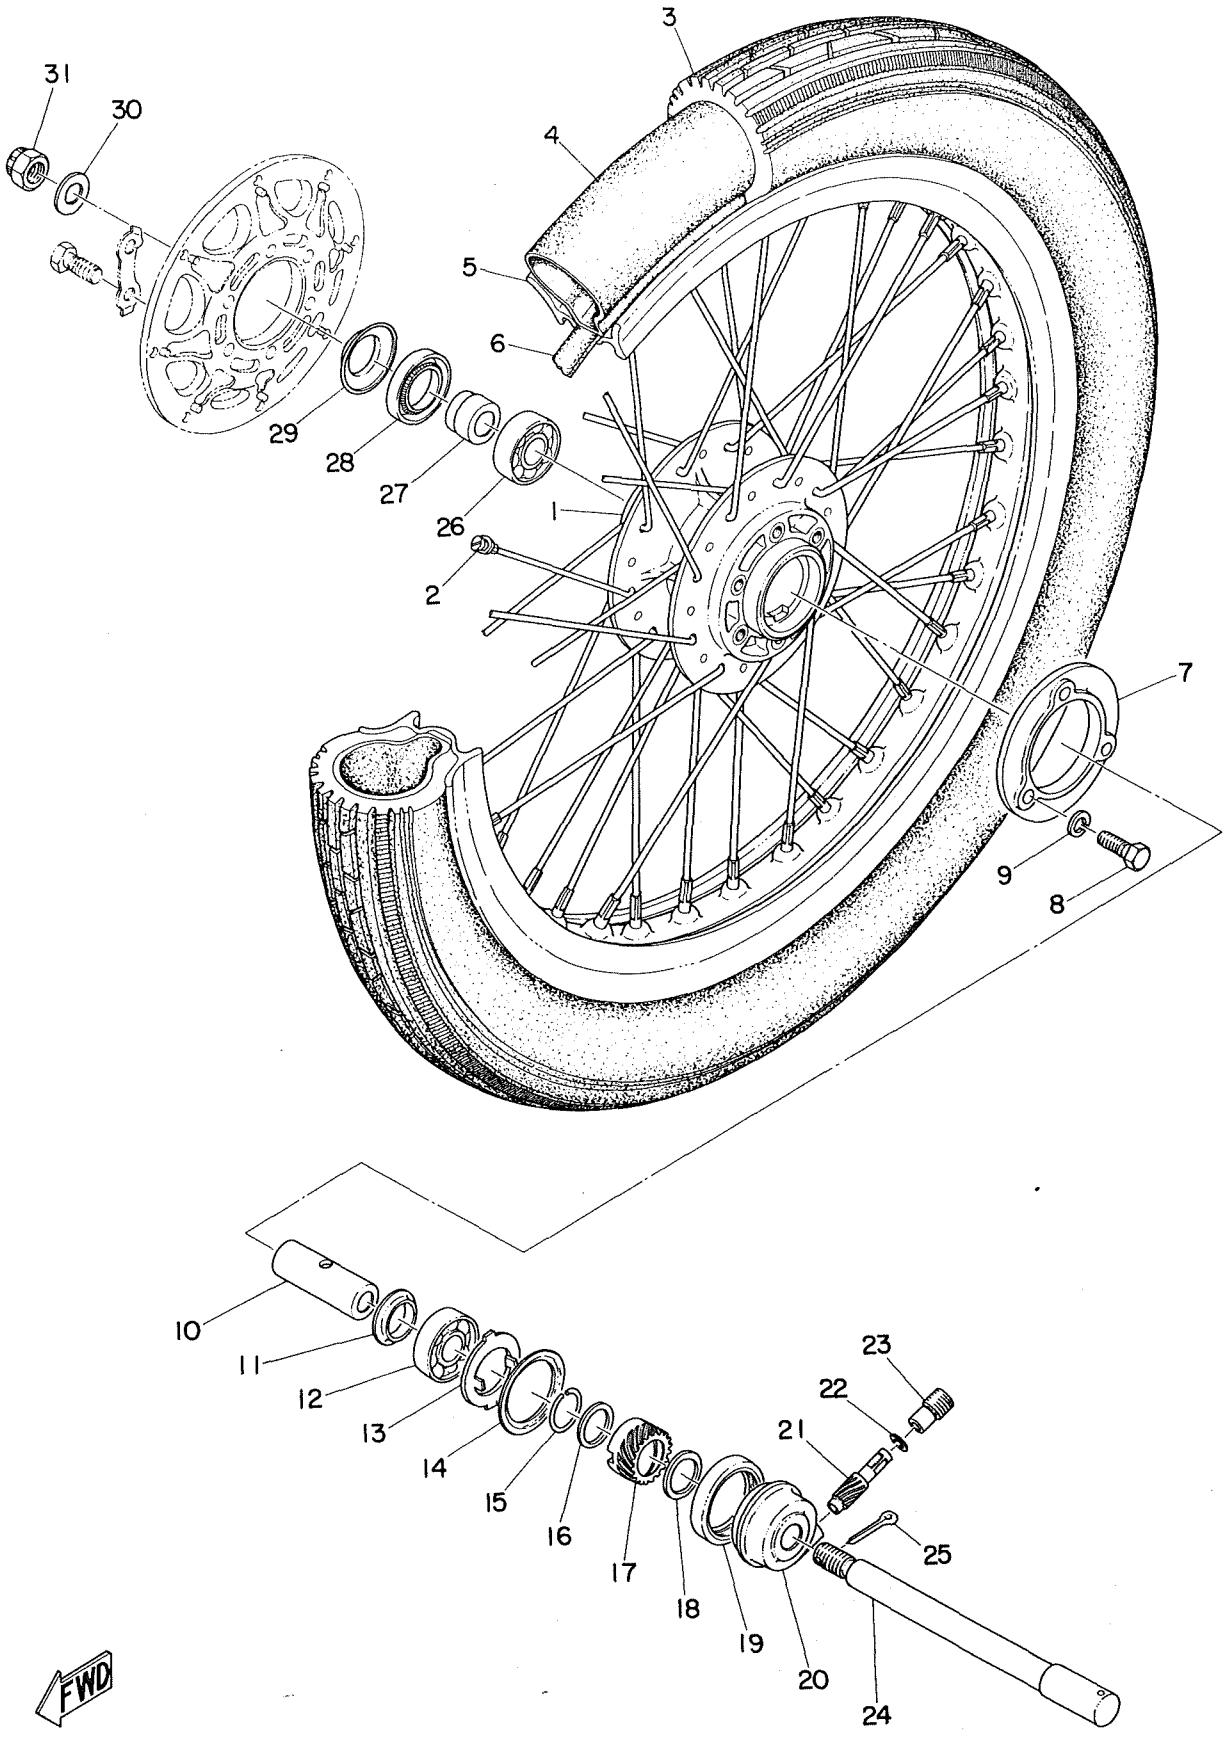

FRONT WHEEL

Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
36- 1	341-25111-01	HUB, front	1		
36- 2	341-25104-00	SPOKE SET	1s		
36- 3	94135-19104	TIRE, front (3.50-19-4PR)	U.R		DUNLOP
	94135-19126	TIRE, front (3.50-19-4PR)	1		YOKOHAMA
36- 4	94235-19034	TUBE (3.50-19)	1		
36- 5	94418-19069	RIM (1.85B-19)	1		
36- 6	94335-19026	BAND, rim (3.50-19)	1		
36- 7	341-25847-01	COVER, housing	1		
36- 8	341-25411-00	BOLT, fitting	3		
36- 9	92901-08100	WASHER, spring	3		
36-10	341-25117-01	SPACER, bearing	1		
36-11	152-25115-00	FLANGE, spacer	1		
36-12	93306-30304	BEARING (B6303Z)	1		
36-13	341-25149-00	CLUTCH, meter	1		
36-14	341-25846-00	RETAINER, clutch meter	1		
36-15	341-25137-00	RING, stop	1		
36-16	341-25147-00	WASHER, thrust 2 (25-29-1.0) ...	1		
36-17	341-25135-01	GEAR, drive	1		
36-18	152-17226-00	WASHER, thrust 1 (25-32-0.1) ...	1		
36-19	93102-28022	OIL SEAL (SD28-47-7)	1		
36-20	341-25191-01	HOUSING, gear unit	1		
36-21	306-25138-00	GEAR, meter	1		
36-22	102-18416-00	WASHER (6.2-9.5-0.8)	1		


Fig. 36 FRONT WHEEL

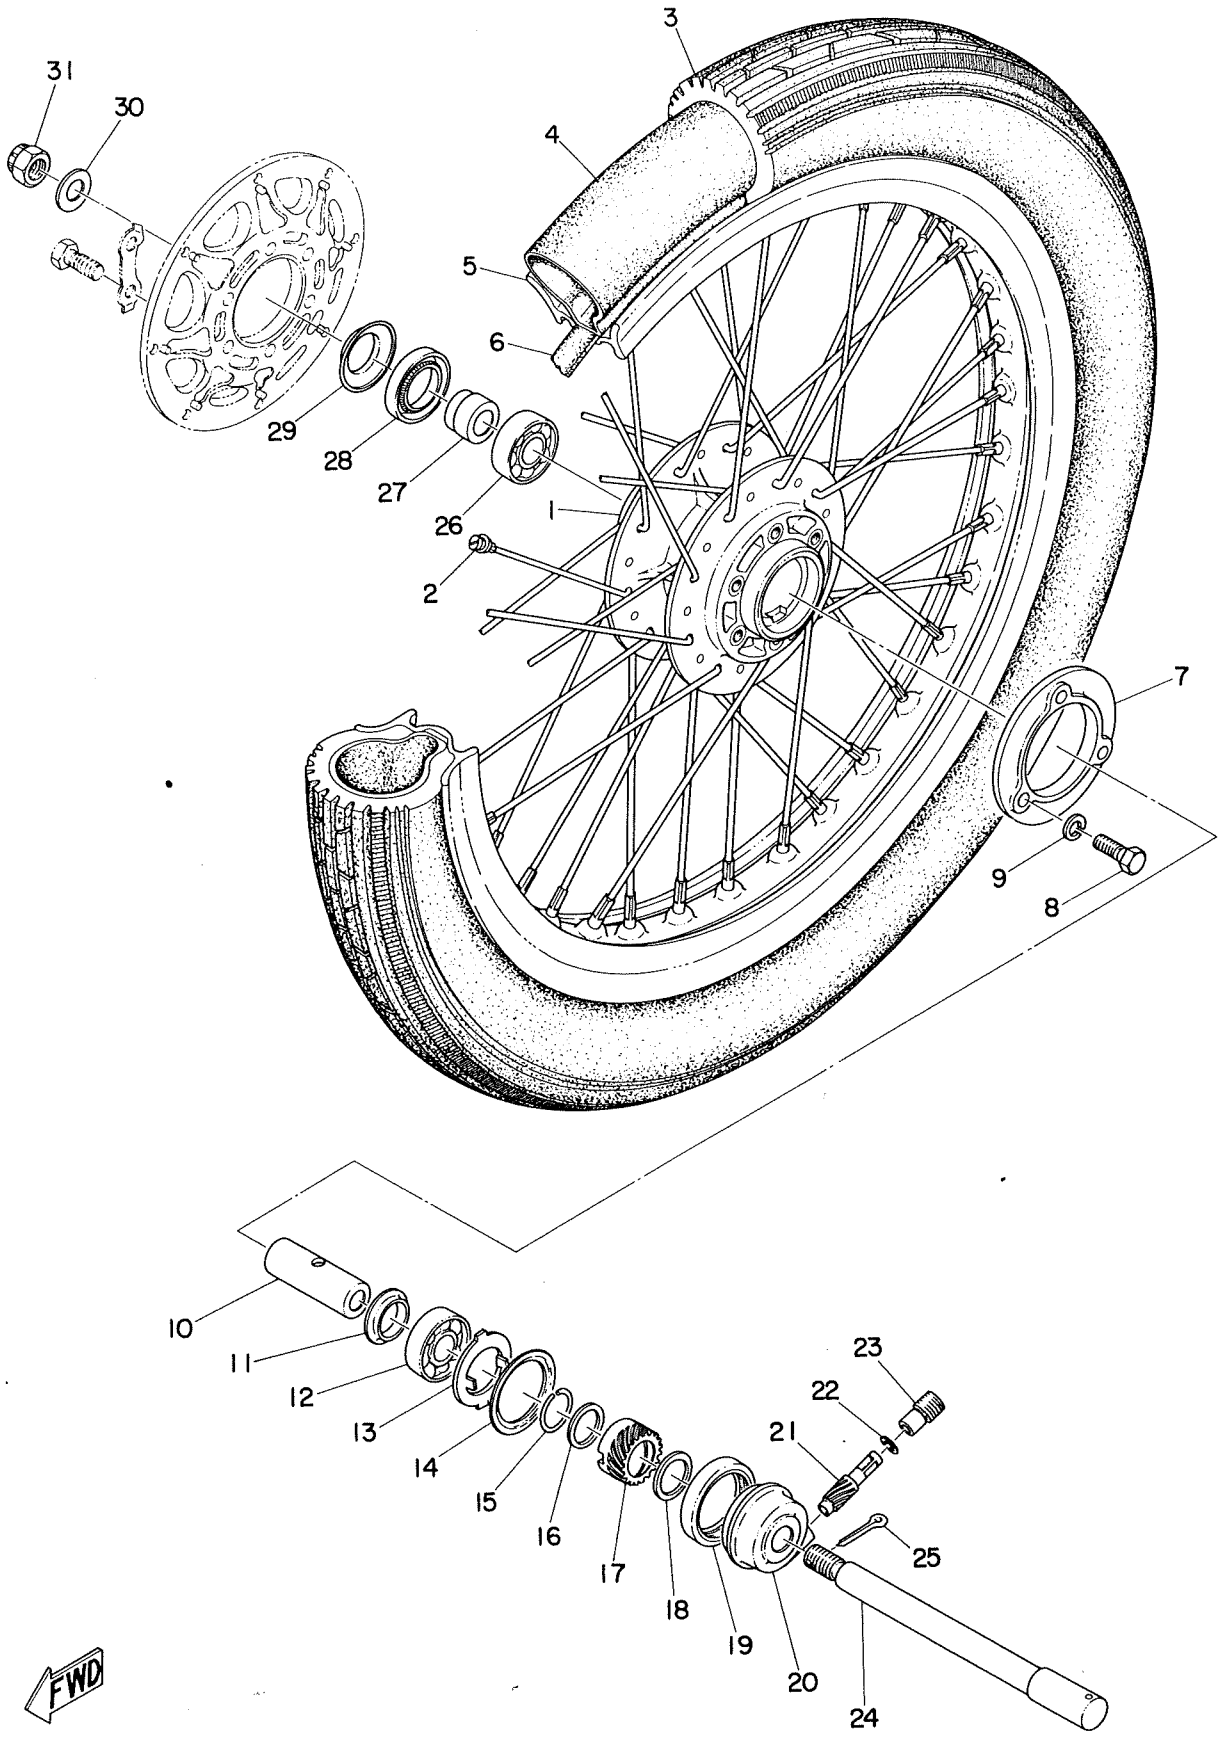

FRONT WHEEL

Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
36-23	306-25136-00	BUSHING	1		
36-24	341-25181-01	SHAFT, wheel	1		
36-25	91401-30028	PIN, cotter	1		
36-26	93306-30301	BEARING (B6303)	1		
36-27	341-25183-00	COLLAR, shaft	1		
36-28	93105-45017	OIL SEAL (SDD-45-56-6)	1		
36-29	341-25118-00	COVER, dust	1		
36-30	92901-14200	WASHER, plain	1		
36-31	214-25182-01	NUT, shaft	1		


Fig. 37 DISK BRAKE · CALIPER

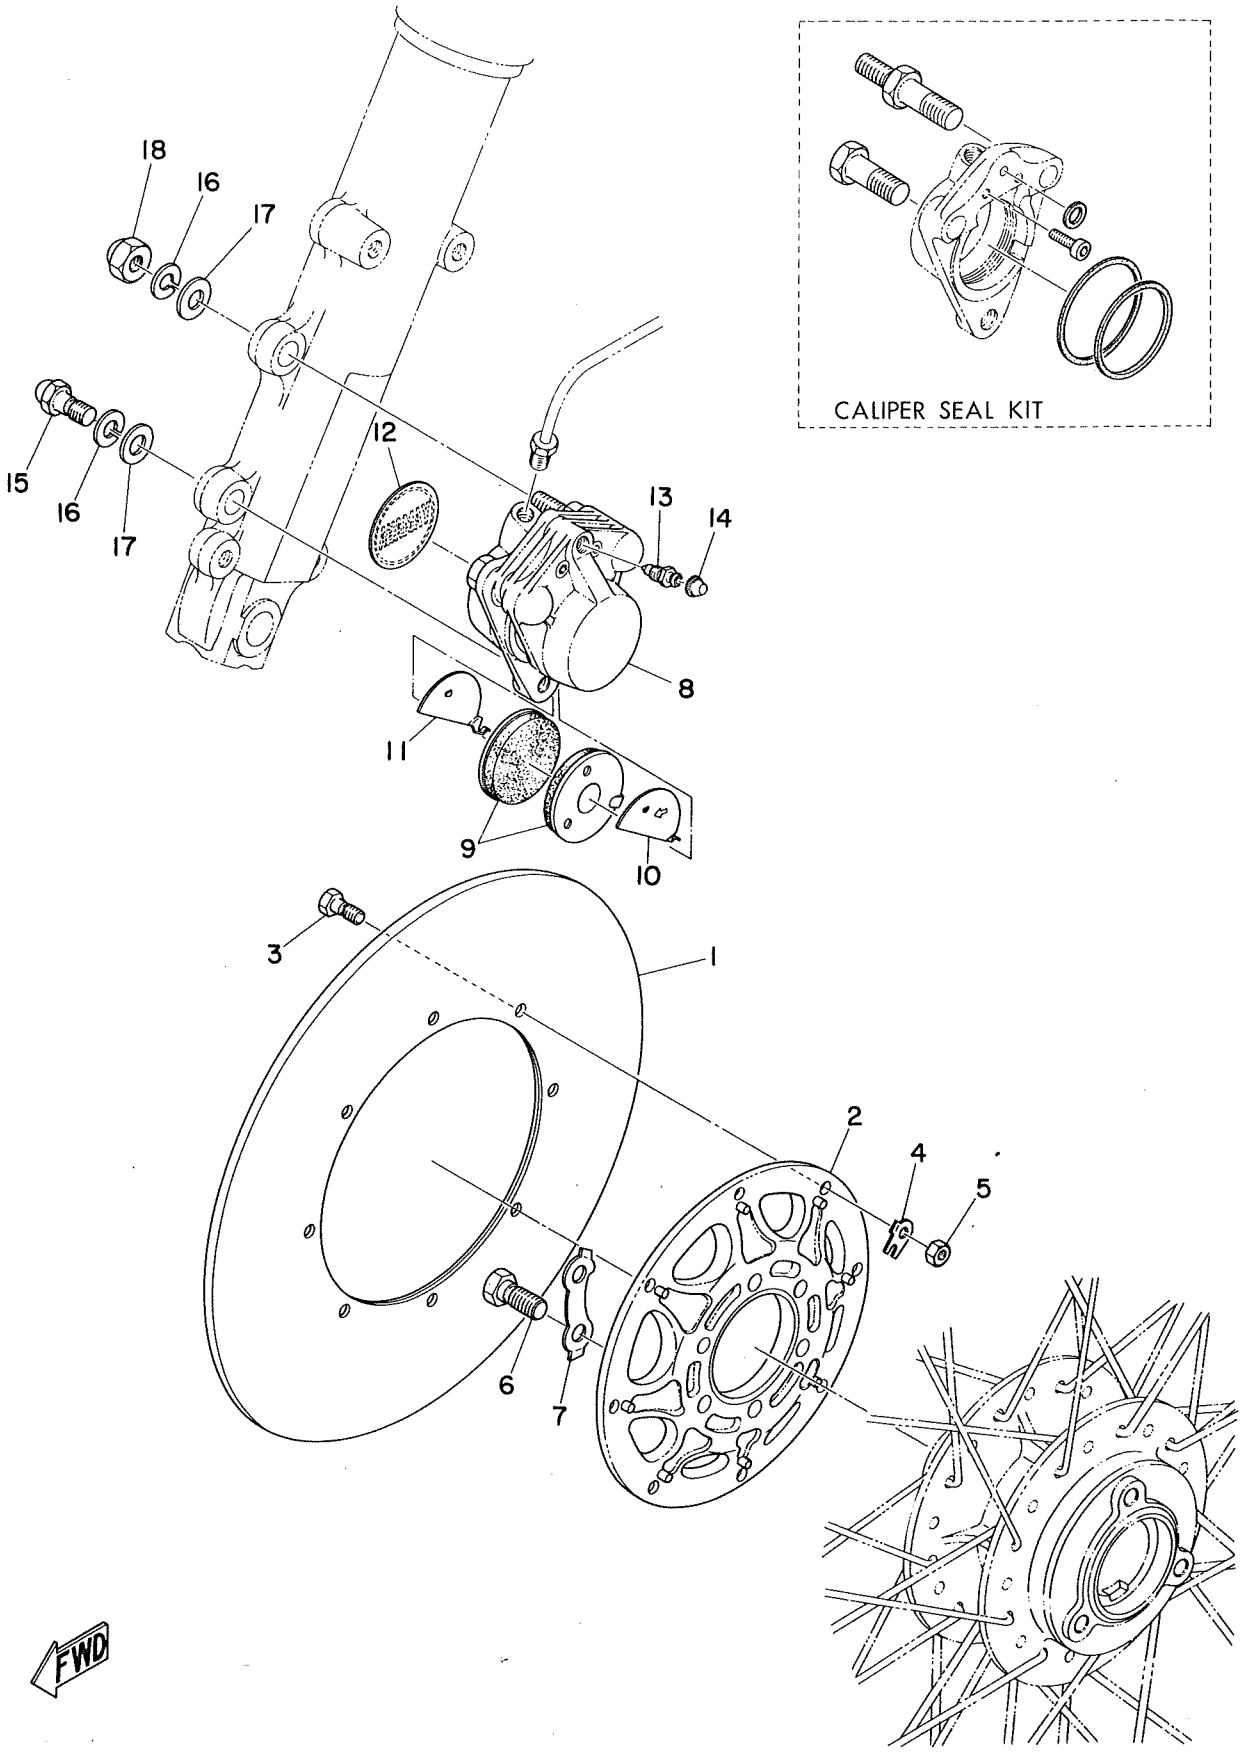

DISK BRAKE · CALIPER

Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
37- 1	306-25831-00	DISK, brake	1		
37- 2	341-25832-01	BRACKET, disk	1		
37- 3	306-25833-00	BOLT, fitting	8		
37- 4	306-25834-00	WASHER, lock	8		
37- 5	98801-06100	NUT	8		
37- 6	341-25411-00	BOLT, fitting	6		
37- 7	341-25412-00	WASHER, lock	3		
37- 8	306-25810-01	CALIPER ASS'Y	1		
37- 9	306-25811-00	. PAD, caliper	2		
37-10	306-25827-00	. SHIM 1	1		
37-11	306-25828-00	. SHIM 2	1		
37-12	306-25829-00	. EMBLEM, caliper	1		
37-13	306-25824-01	. SCREW, bleed	1		
37-14	306-25825-01	. CAP	1		
37-15	306-25818-00	BOLT, fitting	1		
37-16	92901-10100	WASHER, spring	2		
37-17	92901-10200	WASHER, plain	2		
37-18	92803-10700	NUT, crown	1		
37- 0-1	306-20000-51	CALIPER SEAL KIT	1		Alternate Parts


Fig. 38 REAR WHEEL

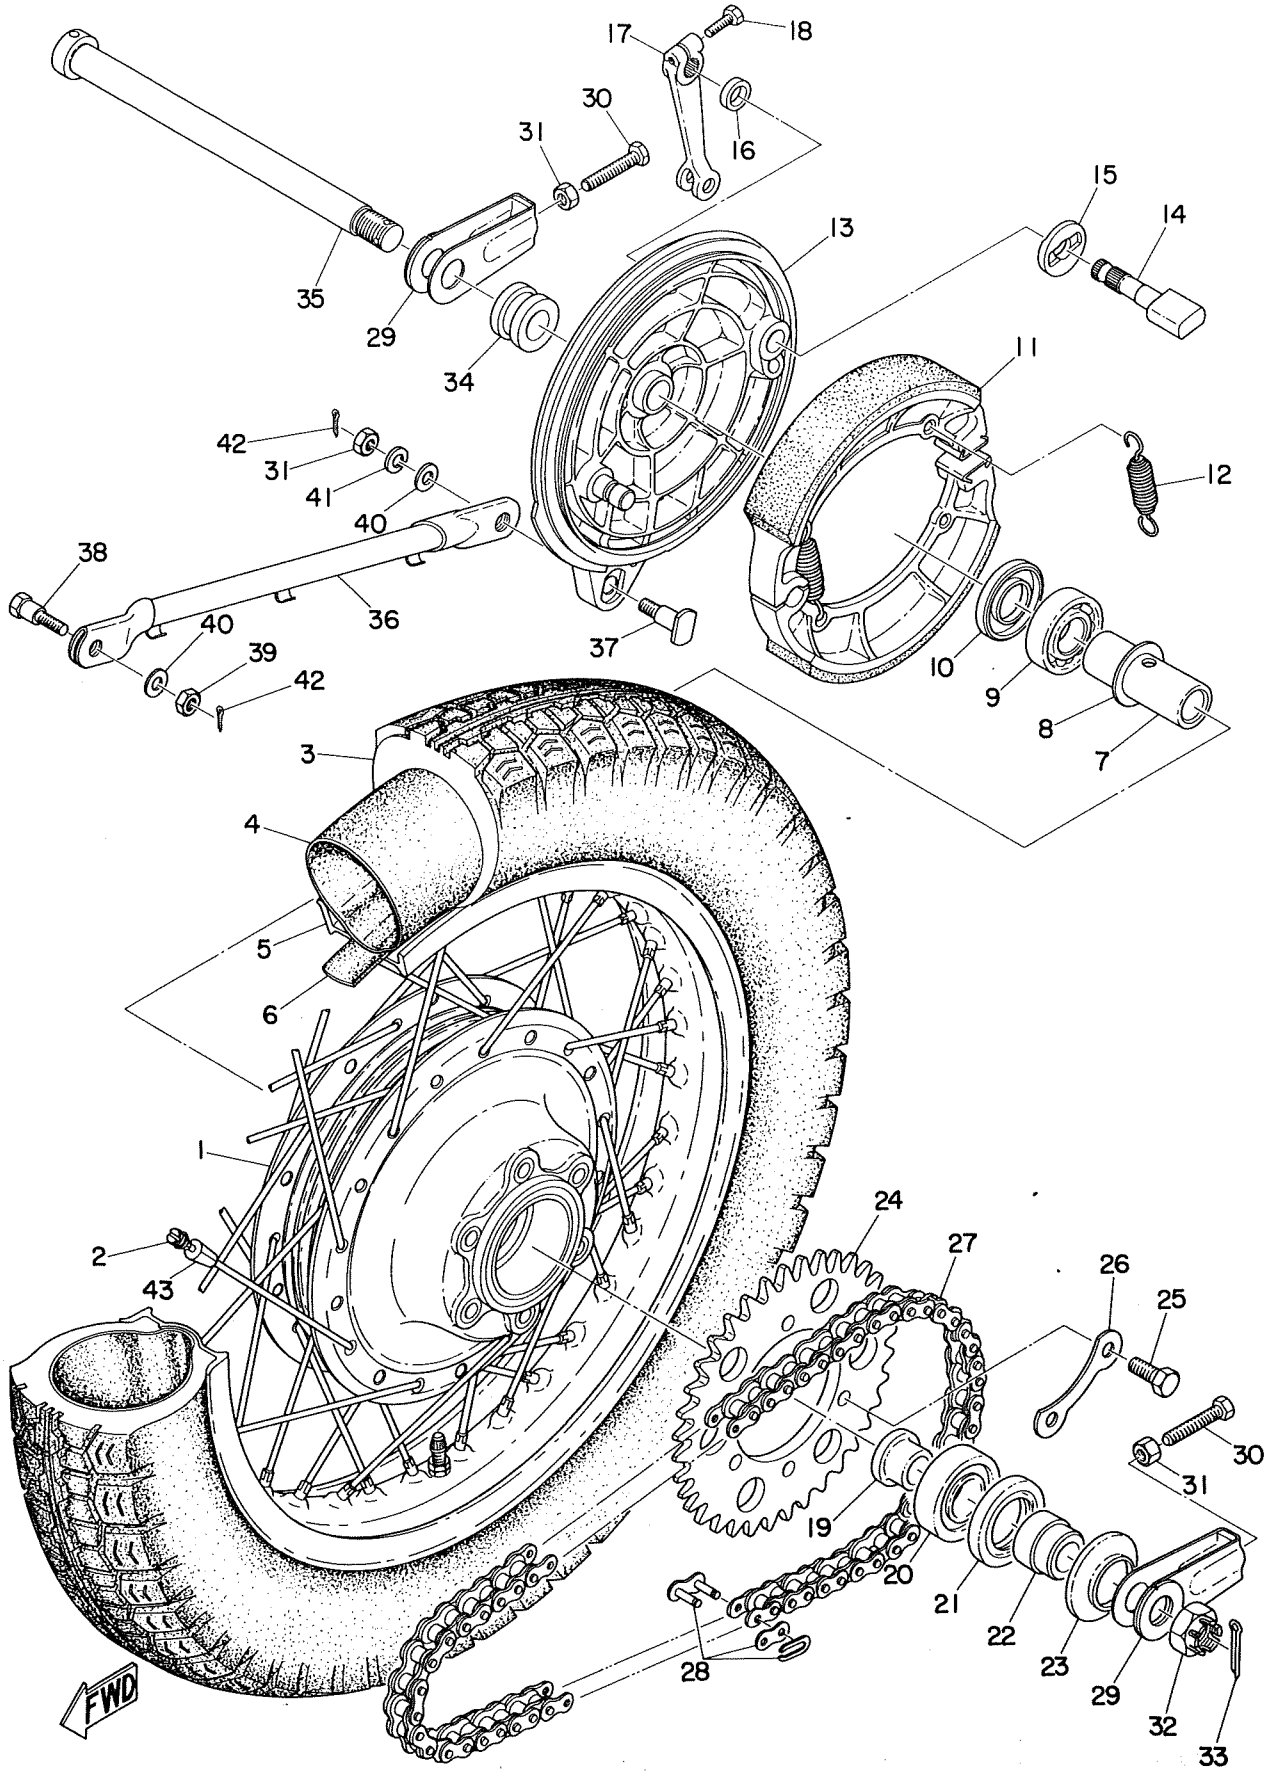

REAR WHEEL

Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
38- 1	341-25311-00	HUB, rear	1		
38- 2	341-25304-00	SPOKE SET	1s		
38- 3	94140-18100	TIRE, rear (4.00-18-4PR)	U.R 1		DUNLOP
	94140-18127	TIRE, rear (4.00-18-4PR)			YOKOHAMA
38- 4	94240-18024	TUBE (4.00-18)	1		
38- 5	94421-18067	RIM (2.15B-18)	1		
38- 6	94340-18022	BAND, rim (4.00-18)	1		
38- 7	341-25317-00	SPACER, bearing	1		
38- 8	256-25315-00	FLANGE, spacer	1		
38- 9	93306-30404	BEARING (B6304Z)	1		
38-10	93104-27026	OIL SEAL (SO27-52-5)	1		
38-11	341-25330-00	BRAKE SHOE COMP.	2		
38-12	246-25333-00	SPRING, return	2		
38-13	341-25321-00	PLATE, brake shoe	1		
38-14	341-25351-00	CAM SHAFT	1		
38-15	341-25353-00	SHIM, cam shaft	1		
38-16	148-25359-00	SEAL, cam shaft	1		
38-17	341-25355-00	LEVER, cam shaft	1		
38-18	91203-06020	BOLT	1		
38-19	256-25376-00	COLLAR	1		
38-20	93306-30507	BEARING (B6305Z)	1		
38-21	93102-35065	OIL SEAL (SD35-62-9)	1		
38-22	256-25377-00	COLLAR, shaft	1		


Fig. 38 REAR WHEEL

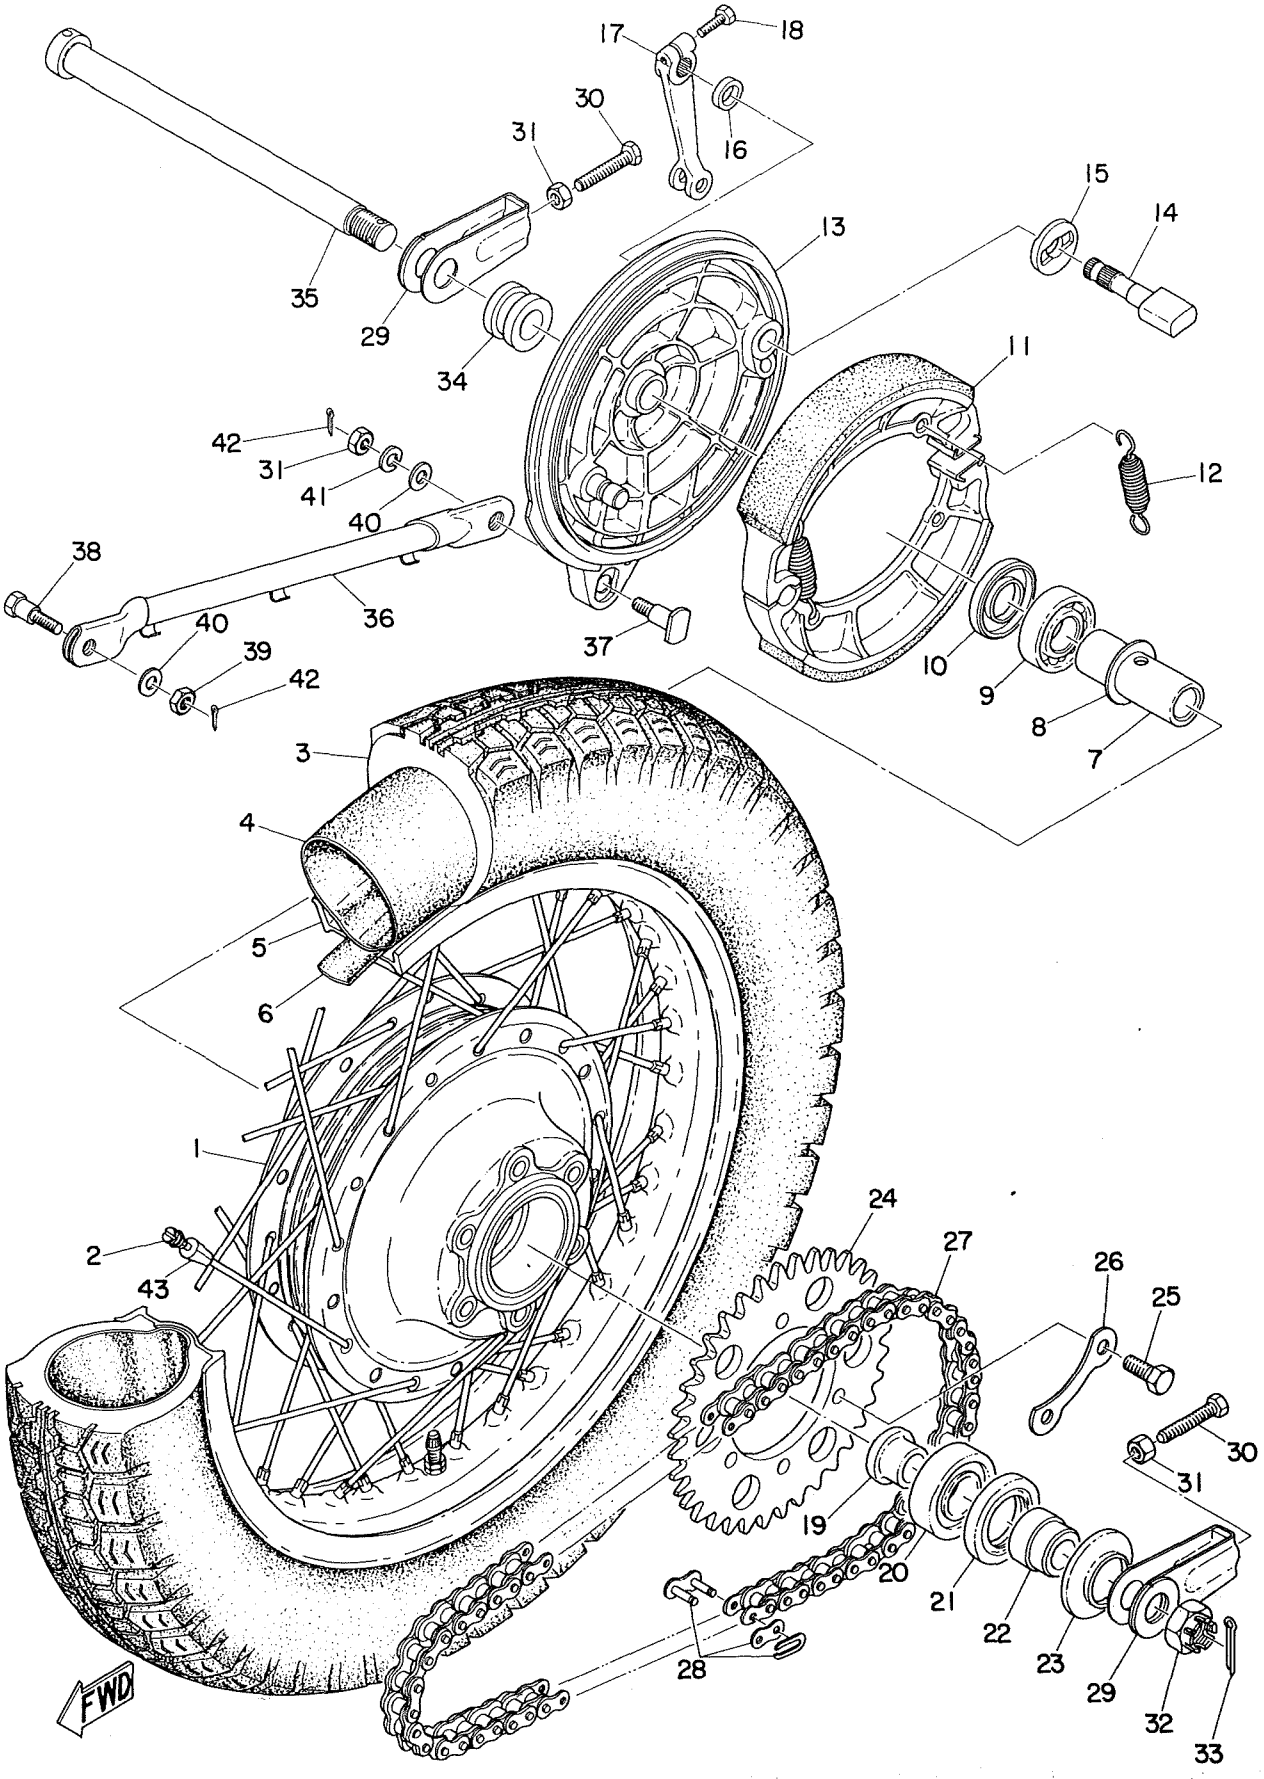

REAR WHEEL

Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
38-23	256-25367-00	COVER, dust	1		
38-24	256-25438-20	GEAR, sprocket wheel (38T)	U.R		STD
	256-25440-20	GEAR, sprocket wheel (40T)	1		
	256-25442-20	GEAR, sprocket wheel (42T)			
38-25	146-25411-00	BOLT, fitting	6		
38-26	256-25412-00	WASHER, lock	3		
38-27	94575-30105	CHAIN (DK530HDS 105L)	1		
38-28	94675-30011	. JOINT, chain	1		
38-29	341-25388-01	PULLER, chain	2		
38-30	168-25379-00	BOLT, chain puller	2		
38-31	98801-08300	NUT	3		
38-32	256-25382-00	NUT, shaft	1		
38-33	91401-40035	PIN, cotter	1		
38-34	341-25383-00	COLLAR, wheel shaft	1		
38-35	341-25381-00	SHAFT, wheel	1		
38-36	341-25371-00	BAR, tension	1		
38-37	341-25378-00	BOLT, tension bar 2	1		
38-38	341-25373-00	BOLT, tension bar 1	1		
38-39	98801-08100	NUT	1		
38-40	92901-08200	WASHER, plain	2		
38-41	92901-08100	WASHER, spring	1		
38-42	91401-20015	PIN, cotter	2		
38-43	156-25398-00	BALANCER, wheel	U.N		


Fig. 39 HEAD LAMP

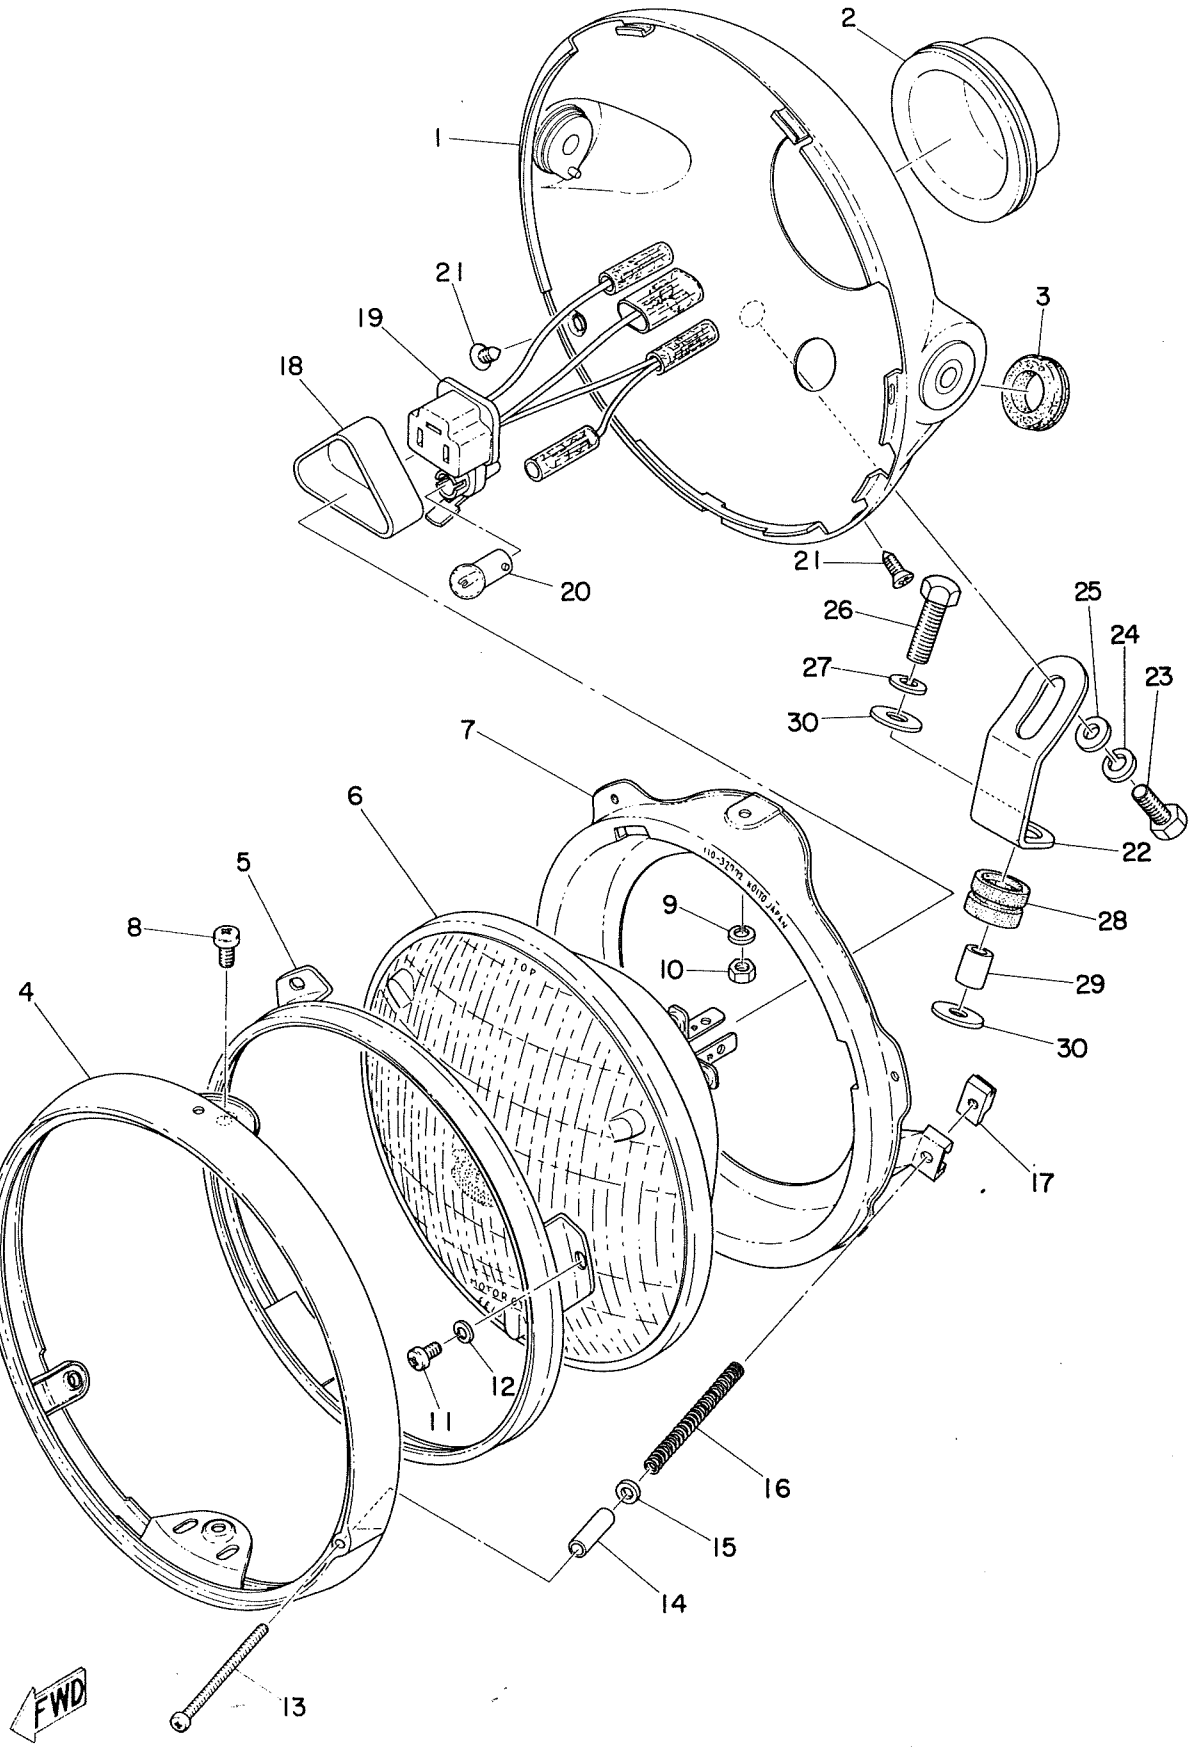

HEAD LAMP

Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
39- 1	341-84330-62-M5	HEAD LAMP BODY ASS'Y	1		Metallic Frake Gold
	341-84330-62-K1	HEAD LAMP BODY ASS'Y	1		Competition Green
39- 2	341-84396-61	. COVER, socket	1		
39- 3	150-84153-00	. BUSHING	1		
39- 0-1	341-84310-00	HEAD LAMP UNIT ASS'Y	1		
39- 4	341-84315-60	. RIM, head lamp	1		
39- 5	341-84395-60	. RING, retaining	1		
39- 6	341-84320-00	. LENS ASS'Y	1		
39- 7	341-84394-60	. RING, mounting	1		
39- 8	98501-05010	. SCREW, panhead	2		
39- 9	92901-05100	. WASHER, spring	2		
39-10	98801-05200	. NUT	2		
39-11	98501-04008	. SCREW, panhead	3		
39-12	92901-04100	. WASHER, spring	3		
39-13	256-84331-60	. SCREW, adjusting	1		
39-14	341-84333-60	. SPACER	1		
39-15	92901-04200	. WASHER, plain	1		
39-16	341-84332-60	. SPRING, adjusting	1		
39-17	198-84334-60	. NUT	1		
39-18	341-84397-61	. COVER, socket	1		
39-19	341-84312-00	. CORD, head lamp	1		
39-20	254-84347-00	. BULB (12V-5W)	1		
39-21	195-84325-00	SCREW, rim fitting	2		


Fig. 39 HEAD LAMP

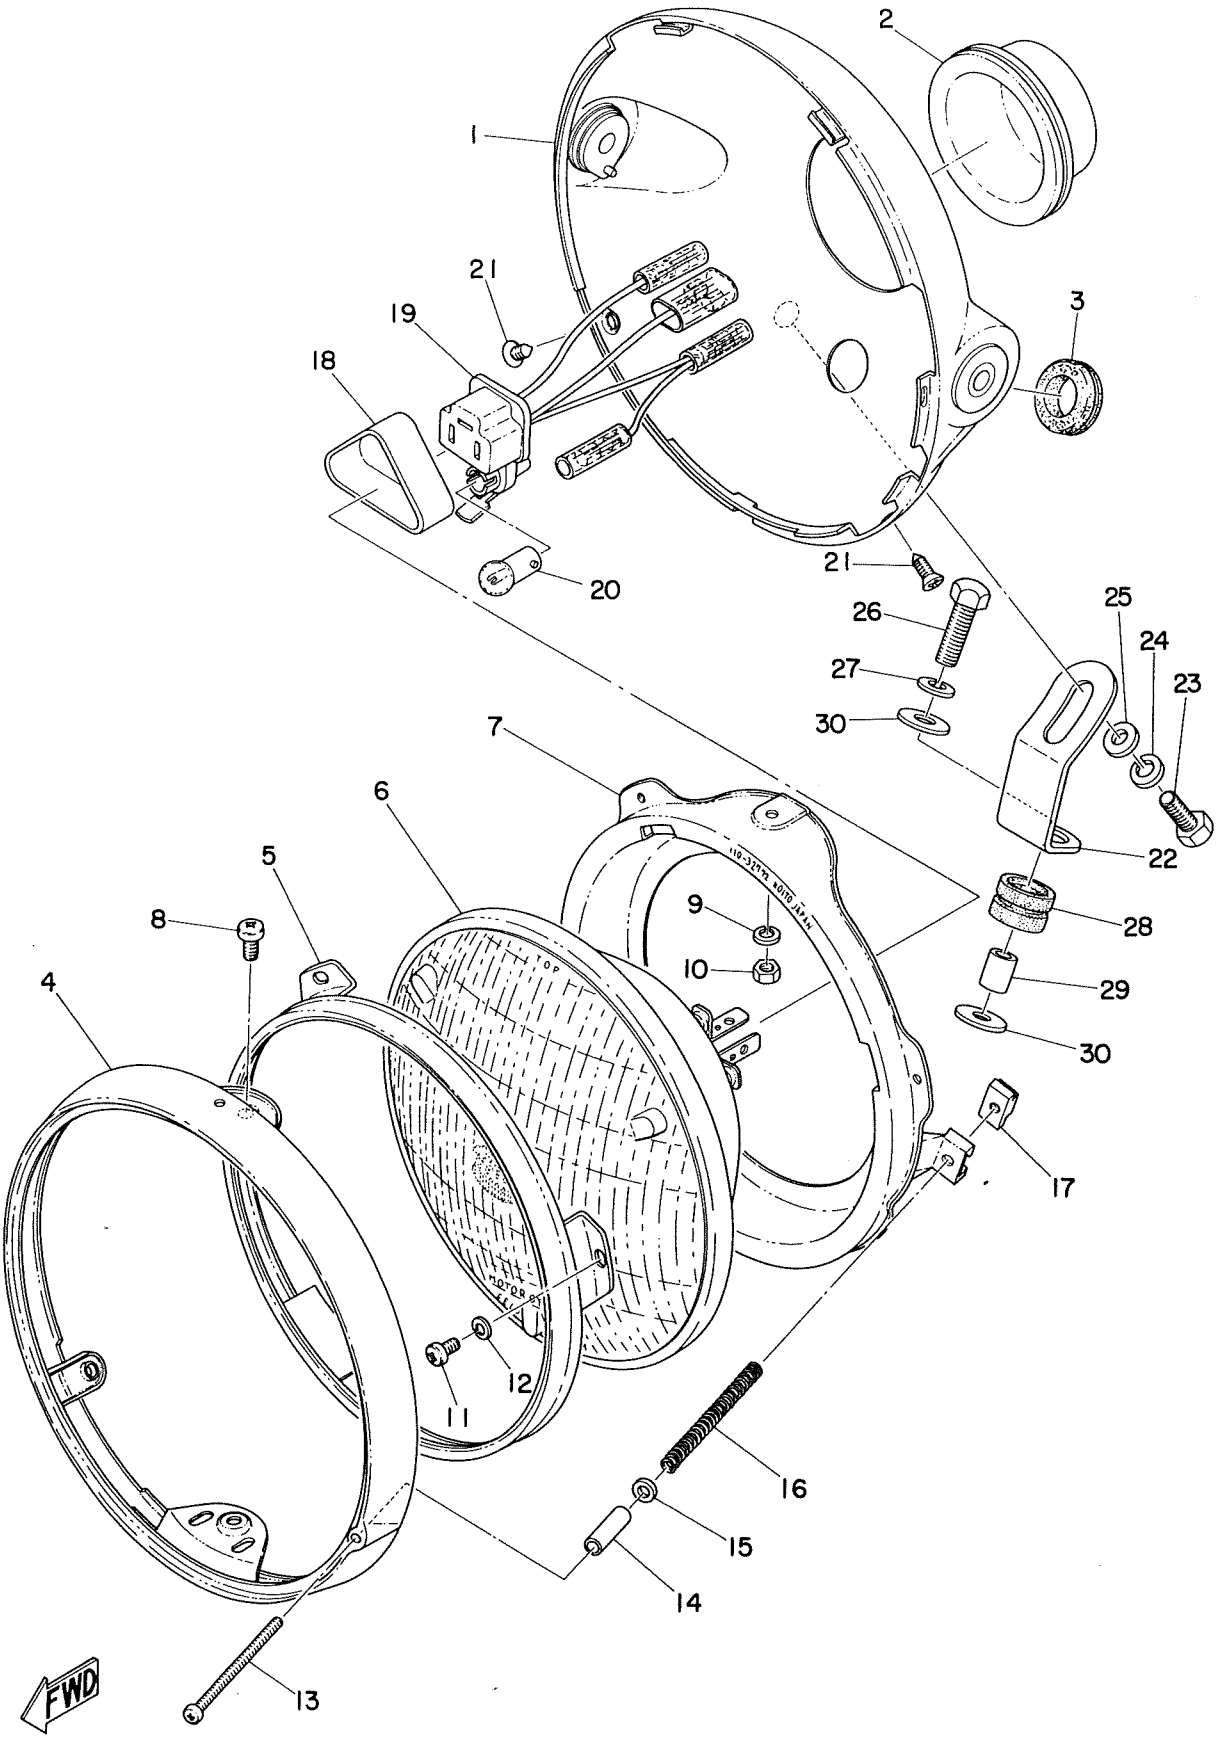

HEAD LAMP

Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
39-22	341-84318-00	STAY, head lamp	1		
39-23	91101-06015	BOLT	1		
39-24	92901-06100	WASHER, spring	1		
39-25	92901-06200	WASHER, plain	1		
39-26	91101-06025	BOLT	1		
39-27	92901-06100	WASHER, spring	1		
39-28	341-84336-00	DAMPER, head lamp	1		
39-29	256-84757-00	COLLAR, lisence bracket ...	1		
39-30	135-21491-00	WASHER, special	2		


Fig. 40 SPEEDOMETER · TACHOMETER

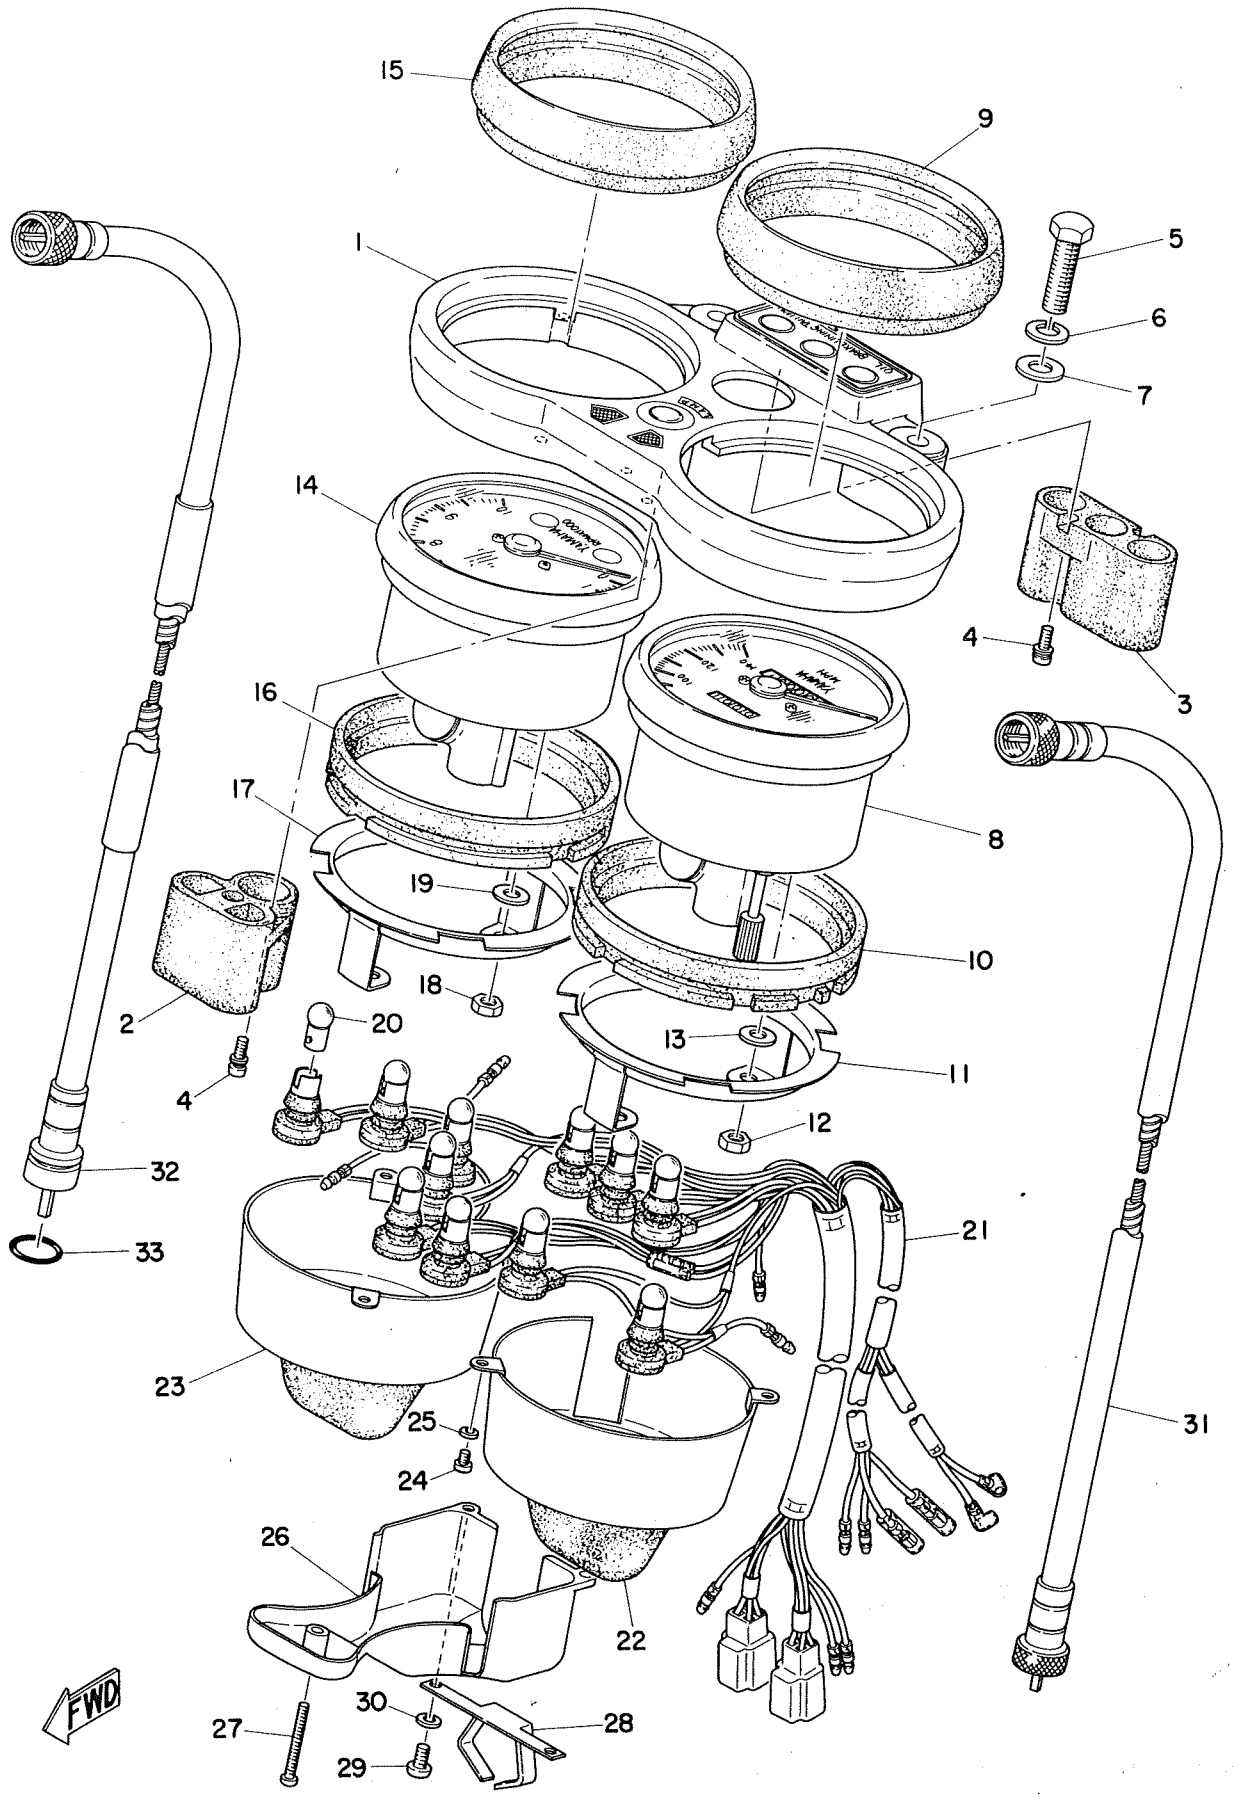

SPEEDOMETER · TACHOMETER


Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
40- 1	341-83519-80-98	BRACKET, meter	1		Frosting Black
40- 2	341-83574-00	. BRACKET, bulb 1	1		
40- 3	341-83575-00	. BRACKET, bulb 2	1		
40- 4	90159-03001	. SCREW, with washer	4		
40- 5	341-83546-00	BOLT	2		
40- 6	92906-08100	WASHER, spring	2		
40- 7	92906-08200	WASHER, plain	2		
40- 8	341-83570-41	SPEEDOMETER ASS'Y (Mile/h)....	U.R 1		
	341-83580-21	SPEEDOMETER ASS'Y (Km/h).....			
40- 9	341-83513-40	. DAMPER, speedometer	1		
40-10	341-83523-40	DAMPER	1		
40-11	341-83514-40	HOLDER, meter	1		
40-12	98801-05100	NUT	2		
40-13	92901-06200	WASHER, plain	2		
40-14	341-83540-00	TACHOMETER, ASS'Y	1		
40-15	341-83513-40	. DAMPER, speedometer	1		
40-16	341-83523-40	DAMPER	1		
40-17	341-83514-40	HOLDER, meter	1		
40-18	98801-05100	NUT	2		
40-19	92901-06200	WASHER, plain	2		
40-20	123-83516-20	BULB (12V-3W)	11		
40-21	341-83509-80	SOCKET CORD ASS'Y	1		
40-22	341-83507-40	COVER, speedometer	1		

Fig. 40 SPEEDOMETER · TACHOMETER

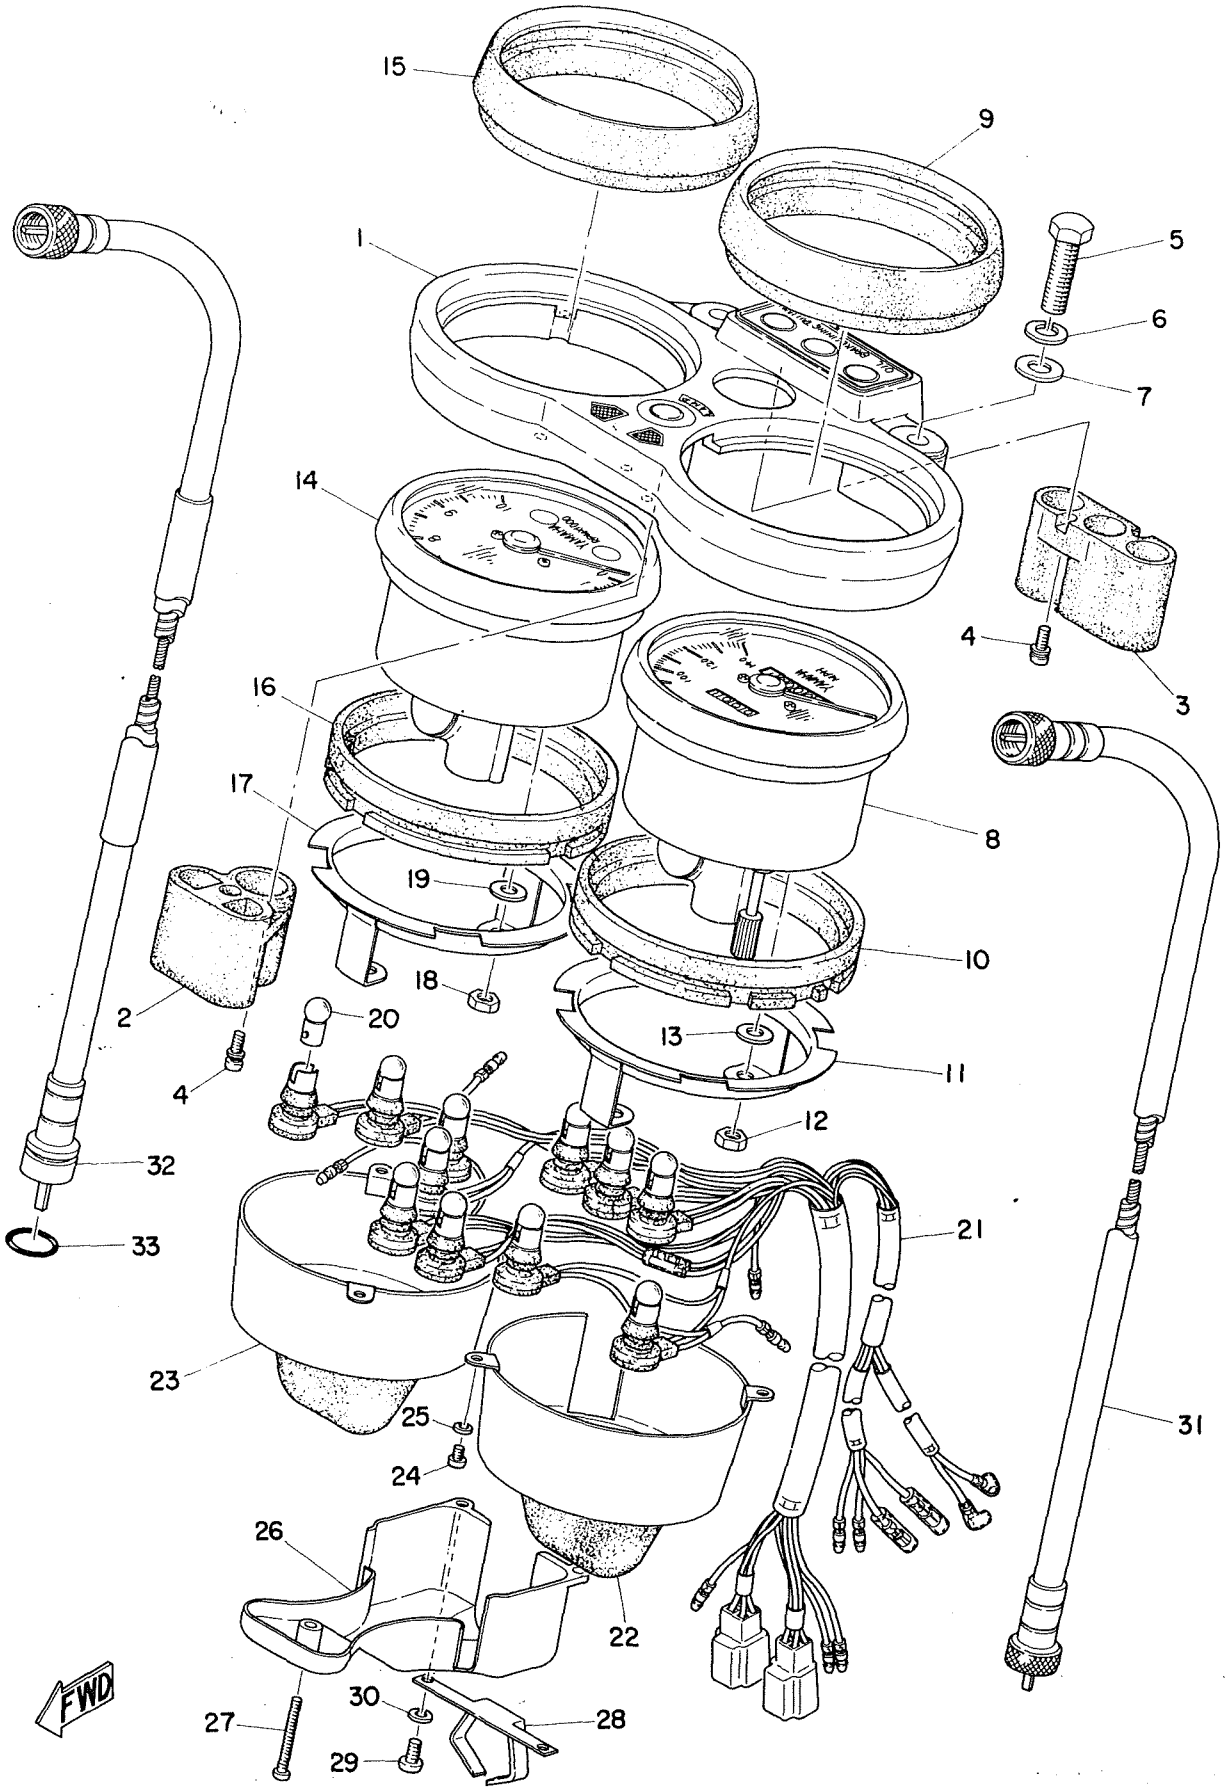

Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
40-23	341-83508-40	COVER, tachometer	1		
40-24	193-81145-20	SCREW, panhead (3-6)	4		
40-25	92901-03100	WASHER, spring	4		
40-26	341-83547-40	COVER, socket	1		
40-27	341-83546-00	SCREW, panhead	1		
40-28	341-83573-00	HOLDER, meter cord	1		
40-29	98501-04010	SCREW, panhead	2		
40-30	92901-04100	WASHER, spring	2		
40-31	341-83550-00	SPEEDOMETER CABLE ASS'Y ..	1		
40-32	341-83560-00	TACHOMETER CABLE ASS'Y ..	1		
40-33	93210-14104	O-RING (2.4-13.8)	1		


Fig. 41 TAIL LAMP

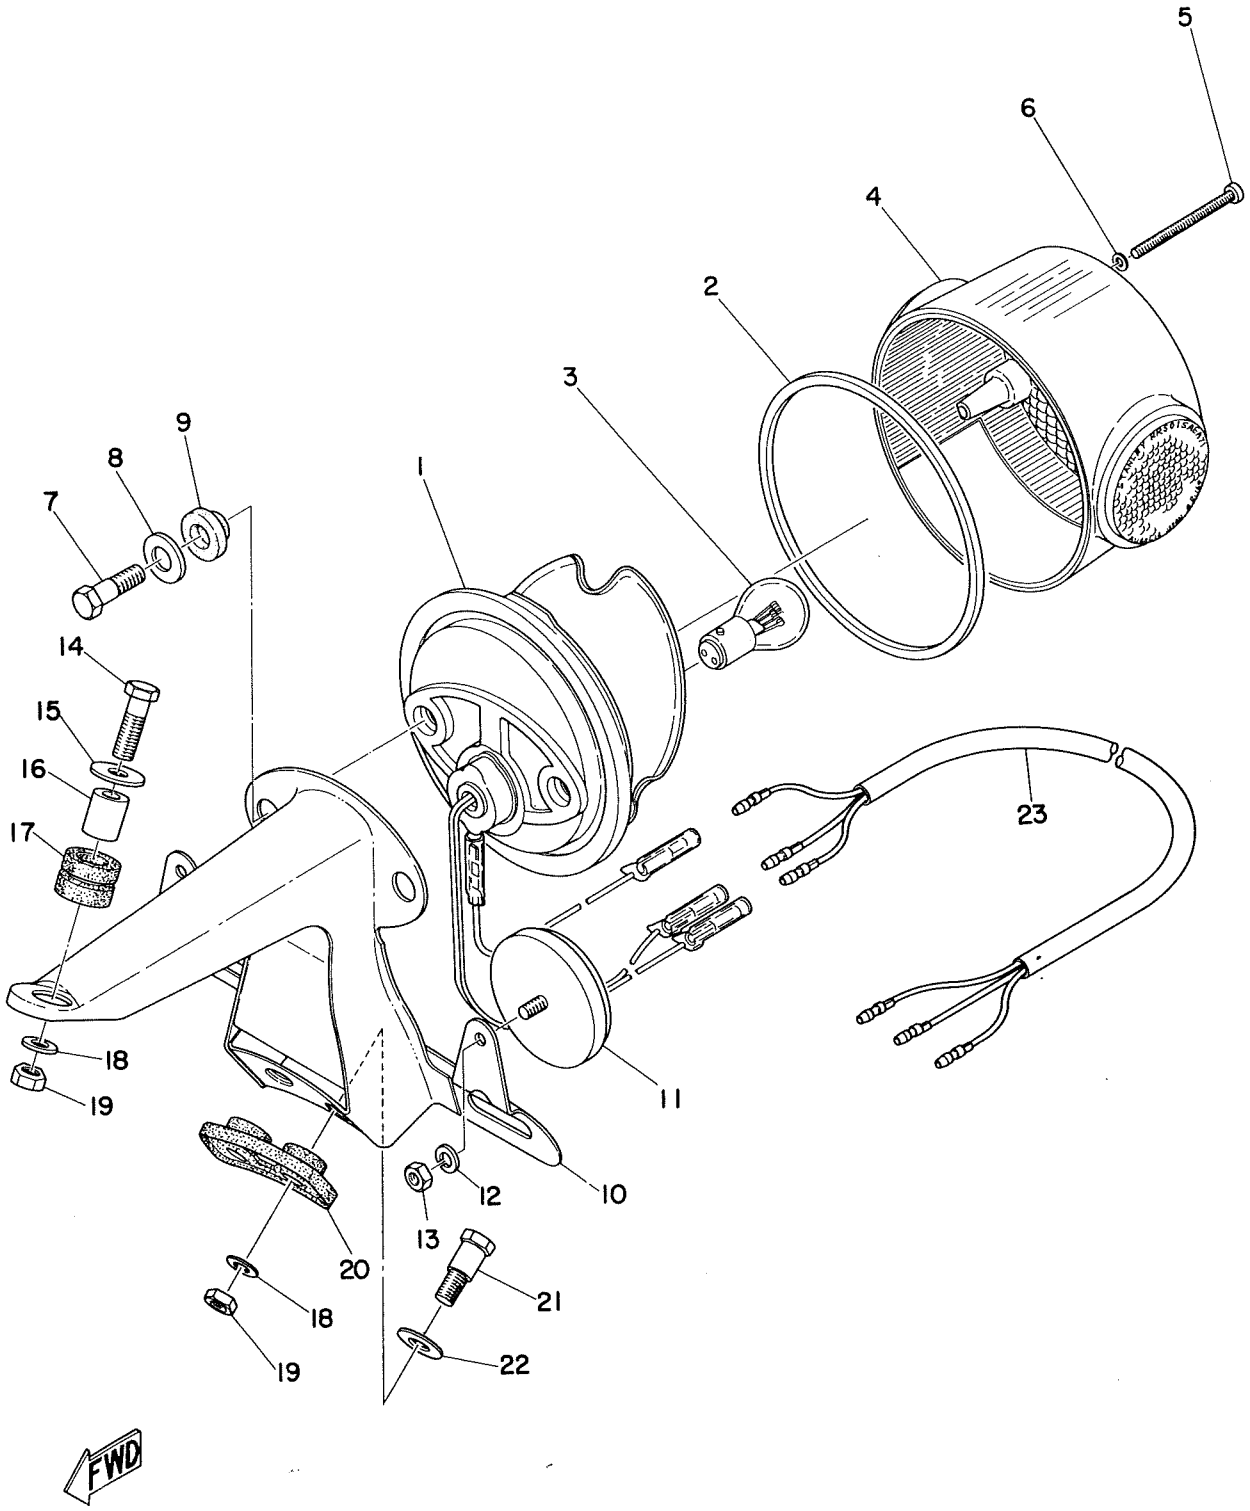

TAIL LAMP

Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
41- 0-1	341-84710-00	TAIL LAMP UNIT ASS'Y	1		
41- 1	306-84711-60	. BASE, tail lamp	1		
41- 2	275-84523-60	. GASKET, tail lens	1		
41- 3	256-84714-61	. BULB, tail lamp (12V-23/8W) ..	1		
41- 4	341-84721-00	. LENS, tail lamp	1		
41- 5	341-84724-60	. SCREW, lens fitting	3		
41- 6	341-84722-60	. PACKING	3		
41- 7	275-84526-60	SCREW	2		
41- 8	275-84525-60	WASHER, special	2		
41- 9	275-84527-60	DAMPER	2		
41-10	341-84751-61-93	BRACKET, license	1		
41-11	341-85111-60	REFLECTOR	2		
41-12	92903-05100	WASHER, spring	2		
41-13	98803-05100	NUT	2		
41-14	91203-06025	BOLT	1		
41-15	102-28323-00	WASHER, leg shield	1		
41-16	214-21633-00	COLLAR, fender mount	1		
41-17	214-21717-00	DAMPER, battery box	1		
41-18	92901-06100	WASHER, spring	3		
41-19	98801-06100	NUT	3		
41-20	214-84553-01	DAMPER	1		
41-21	168-21738-00	BOLT A	2		
41-22	92901-08200	WASHER, plain	2		
41-23	214-84717-00	CORD, tail lamp	1		


Fig. 42 FLASHER LAMP

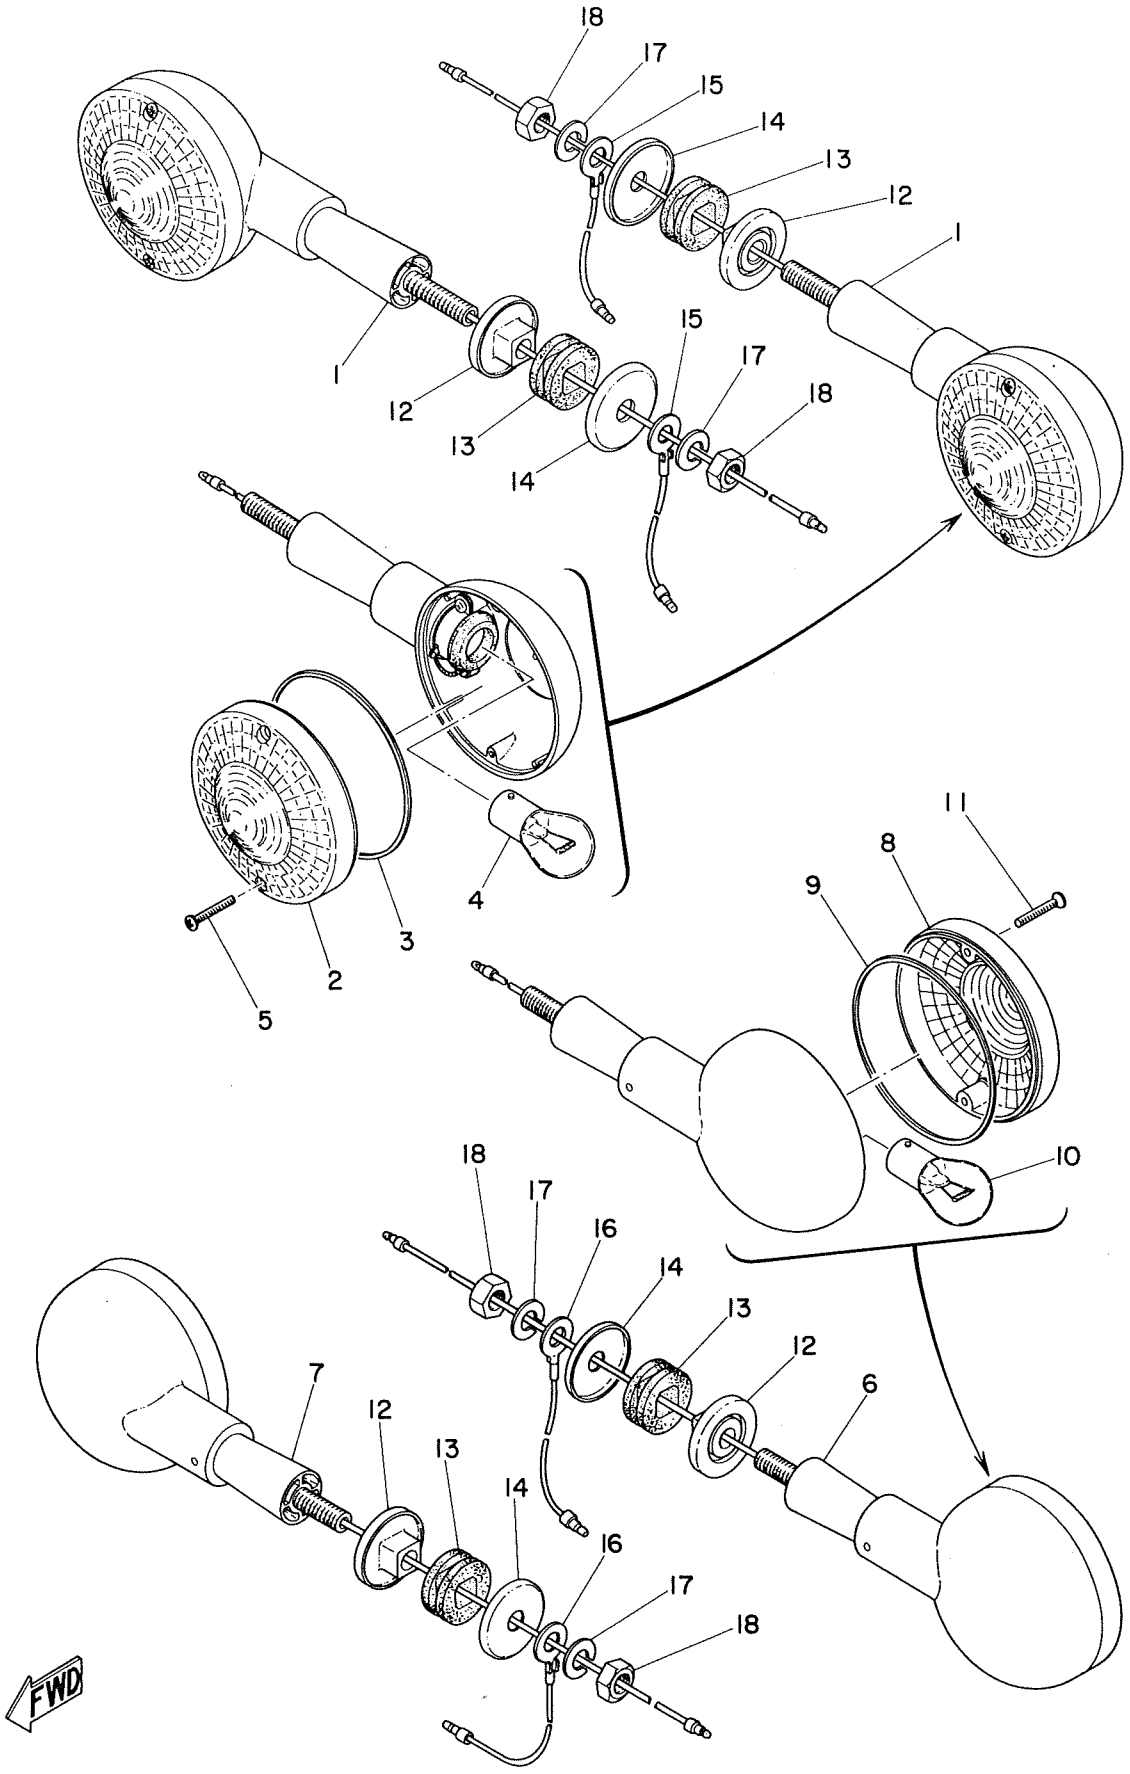

FLASHER LAMP

Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
42- 1	341-83310-71-93	FRONT FLASHER LAMP ASS'Y ..	2		
42- 2	341-83312-70	. LENS, flasher	2		
42- 3	341-83313-70	. PACKING, lens	2		
42- 4	256-83311-70	. BULB (12V-27W)	2		
42- 5	341-83333-70	. SCREW, lens fitting	4		
42- 6	341-83330-20-93	REAR FLASHER LAMP ASS'Y, left	1		
42- 7	341-83340-20-93	REAR FLASHER LAMP ASS'Y, right	1		
42- 8	341-83312-70	. LENS, flasher	2		
42- 9	341-83313-70	. PACKING, lens	2		
42-10	256-83311-70	. BULB (12V-27W)	2		
42-11	341-83333-70	. SCREW, lens fitting	4		
42-12	341-83316-01	COLLAR, flasher	4		
42-13	341-83321-01	DAMPER, flasher	4		
42-14	341-83348-00	WASHER, special	2		
42-15	256-84313-01	CORD, flasher	2		
42-16	256-83346-01	CORD, flasher	2		
42-17	92901-08100	WASHER, spring	4		
42-18	98801-08100	NUT	4		


Fig. 43 ELECTRICAL 1

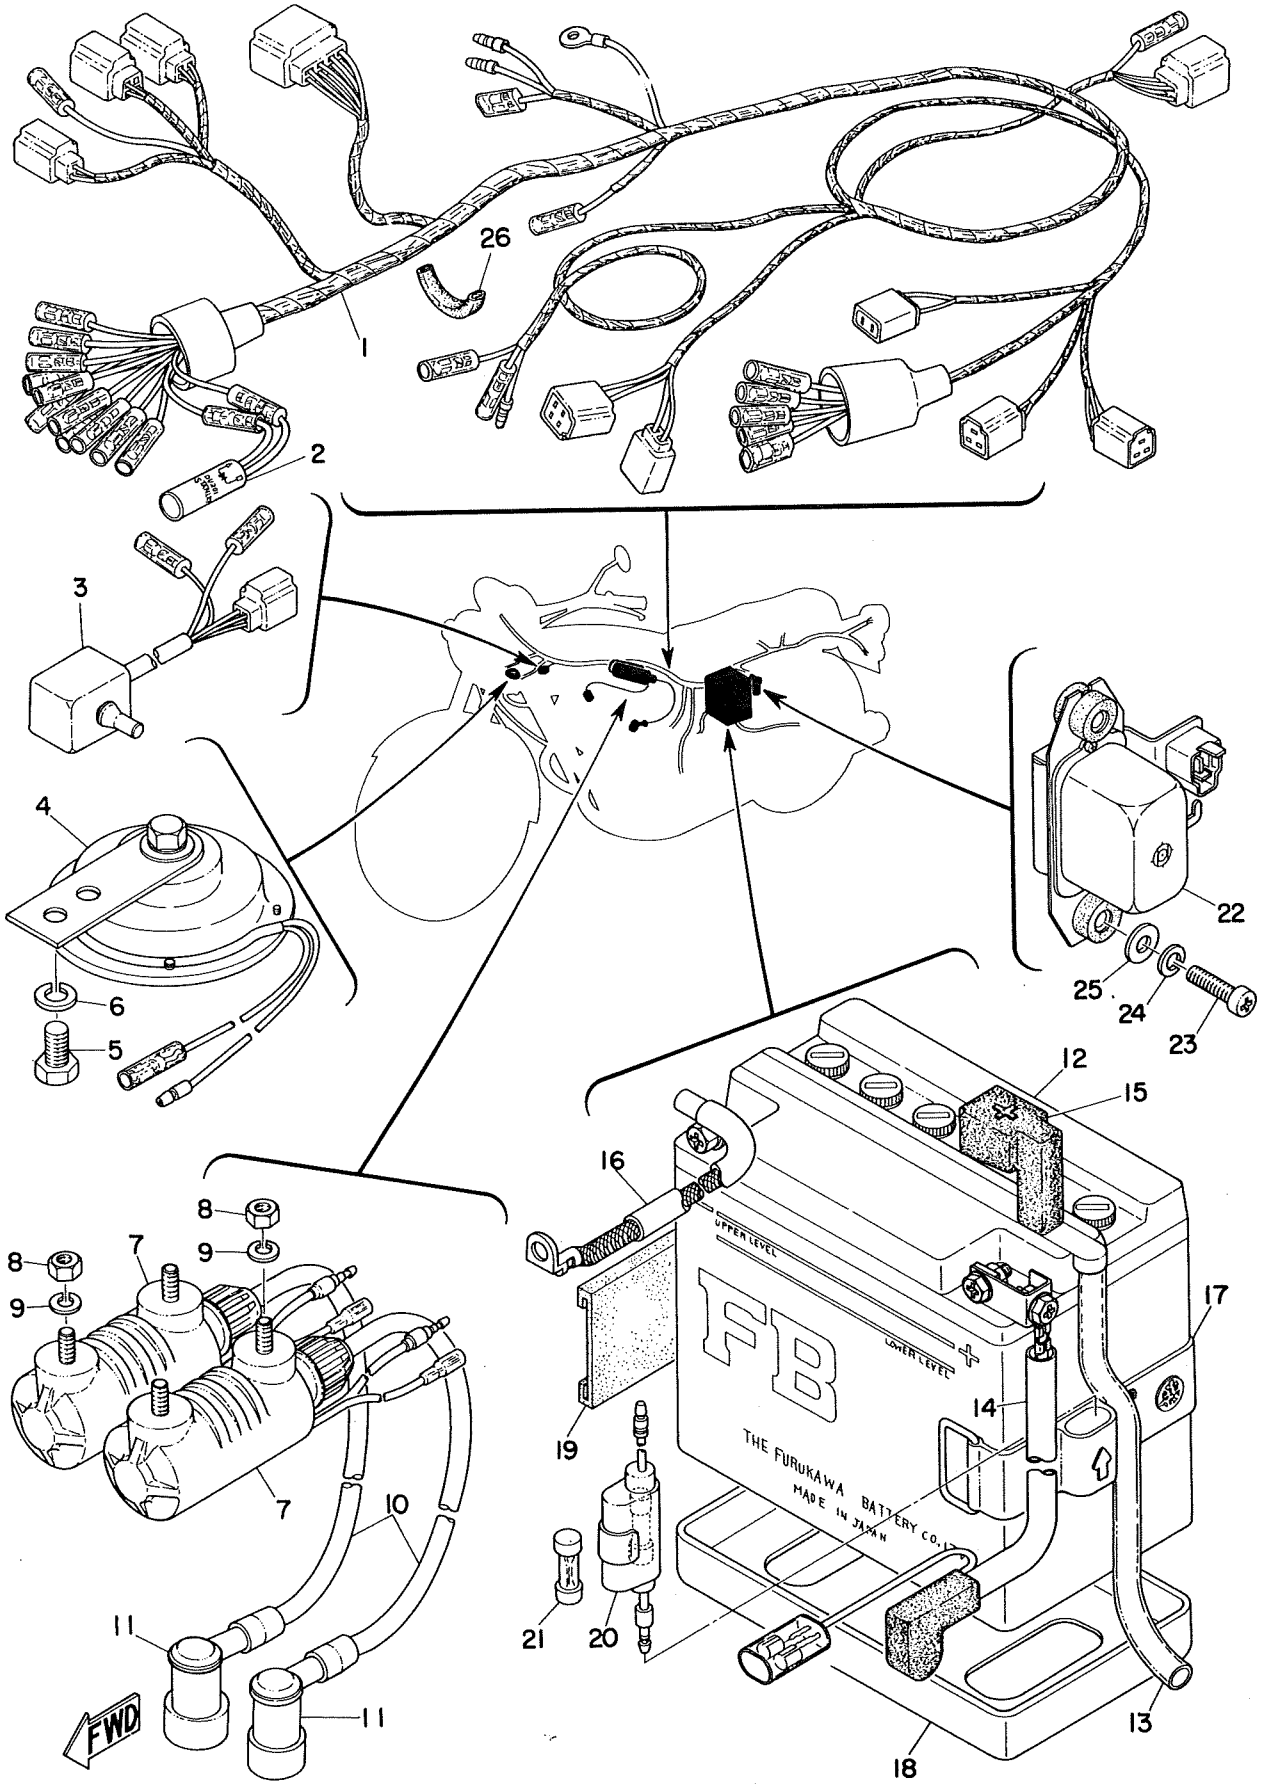

ELECTRICAL 1


Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
43- 1	341-82590-83	WIRE HARNESS ASS'Y	1		
43- 2	341-81980-01	DIODE ASS'Y	1		
43- 3	341-83581-20	RELAY	1		
43- 4	341-83371-21	HORN	1		
43- 5	97201-08015	BOLT	2		
43- 6	92901-08100	WASHER, spring	2		
43- 7	254-82310-60	IGNITION COIL ASS'Y	2		
43- 8	98801-06100	NUT	4		
43- 9	92901-06100	WASHER, spring	4		
43-10	341-82341-00	CORD, high tension	2		
43-11	166-82370-00	PLUG CAP ASS'Y	2		
43-12	341-82110-72	BATTERY ASS'Y (12N16-3B) ...	1		
43-12-1	104-82111-20	. CAP, battery	6		
43-13	341-82112-00	PIPE, breather	1		
43-14	341-82115-03	WIRE, plus lead	1		
43-15	341-82119-00	COVER, lead wire	1		
43-16	341-82116-01	WIRE, minus lead	1		
43-17	341-82131-01	BAND, battery	1		
43-18	341-82122-00	SEAT, battery	1		
43-19	341-82121-00	PAD, battery	1		
43-20	164-82150-00	HUSE HOLDER ASS'Y	1		
43-21	148-82151-00	. HUSE	2		
43-22	341-81910-13	VOLTAGE REGULATOR ASS'Y ..	1		

Fig. 43 ELECTRICAL 1

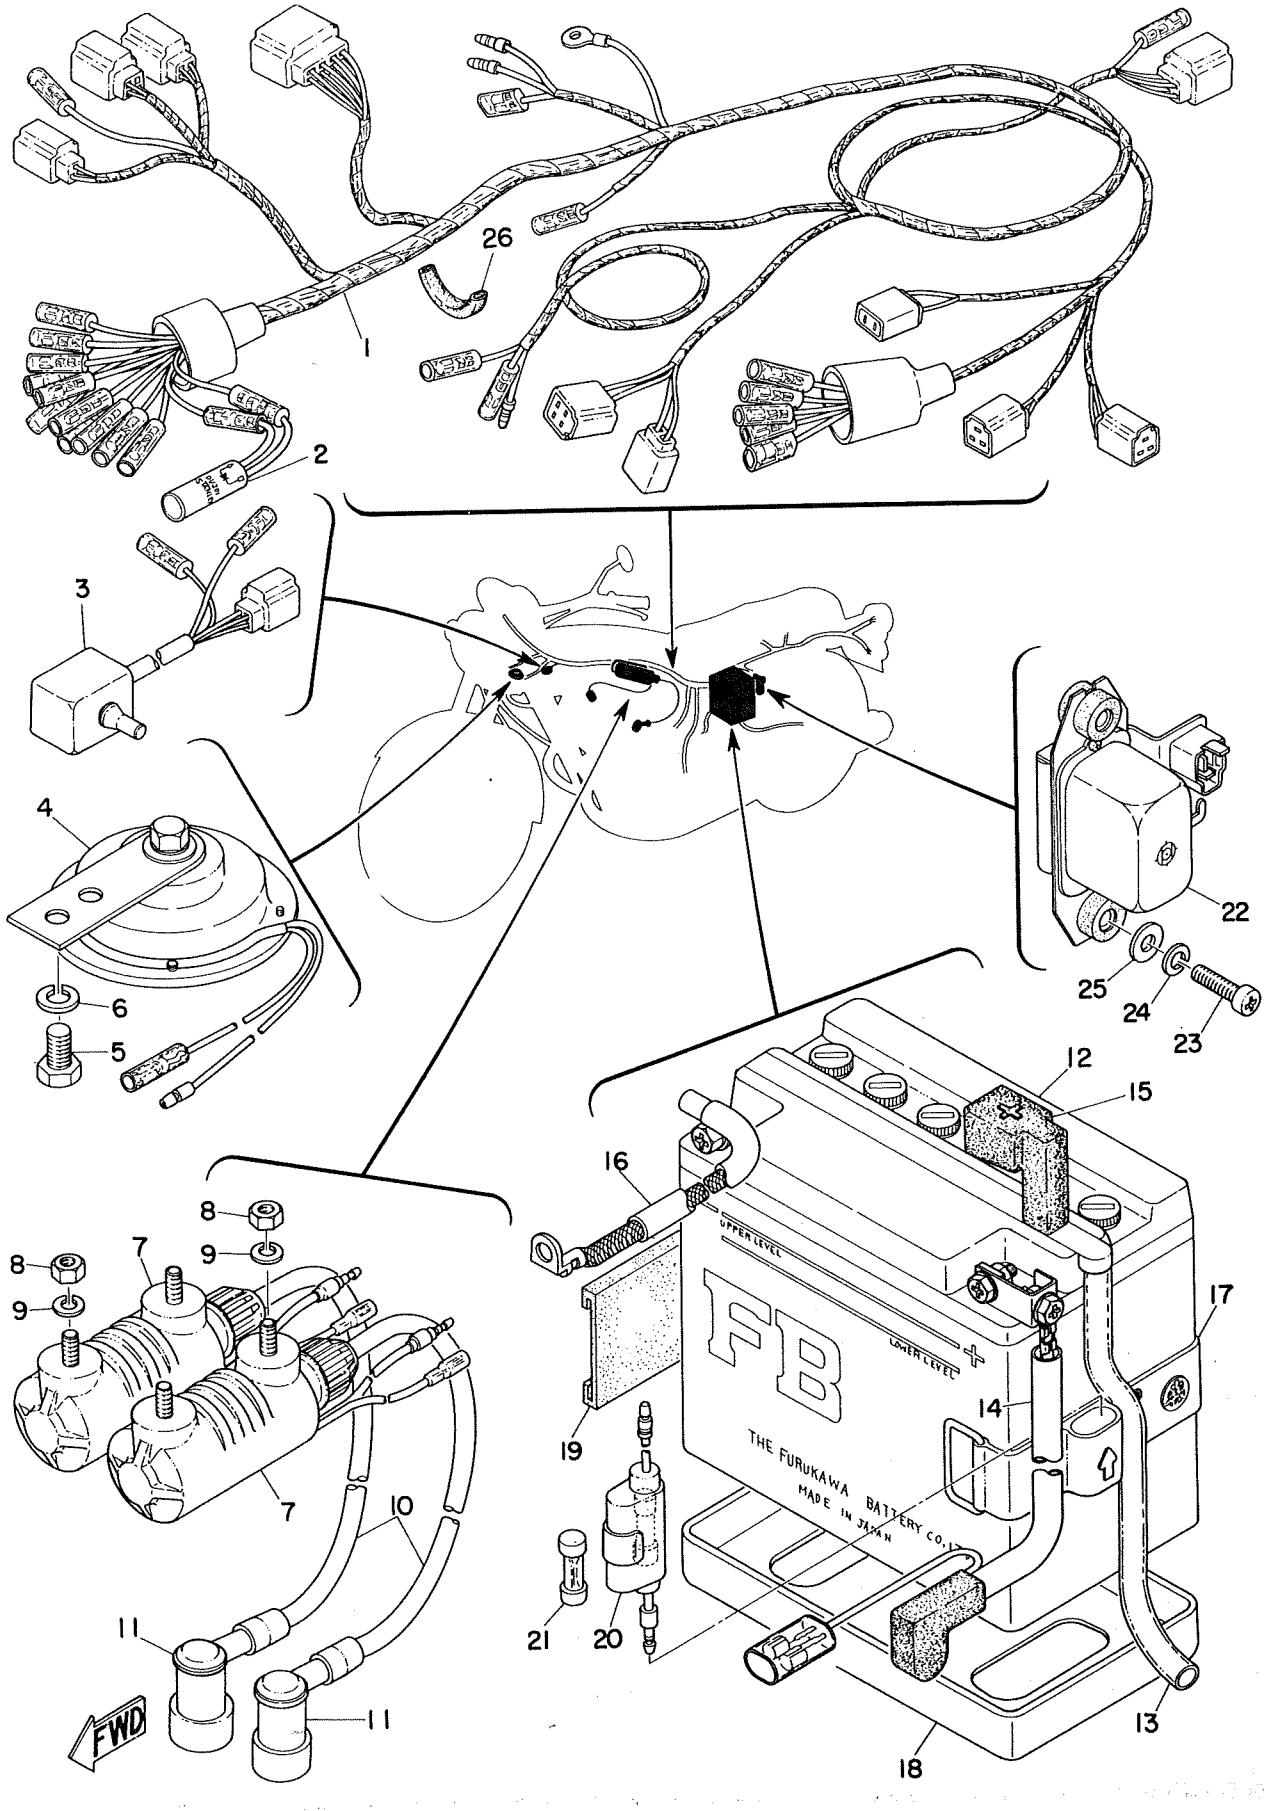

Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
43-23	92501-06025	SCREW, panhead	2		
43-24	92901-06100	WASHER, spring	2		
43-25	136-22316-00	WASHER, special	2		
43-26	341-82139-00	TUBE	1		


Fig. 44 ELECTRICAL 2

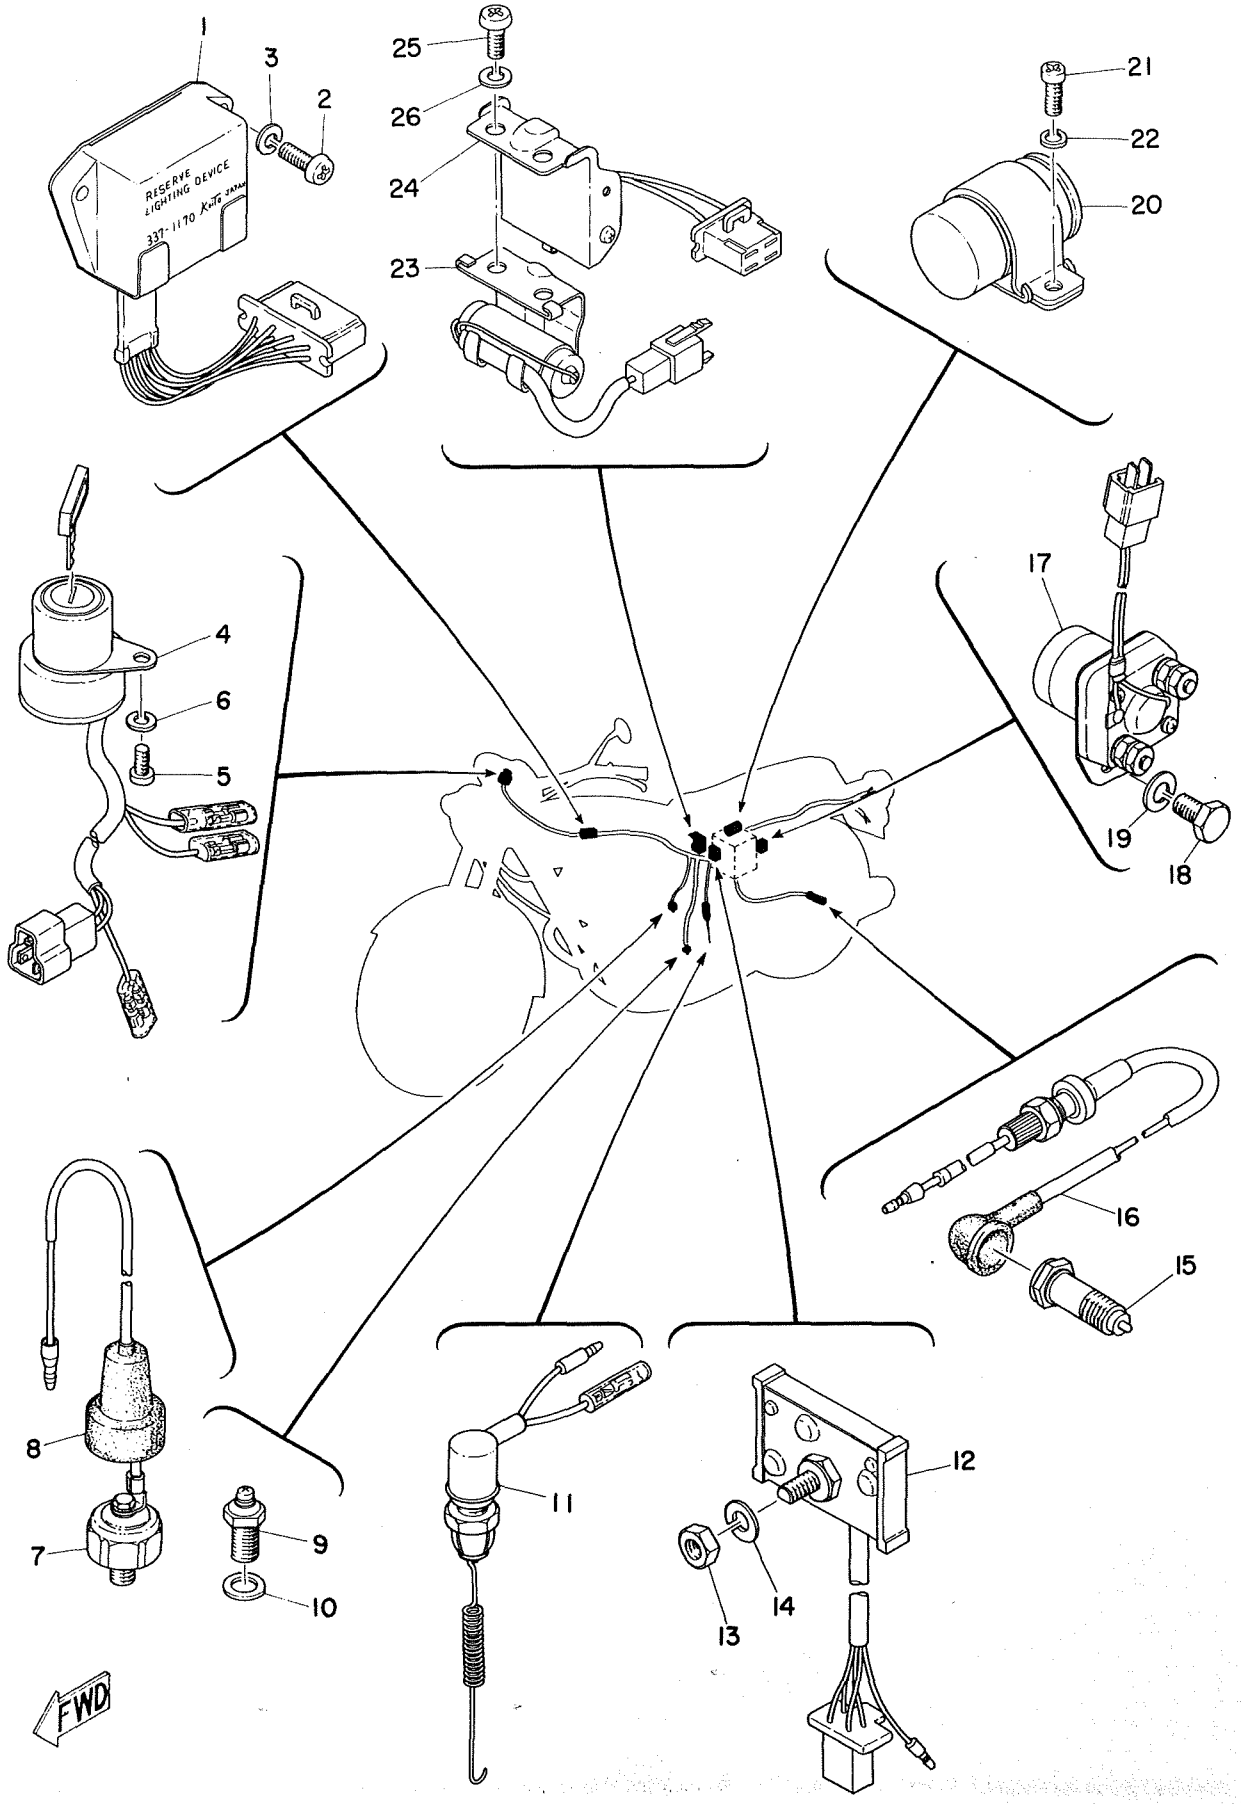

ELECTRICAL 2

Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
44- 1	341-84308-02	RESERVE LIGHTING UNIT	1		
44- 2	92501-06018	SCREW, panhead	2		
44- 3	92901-06100	WASHER, spring	2		
44- 4	341-82508-80	MAIN SWITCH ASS'Y	1		
44- 5	92501-05010	SCREW, panhead	2		
44- 6	92901-05100	WASHER, spring	2		
44- 7	341-82504-02	OIL PRESSURE SWITCH	1		
44- 8	341-82507-00	WIRE, lead	1		
44- 9	341-82540-01	NEUTRAL SWITCH ASS'Y	1		
44-10	341-82543-00	. GASKET	1		
44-11	341-82530-10	STOP SWITCH ASS'Y	1		
44-12	341-81970-11	RECTIFIER ASS'Y	1		
44-13	98801-08100	NUT	1		
44-14	92901-08100	WASHER, spring	1		
44-15	341-82503-01	SWITCH, alarm	1		
44-16	341-82531-01	WIRE, lead	1		
44-17	341-81940-12	STARTER SWITCH ASS'Y	1		
44-18	97101-08015	BOLT	1		
44-19	92901-08100	WASHER, spring	1		
44-20	341-83350-70	FLASHER RELAY ASS'Y	1		
44-21	92501-06015	SCREW, panhead	1		
44-22	92901-06100	WASHER, spring	1		
44-23	341-81625-10	CONDENSER	1		

Fig. 44 ELECTRICAL 2

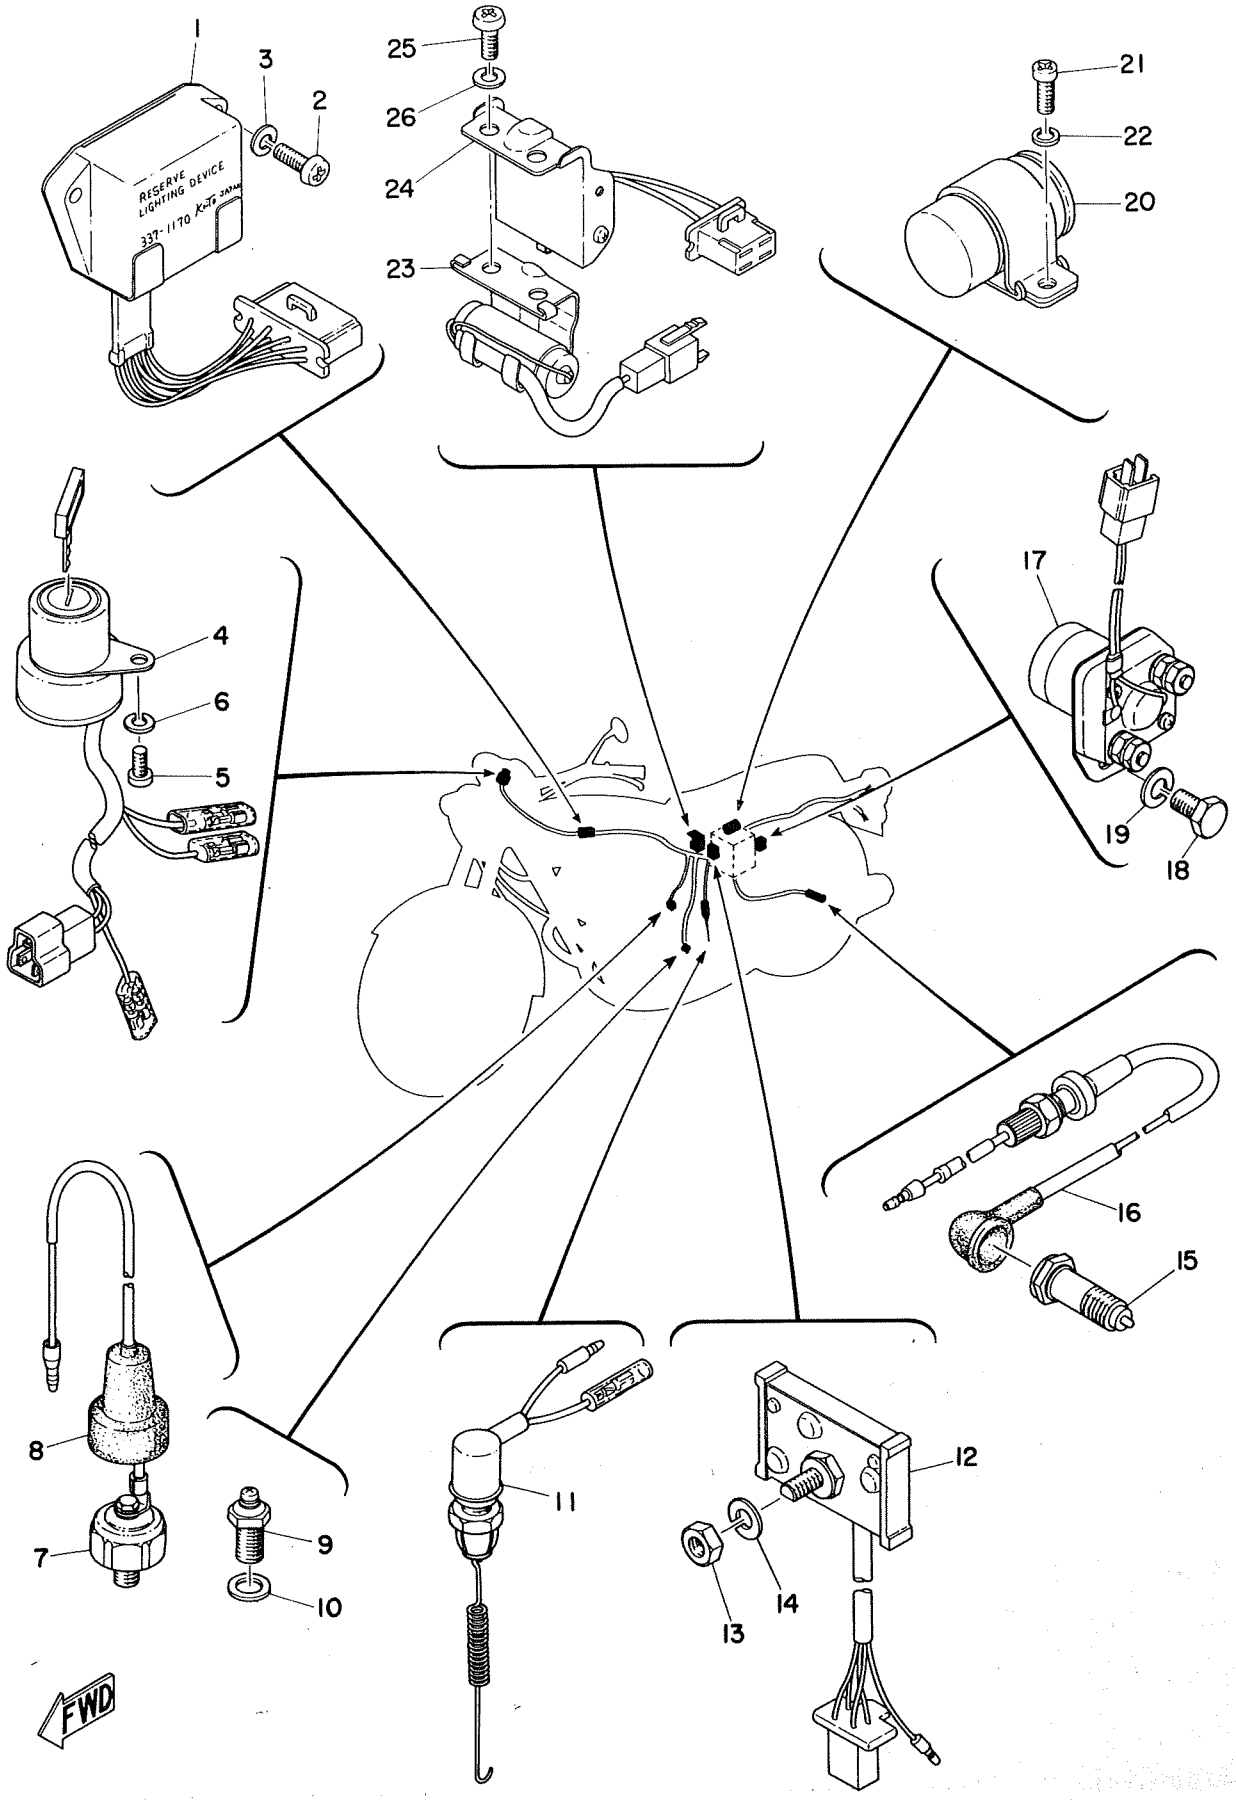


Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
44-24	341-81911-03	RESISTOR	1		
44-25	92501-06015	SCREW, panhead	2		
44-26	92501-06100	WASHER, spring	2		

ACCESSORY PARTS

YAMAHA
PARTS

Fig. 45 WIND SHIELD · BUMPER · SIDE BAG

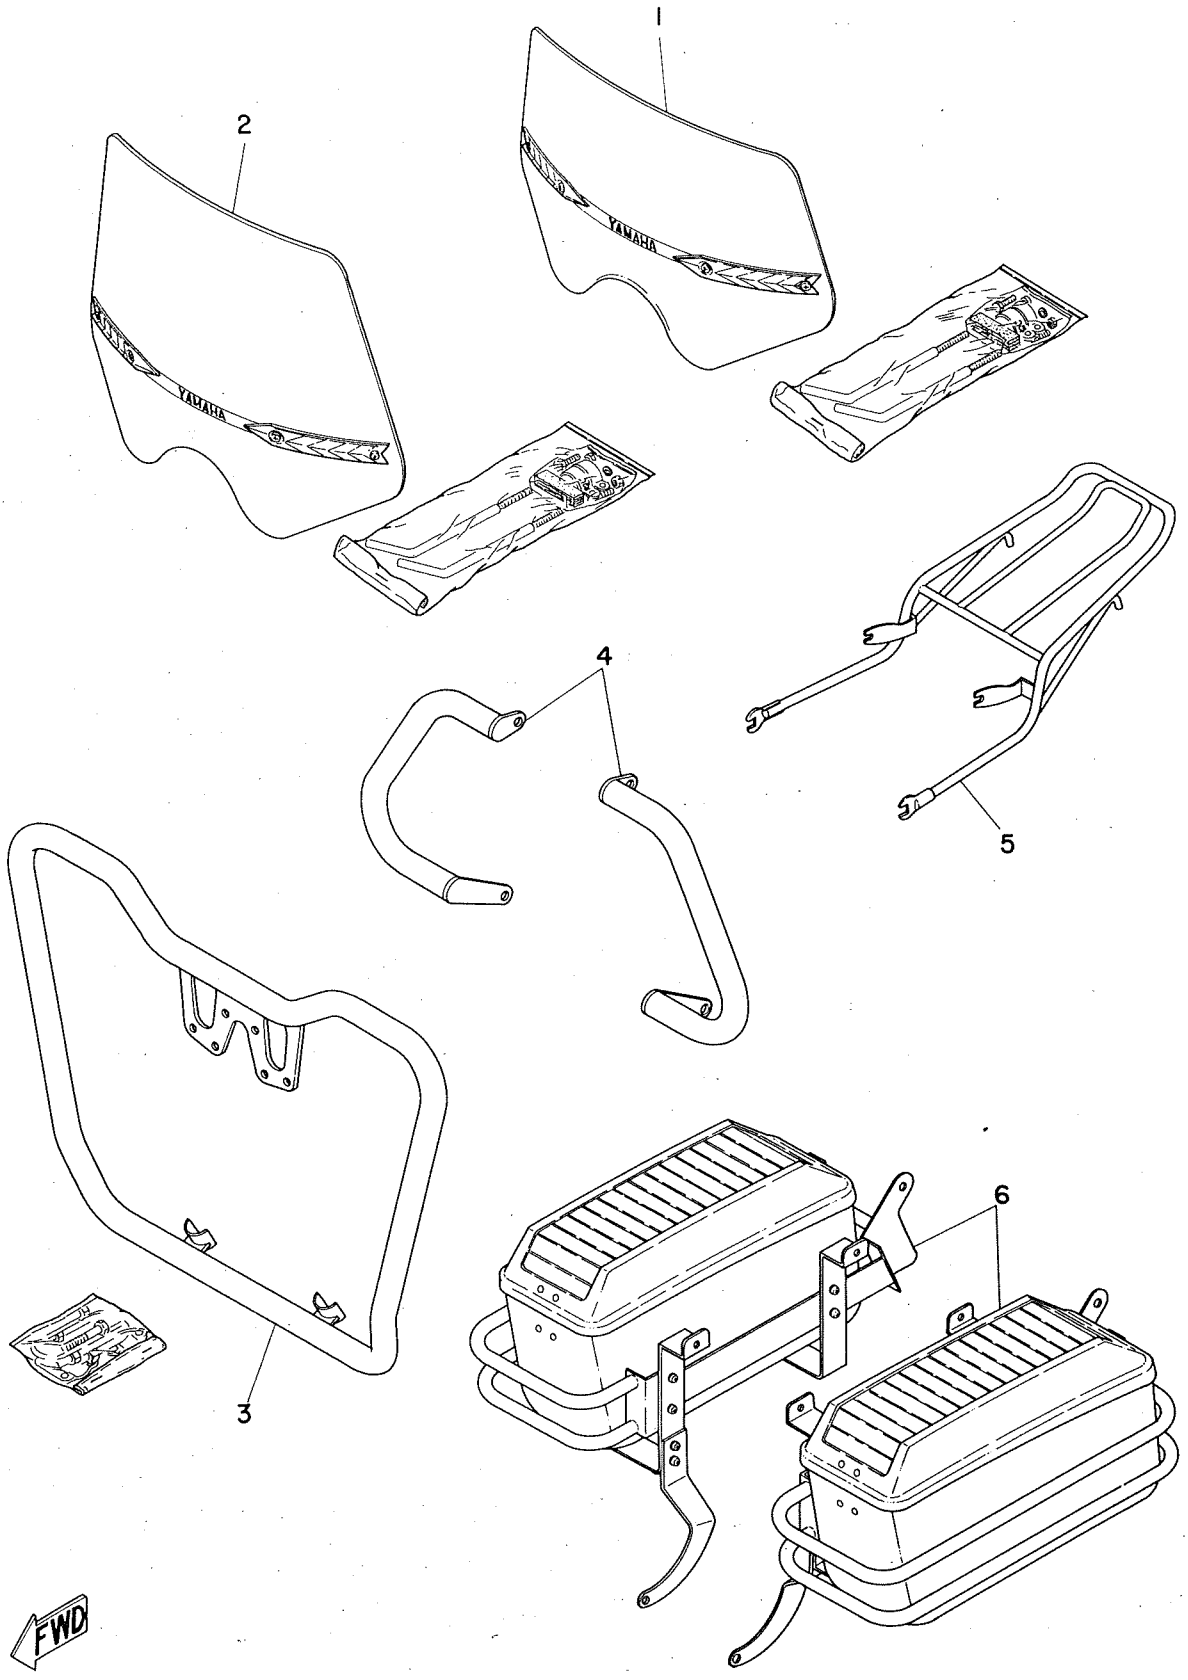

WIND SHIELD • BUMPER • SIDE BAG

Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
45- 1	90890-56604	WIND SHIELD ASS'Y	1s		Clear
	90890-56605	WIND SHIELD ASS'Y	1s		Blue
	90890-56606	WIND SHIELD ASS'Y	1s		Orange
45- 2	90890-56607	HIGH WIND SHIELD ASS'Y	1s		Clear
	90890-56608	HIGH WIND SHIELD ASS'Y	1s		Blue
	90890-56609	HIGH WIND SHIELD ASS'Y	1s		Orange
45- 3	90890-55019	FRONT BUMPER ASS'Y	1s		
45- 4	90890-55020	REAR BUMPER ASS'Y	1s		
45- 5	90890-55018	SUB-CARRIER	1		
45- 6	90890-55021	SIDE BAG ASS'Y	1s		

NUMERICAL INDEX

YAMAHA
PARTS

NUMERICAL INDEX

Ref No.	Parts No.	Ref No.	Parts No.	Ref No.	Parts No.
34-38	101-24356-00	30- 7	137-23454-00	34-36	178-14766-00
25-16	101-28323-00	34-21	137-24523-00	27-35	180-27236-00
25-32	101-28323-00	38-25	146-25411-00	24- 6	183-22143-00
26-10	101-28323-00	38-16	148-25359-00	27- 8	183-27316-00
36-22	102-18416-00	43-21	148-82151-00	40-24	193-81145-20
5-21	102-25137-00	39- 3	150-84153-00	39-21	195-84325-00
41-15	102-28323-00	36-18	152-17226-00	39-17	198-84334-60
43-12-1	104-82111-20	36-11	152-25115-00	27-37	206-27238-00
10- 3	110-81345-20	29-28	152-84518-00	32-16	207-26391-00
23-20	116-27114-00	13-11	156-16174-00	12-28	214-11198-01
25-28	116-28317-01	29-31	156-21581-81	22- 4	214-14195-00
25-38	116-28317-01	28- 4	156-22127-00	17-20	214-15618-00
26-25	116-28317-01	34-14	156-24181-00	13-23	214-16344-00
4-13	117-16119-00	25- 6	156-24186-00	13-21	214-16347-01
29-30	122-21582-81	29-23	156-24186-00	13-27	214-16379-00
31-27	122-23119-01	38-43	156-25398-00	13-26	214-16389-00
31-28	122-23129-00	27-32	156-27237-00	25-15	214-21633-00
29-26	122-24181-00	35- 6	156-83525-00	25-31	214-21633-00
40-20	123-83516-20	30-18	164-23462-00	26- 9	214-21633-00
22-34	127-14134-00	43-20	164-82150-00	41-16	214-21633-00
13-16	131-15653-00	43-11	166-82370-00	25-14	214-21717-00
17-11	131-15653-00	22- 3	168-14190-20	25-30	214-21717-00
13-30	132-16346-00	17-17	168-15622-01	41-17	214-21717-00
14-22	132-17216-00	13-29	168-16345-00	26- 3	214-21772-00
16-11	132-18113-01	14-26	168-17424-00	27-21	214-22143-00
34-37	132-24311-00	16- 2	168-18123-00	28-20	214-22241-00
34-23	132-24518-00	16- 3	168-18124-00	31-16	214-23114-00
34-24	132-24525-00	16- 4	168-18133-00	24-19	214-23483-00
24-17	134-23484-10	15- 6	168-18561-00	24-20	214-23485-00
29-17	135-21491-00	41-21	168-21738-00	24-18	214-23488-00
39-30	135-21491-00	38-30	168-25379-00	30-23	214-23490-00
15-17	136-18547-00	27-17	168-27433-10	30-24	214-23492-00
15-13	136-18551-00	16- 5	169-26251-00	35-18	214-24724-00
43-25	136-22316-00	13- 3	170-16164-00	36-31	214-25182-01
30- 6	136-23415-00	13-15	170-16164-00	32-18	214-26337-01
22- 6	137-14186-00	29-11	174-21518-00	27-12	214-27417-00
14- 9	137-17427-00-10	25-37	174-28316-00	27-11	214-27418-00
25-35	137-21778-00	26-24	174-28316-00	27-10	214-27426-00

NUMERICAL INDEX

Ref No.	Parts No.
32- 7	214-83913-00
41-20	214-84553-01
41-23	214-84717-00
32- 2	235-26241-00
32-11	235-26242-00
38-12	246-25333-00
16- 8	248-18137-00
27-36	248-27228-00
43- 7	254-82310-60
39-20	254-84347-00
3- 2	256-11133-10
3- 2	256-11133-20
3- 3	256-11134-10
3- 3	256-11134-20
10- 8	256-11151-00
3-11	256-11171-00
3-12	256-11174-00
18-13	256-11174-00
9- 5	256-11396-00
12-10	256-11396-00
2- 3	256-12116-01
2- 7	256-12117-00
2-11	256-12158-00
5-13	256-12218-00
5- 7	256-12248-00
12-14	256-13168-00
11-18	256-13334-00
21- 1	256-13556-00
21- 3	256-13564-00
22-27	256-14135-00
22-52	256-14197-01
21- 6	256-14455-00
21- 5	256-14456-00
21- 8	256-14487-00
22-38	256-14918-00
22-18	256-14919-00
22-33	256-14923-00
22-32	256-14934-01
22- 9	256-14942-45
22-10	256-14944-24
22-10	256-14944-26
22-10	256-14944-28
22-19	256-14946-00
22-41	256-14952-00
22-50	256-14953-00
22-39	256-14955-00
22-11	256-14956-01
22-21	256-14958-00
22-36	256-14973-00
22- 7	256-14984-00
22- 5	256-14985-00
22-55	256-14987-00
22-53	256-14988-00
22-12	256-14991-00
22-44	256-14997-00
18-11	256-15194-00
15-28	256-15439-00
17-18	256-15615-00
17- 2	256-15654-00
17- 1	256-15660-02
17- 9	256-15664-01
17- 8	256-15665-00
17- 7	256-15666-00
17- 3	256-15673-00
17- 5	256-15687-00
13- 6	256-16325-00
13- 8	256-16333-00
13- 9	256-16337-00
13-22	256-16343-00
13-10	256-16356-00
14- 8	256-17121-00
14- 5	256-17131-00
14- 2	256-17141-00
14- 3	256-17154-00-10
14- 3	256-17154-00-12
14-15	256-17221-00
14-19	256-17231-00
14-16	256-17236-00-10
14-16	256-17236-00-12
14-20	256-17241-00
14-18	256-17251-00
14-29	256-17461-70
14-31	256-17463-00
14-30	256-17464-00
15-22	256-18140-00
15-24	256-18143-01
15-23	256-18177-00
15-11	256-18512-00
15-16	256-18531-00
15-14	256-18552-00
15-19	256-18567-00
15-20	256-18577-00
25-19	256-21366-00
10-14	256-21615-00
28- 3	256-22123-01
31-13	256-23116-61
30- 1	256-23411-00
30- 2	256-23412-00
30- 3	256-23413-00
30- 4	256-23414-00
34-35	256-24143-00
34-19	256-24500-00
34-20	256-24510-00
34-34	256-24512-00
34-27	256-24521-00
34-26	256-24524-00
34-22	256-24524-00
34-31	256-24528-00
34-30	256-24537-00
34-32	256-24543-00
38- 8	256-25315-00
38-23	256-25367-00
38-19	256-25376-00
38-22	256-25377-00

NUMERICAL INDEX

Ref No.	Parts No.
38-32	256-25382-00
38-26	256-25412-00
38-24	256-25438-20
38-24	256-25440-20
38-24	256-25442-20
32-12	256-26243-00
32-19	256-26344-00
10- 2	256-81621-10
10- 6	256-81631-10
42- 4	256-83311-70
42-10	256-83311-70
42-16	256-83346-01
24-32	256-83936-00
42-15	256-84313-01
39-13	256-84331-60
41- 3	256-84714-61
39-29	256-84757-00
27- 6	266-27317-00
41- 2	275-84523-60
41- 8	275-84525-60
41- 7	275-84526-60
41- 9	275-84527-60
18- 8	276-11361-00
35-14	276-24748-00
35-15	276-24768-00
4-15	278-11546-00
31-22	278-23128-50
31-14	278-23142-50
31-26	278-23158-50
31- 7	278-23171-50
31-25	278-23181-50
27- 4	278-27116-00
22-15	306-14146-00
22-26	306-14171-01
22-30	306-14173-00
22-29	306-14174-00
22-40	306-14905-00
22-46	306-14931-00
22-47	306-14932-00
22-16	306-14940-00
22-28	306-14954-00
22-45	306-14969-00
22-35	306-14975-00
17- 4	306-15641-00
14-21	306-17211-00
16- 6	306-18139-00
15- 4	306-18546-00
15-18	306-18558-00
37- 0-1	306-20000-51
31-19	306-23346-60
36-23	306-25136-00
36-21	306-25138-00
37- 8	306-25810-01
37- 9	306-25811-00
37-15	306-25818-00
37-13	306-25824-01
37-14	306-25825-01
37-10	306-25827-00
37-11	306-25828-00
37-12	306-25829-00
37- 1	306-25831-00
37- 3	306-25833-00
37- 4	306-25834-00
33-23	306-25862-00
33-35	306-25871-00
33-34	306-25876-00
33-21	306-25877-00
33-22	306-25878-00
33-36	306-25881-00
8- 7	306-81811-10
8- 8	306-81812-10
8-13	306-81862-10
33-39	306-83924-00
33-18	306-83927-00
33-17	306-83928-01
41- 1	306-84711-60
35- 2	307-24726-00-33
34- 6	308-24623-00
34-10	308-24624-00
34- 3	308-24641-00
34- 2	308-24642-00
3- 1	341-11111-01
1-24	341-11149-10
1- 2	341-11154-02
1-19	341-11160-01
1-26	341-11161-00
1-23	341-11166-11
1-20	341-11169-00
3-15	341-11175-00
6-31	341-11175-00
12- 8	341-11175-00
3- 5	341-11181-00
1- 6	341-11183-02
1- 5	341-11184-02
1-15	341-11186-02
1-25	341-11189-02
1- 1	341-11191-01
1- 4	341-11193-00
3- 6	341-11311-02
3- 8	341-11351-00
3- 9	341-11361-00
1- 7	341-11391-01
1-11	341-11392-00
3-16	341-11398-00
23- 2	341-11398-00
4- 1	341-11411-11
4-10	341-11416-00
4-10	341-11416-10
4-10	341-11416-20
4-10	341-11416-30
4-10	341-11461-40
6- 1	341-11454-05
6- 2	341-11455-03
6-27	341-11457-06

NUMERICAL INDEX

Ref No.	Parts No.	Ref No.	Parts No.	Ref No.	Parts No.
6- 3	341-11458-05	2- 6	341-12119-02	12-17	341-13464-10
6-12	341-11464-06	2- 2	341-12121-01	12-16	341-13465-10
6-13	341-11465-03	2- 9	341-12151-00	11-27	341-13468-01
6-10	341-11469-01	2-12	341-12156-01	11-26	341-13469-00
6-22	341-11474-05	2-10	341-12159-01	12-20	341-13475-00
6-20	341-11477-02	5- 1	341-12170-01	12-21	341-13476-00
6-19	341-11479-03	5- 6	341-12211-02	11-25	341-13477-01
6- 7	341-11483-00	5-15	341-12212-02	11-24	341-13478-00
7-14	341-11483-00	5-11	341-12216-02	11-28	341-13479-01
6-15	341-11484-00	5-10	341-12217-02	11-35	341-13483-00
6-18	341-11485-00	5-12	341-12228-00	11-36	341-13484-01
6- 5	341-11488-00	5- 2	341-12231-02	11-37	341-13485-00
6-11	341-11493-00	5-23	341-12238-00	11-33	341-13486-00
6-28	341-11494-00	5- 3	341-12248-00	11-31	341-13494-00
6-23	341-11495-01	5- 4	341-12249-00	11-34	341-13495-00
4-16	341-11545-00	6-24	341-12249-00	11-29	341-13496-00
4-12	341-11587-00	5-22	341-12256-00	11-32	341-13497-00
4- 7	341-11610-00	18-23	341-13115-10	21- 2	341-13565-00
4- 7	341-11610-10	12-12	341-13161-00	21- 9	341-14411-10-98
4- 7	341-11610-20	12-15	341-13165-00	21-11	341-14422-01-98
4- 6	341-11631-01-96	12-13	341-13166-02	21-10	341-14451-02
4- 8	341-11633-01	11- 4	341-13310-02	21- 7	341-14453-00
4- 9	341-11634-00	11- 1	341-13314-02	23- 9	341-14611-01
4- 6	341-11635-01	11-10	341-13316-01	23-11	341-14612-01
4- 6	341-11636-01	11-39	341-13317-02	23- 6	341-14613-00
4- 0-1	341-11650-00	11- 8	341-13318-01	23- 1	341-14615-01
4- 2	341-11651-00	11- 6	341-13320-02	23- 8	341-14618-01
4- 3	341-11652-00	11-17	341-13324-02	23-10	341-14621-01
4- 4	341-11654-00	11-13	341-13325-01	23- 5	341-14623-00
4- 5	341-11656-00	11-14	341-13335-00	23- 7	341-14624-00
4- 5	341-11656-10	11- 5	341-13336-01	23-18	341-14711-10
4- 5	341-11656-20	12-22	341-13411-04	23-16	341-14713-00
4- 5	341-11656-30	12-24	341-13414-03	23-17	341-14714-00
4- 5	341-11656-40	12-23	341-13417-04	23-12	341-14715-01
2- 1	341-12111-01	12- 1	341-13440-00	23-19	341-14721-10
2- 5	341-12113-00	12- 0-1	341-13440-90	22- 0-1	341-14901-04
2- 4	341-12114-10	11-19	341-13452-01	22- 0-2	341-14902-04
2- 8	341-12118-00	11-22	341-13453-00	22-48	341-14914-00

NUMERICAL INDEX

Ref No.	Parts No.	Ref No.	Parts No.	Ref No.	Parts No.
22-49	341-14915-00	7- 6	341-15583-02	24- 2	341-21416-00
22-17	341-14916-08	7- 7	341-15584-03	24- 3	341-21425-00
22-31	341-14922-00	17-15	341-15611-00-93	24- 8	341-21481-00
22-22	341-14926-00	17-13	341-15621-00	24- 9	341-21482-00
22-23	341-14927-00	4-11	341-16111-00	24-10	341-21483-01
22-20	341-14933-00	13- 1	341-16150-03	24-11	341-21484-01
22- 1	341-14941-86	13-14	341-16181-01	29- 1	341-21511-01-93
22- 8	341-14981-00	13-14	341-16181-11	29-29	341-21511-80
22-54	341-14988-00	13-14	341-16181-21	29- 2	341-21513-01
22-56	341-14991-00	13-14	341-16181-31	29- 3	341-21514-01
18- 0-1	341-15100-14	13- 0-1	341-16301-00	29-14	341-21611-00-93
18- 1	341-15111-05	13- 5	341-16321-10	29-24	341-21626-01
18- 2	341-15121-12	13-20	341-16340-01	29-22	341-21631-00
18-12	341-15157-00	13- 7	341-16351-00	29-27	341-21637-00
18- 4	341-15192-00	13-18	341-16357-01	29-16	341-21638-00
18- 5	341-15193-00	13- 4	341-16371-00	29-25	341-21639-00
18- 6	341-15194-00	14-13	341-16375-00	29-15	341-21645-00
18- 7	341-15195-00	13-24	341-16396-00	25-24	341-21647-00
18- 9	341-15197-00	14- 6	341-17151-00	25-26	341-21711-00-K1
18-10	341-15198-00	14- 1	341-17411-00	25-26	341-21711-00-M5
18-20	341-15337-00	14-14	341-17421-00	25-29	341-21717-00
12-27	341-15351-00	14-27	341-17462-00	26-13	341-21721-01-K1
6-30	341-15395-00	18-24	341-17466-00	26-13	341-21721-01-M5
6-29	341-15396-00	18-25	341-17467-00	26- 5	341-21745-03
19- 1	341-15411-01	5-18	341-17841-00	25- 9	341-21746-00
19- 6	341-15415-02	5-19	341-17867-00	25- 3	341-21747-00
12- 6	341-15416-03	16- 1	341-18101-01	25-10	341-21748-00
19- 3	341-15421-01	16-10	341-18111-10-93	26- 1	341-21751-01-33
19- 8	341-15425-02	15-10	341-18511-01	26- 7	341-21757-00
20- 1	341-15431-00	15-12	341-18513-00	26- 2	341-21771-00
7- 9	341-15436-00	15- 1	341-18541-01	26- 6	341-21775-01
20- 2	341-15451-01	15-25	341-18562-00	26- 8	341-21778-00
19- 7	341-15455-03	15-26	341-18565-00	26-27	341-21779-00
19- 2	341-15474-00	15-27	341-18594-00	25-27	341-21781-00
7- 1	341-15518-01	24- 1	341-21110-04-33	26-14	341-21782-01
7- 2	341-15519-05	25- 2	341-21166-01	25-39	341-21785-00
7-11	341-15551-00	25- 1	341-21170-01-33	26-26	341-21785-00
7- 4	341-15580-03	25-20	341-21376-00	25-36	341-21787-02

NUMERICAL INDEX

Ref No.	Parts No.	Ref No.	Parts No.	Ref No.	Parts No.
26-23	341-21787-02	31- 8	341-23170-50	38- 2	341-25304-00
26- 4	341-21792-00	31-18	341-23340-51-33	38- 1	341-25311-00
28- 1	341-22110-01-33	30- 8	341-23435-00	38- 7	341-25317-00
28- 5	341-22128-00	30-15	341-23441-00	38-13	341-25321-00
28- 6	341-22141-01	30-13	341-23443-00	38-11	341-25330-00
28- 8	341-22143-00	30-14	341-23451-00	38-14	341-25351-00
28- 7	341-22149-00	30-16	341-23452-00	38-15	341-25353-00
28-10	341-22177-00	30-17	341-23469-00	38-17	341-25355-00
28- 2	341-22184-00	30-19	341-23472-00	38-36	341-25371-00
28-13	341-22210-20	24-16	341-23480-00	38-38	341-25373-00
28-15	341-22211-20	34- 1	341-24110-11-01	38-37	341-25378-00
28-14	341-22212-20	34- 1	341-24110-11-02	38-35	341-25381-00
28-16	341-22213-20	34-16	341-24161-12	38-34	341-25383-00
28-17	341-22243-00	34-17	341-24162-12	38-29	341-25388-01
28-21	341-22311-02-98	34-15	341-24181-00	36- 8	341-25411-00
28-23	341-22331-00	34-12	341-24602-01	37- 6	341-25411-00
28-22	341-22332-00	34- 4	341-24612-00	37- 7	341-25412-00
28-24	341-22334-00	34- 8	341-24628-00	33- 4	341-25809-00
31- 0-1	341-23101-50	34- 9	341-24637-00	37- 2	341-25832-01
31-17	341-23111-51	34- 0-1	341-24653-00	36-14	341-25846-00
31-33	341-23115-50	35- 8	341-24705-00	36- 7	341-25847-01
31-15	341-23118-50	35-10	341-24727-00	33- 0-1	341-25850-00
31-31	341-23121-50-K1	35- 7	341-24728-00	33- 1	341-25851-00
31-31	341-23121-50-M5	35- 1	341-24730-10	33- 9	341-25852-00
31-29	341-23122-51	35- 1-1	341-24731-10	33-11	341-25854-00
31-10	341-23124-50	35- 9	341-24776-00	33-10	341-25855-00
31- 1	341-23126-50	25-11	341-24818-00	33- 5	341-25857-00
31-32	341-23131-50-K1	36- 2	341-25104-00	33- 3	341-25858-00
31-32	341-23131-50-M5	36- 1	341-25111-01	33- 2	341-25863-00
31- 2	341-23136-50	36-10	341-25117-01	33- 6	341-25866-00
31- 9	341-23141-50	36-29	341-25118-00	33-12	341-25867-00
31-11	341-23144-50	36-17	341-25135-01	33- 7	341-25868-00
31- 3	341-23145-50	36-15	341-25137-00	33- 8	341-25869-00
31- 4	341-23146-50	36-16	341-25147-00	33-24	341-25872-00
31- 5	341-23156-50	36-13	341-25149-00	33-33	341-25873-00
31-12	341-23163-50	36-24	341-25181-01	33-28	341-25881-00
31-21	341-23167-50	36-27	341-25183-00	33-29	341-25883-01
31-30	341-23168-50	36-20	341-25191-01	33-30	341-25885-03

NUMERICAL INDEX

Ref No.	Parts No.	Ref No.	Parts No.	Ref No.	Parts No.
33-25	341-25887-01	44-23	341-81625-10	44- 8	341-82507-00
32- 1	341-26111-00	9- 1	341-81650-12	44- 4	341-82508-80
32- 2	341-26241-00	9- 6	341-81652-00	24-29	341-82522-00
32-11	341-26242-00	10-10	341-81653-11	25-21	341-82523-00
32-20	341-26290-01	9- 3	341-81660-12	24-25	341-82524-00
32-20	341-26290-10	9-10	341-81662-00	44-11	341-82530-10
32-14	341-26311-00	9- 8	341-81663-00	44-16	341-82531-01
32-15	341-26312-00	8- 0-1	341-81800-13	44- 9	341-82540-01
33-20	341-26329-00	8- 5	341-81809-10	44-10	341-82543-00
32-17	341-26335-03	8- 6	341-81810-12	43- 1	341-82590-83
32-13	341-26393-00	8- 9	341-81813-10	32- 0-1	341-82910-00
24-24	341-26397-01	8-14	341-81816-10	32- 4	341-82911-00
27- 1	341-27111-00	8-10	341-81820-11	42- 1	341-83310-71-93
27- 2	341-27112-00	8-11	341-81826-10	42- 2	341-83312-70
27-23	341-27211-02-93	8- 1	341-81830-11	42- 8	341-83312-70
27-24	341-27212-01	8- 2	341-81834-10	42- 3	341-83313-70
27-30	341-27216-00	8-12	341-81835-10	42- 9	341-83313-70
27-28	341-27217-00	18-21	341-81838-00	42-12	341-83316-01
27-31	341-27231-00	18-22	341-81839-00	42-13	341-83321-01
27- 5	341-27311-00	8- 3	341-81847-10	42- 6	341-83330-20-93
27-38	341-27314-00	8- 4	341-81850-10	42- 5	341-83333-70
27- 0-1	341-27410-01	43-22	341-81910-13	42-11	341-83333-70
27-14	341-27413-00	44-24	341-81911-03	42- 7	341-83340-20-93
27- 0-2	341-27420-01	44-17	341-81940-12	42-14	341-83348-00
27-13	341-27423-00	44-12	341-81970-11	44-20	341-83350-70
27-15	341-27430-00	43- 2	341-81980-01	43- 4	341-83371-21
27-16	341-27431-00	43-12	341-82110-72	40-22	341-83507-40
27-18	341-27437-00	43-13	341-82112-00	40-23	341-83508-40
27- 9	341-27451-00	43-14	341-82115-03	40-21	341-83509-80
25-25	341-28100-10	43-16	341-82116-01	40- 9	341-83513-40
35-19	341-28185-00	43-15	341-82119-00	40-15	341-83513-40
35-20	341-28187-00	43-19	341-82121-00	40-11	341-83514-40
35-21	341-28188-00	43-18	341-82122-00	40-17	341-83514-40
9- 0-1	341-81600-12	43-17	341-82131-01	40- 1	341-83519-80-98
9- 2	341-81610-12	43-26	341-82139-00	40-10	341-83523-40
19-14	341-81614-04	43-10	341-82341-00	40-16	341-83523-40
10- 7	341-81615-11	44-15	341-82503-01	40-14	341-83540-00
10- 1	341-81620-11	44- 7	341-82504-02	40- 5	341-83546-00

NUMERICAL INDEX

Ref No.	Parts No.	Ref No.	Parts No.	Ref No.	Parts No.
40-27	341-83546-00	41-11	341-85111-60	33-31	91201-06025
40-26	341-83547-40	34-18	360-24143-00	35-11	91201-06025
40-31	341-83550-00	3-17	611-43133-00	29-32	91203-06012
40-32	341-83560-00	17- 6	611-45567-00-05	32- 6	91203-06020
40- 8	341-83570-41	34-33	801-24437-00	38-18	91203-06020
40-28	341-83573-00	6- 6	90109-10169	41-14	91203-06025
40- 2	341-83574-00	6-14	90109-10169	7- 8	91310-08012
40- 3	341-83575-00	40- 4	90159-03001	18-26	91316-06010
40- 8	341-83580-21	35- 5	90240-05001	7-10	91316-06012
43- 3	341-83581-20	18-29	90338-23001	1-21	91316-06020
33-38	341-83909-00	18-28	90344-52001	11-12	91316-06020
32- 5	341-83912-00	12- 2	90430-13002	21- 4	91316-06020
33-19	341-83922-00	45- 5	90890-55018	9- 4	91316-06022
33-15	341-83925-00	45- 3	90890-55019	12-19	91316-06025
32-10	341-83963-00	45- 4	90890-55020	12-26	91316-06025
32- 3	341-83972-00	45- 6	90890-55021	19- 4	91316-06025
33-37	341-83980-30	45- 1	90890-56604	19-11	91316-06025
44- 1	341-84308-02	45- 1	90890-56605	9- 9	91316-06030
39- 0-1	341-84310-00	45- 1	90890-56606	19- 5	91316-06030
39-19	341-84312-00	45- 2	90890-56607	19-13	91316-06030
39- 4	341-84315-60	45- 2	90890-56608	20- 4	91316-06030
39-22	341-84318-00	45- 2	90890-56609	1-22	91316-06040
39- 6	341-84320-00	12- 9	91101-06008	20- 5	91316-06045
39- 1	341-84330-62-K1	39-23	91101-06015	19-12	91316-06050
39- 1	341-84330-62-M5	33-13	91101-06025	1-17	91316-06070
39-16	341-84332-60	25-13	91101-06030	1-18	91316-06075
39-14	341-84333-60	23-13	91101-10020	13-28	91401-10010
39-28	341-84336-00	29- 4	91103-06012	27-20	91401-16012
39- 7	341-84394-60	29- 6	91103-06018	38-42	91401-20015
39- 5	341-84395-60	16-12	91103-06020	27-33	91401-25012
39- 2	341-84396-61	25-34	91103-06025	15-15	91401-25025
39-18	341-84397-61	26-12	91103-06025	27- 3	91401-30025
41- 0-1	341-84710-00	27-26	91103-06025	36-25	91401-30028
41- 4	341-84721-00	39-26	91101-06025	38-33	91401-40035
41- 6	341-84722-60	1- 3	91201-06010	27-19	91501-06035
41- 5	341-84724-60	33-27	91201-06012	1-14	91810-02014
41-10	341-84751-61-93	35- 3	91201-06012	1-10	91810-05016
24-21	341-85111-00	35-16	91201-06012	18- 3	91810-05016

NUMERICAL INDEX

Ref No.	Parts No.	Ref No.	Parts No.	Ref No.	Parts No.
19-10	91810-05016	39- 9	92901-05100	18-27	92901-06200
20- 3	91810-05016	44- 6	92901-05100	21-13	92901-06200
3-10	91810-16016	24-23	92901-05200	27-34	92901-06200
44- 5	92501-05010	26-22	92901-05200	35-13	92901-06200
24-30	92501-06010	15- 8	92901-05300	39-25	92901-06200
12- 3	92501-06012	5- 5	92901-06100	40-13	92901-06200
21-14	92501-06012	5- 9	92901-06100	40-19	92901-06200
5- 8	92501-06015	6-25	92901-06100	12- 5	92901-06500
11-40	92501-06015	10-13	92901-06100	7-12	92901-08100
44-21	92501-06015	11-15	92901-06100	24- 7	92901-08100
44-25	92501-06015	11-41	92901-06100	25- 5	92901-08100
44- 2	92501-06018	24-31	92901-06100	25- 7	92901-08100
43-23	92501-06025	25-12	92901-06100	28-12	92901-08100
44-26	92501-06100	25-17	92901-06100	29-10	92901-08100
21-12	92502-06008	25-23	92901-06100	29-21	92901-08100
26-15	92506-04010	25-33	92901-06100	31-24	92901-08100
12- 4	92701-06015	26-11	92901-06100	36- 9	92901-08100
22-37	92801-10300	29-12	92901-06100	38-41	92901-08100
28-19	92803-10700	29-18	92901-06100	42-17	92901-08100
37-18	92803-10700	29-34	92901-06100	43- 6	92901-08100
13-12	92900-18100	30-25	92901-06100	44-14	92901-08100
13-13	92900-18200	32- 9	92901-06100	44-19	92901-08100
40-25	92901-03100	33-14	92901-06100	1- 9	92901-08200
10- 4	92901-04100	33-26	92901-06100	3-14	92901-08200
22-14	92901-04100	33-32	92901-06100	7-13	92901-08200
22-42	92901-04100	35- 4	92901-06100	18-15	92901-08200
24-27	92901-04100	35-12	92901-06100	38-40	92901-08200
30-21	92901-04100	35-17	92901-06100	41-22	92901-08200
34-29	92901-04100	39-24	92901-06100	9- 7	92901-10100
39-12	92901-04100	39-27	92901-06100	23-14	92901-10100
40-30	92901-04100	41-18	92901-06100	24-13	92901-10100
10- 5	92901-04200	43- 9	92901-06100	37-16	92901-10100
24-28	92901-04200	43-24	92901-06100	23-15	92901-10200
30-22	92901-04200	44- 3	92901-06100	37-17	92901-10200
39-15	92901-04200	44-22	92901-06100	24-15	92901-12100
22-25	92901-05100	1-13	92901-06200	31-20	92901-12100
24-22	92901-05100	6-26	92901-06200	36-30	92901-14200
26-21	92901-05100	10- 9	92901-06200	41-12	92903-05100

NUMERICAL INDEX

Ref No.	Parts No.
27-27	92903-06100
28-25	92903-06100
29- 5	92903-06100
29- 7	92903-06100
29- 8	92903-06200
29-35	92903-06200
30-11	92903-08100
23- 3	92903-10100
28-18	92903-10100
23- 4	92903-10200
27-22	92903-12100
26-16	92906-04100
26-18	92906-05100
26-19	92906-05200
40- 6	92906-08100
40- 7	92906-08200
13-19	93102-08094
11-21	93102-11119
17-12	93102-25064
36-19	93102-28022
38-21	93102-35065
5-20	93104-08037
11- 3	93104-11038
38-10	93104-27026
14-28	93105-40016
36-28	93105-45017
16- 7	93109-14010
22- 2	93210-03142
18-19	93210-09192
40-33	93210-14104
3- 4	93210-15151
12-18	93210-15171
5-14	93210-32172
19- 9	93210-35173
1-16	93210-45191
11-20	93210-46174
11- 9	93210-48210
12-11	93210-54175
3- 7	93210-87176
14-11	93305-20501
14-25	93305-20601
36-26	93306-30301
36-12	93306-30304
38- 9	93306-30404
38-20	93306-30507
6-17	93311-42009
6- 9	93311-52510
14-24	93313-32005
14-10	93313-32007
15- 2	93318-32003
15-21	93320-31501
13- 2	93341-23009
14-23	93410-20021
14- 7	93410-25017
17-10	93410-25017
11-38	93420-11030
31- 6	93420-28025
11-23	93420-50012
34- 5	93430-06005
16- 9	93430-12009
17-19	93430-12022
38- 6	94340-18022
34- 7	93430-02001
34-11	93430-02001
11- 7	93440-11024
14- 4	93440-25020
14-17	93440-30015
14-12	93440-52014
6-16	93450-30019
6- 8	93450-36018
11-30	93501-04004
30- 5	93501-04011
17-16	93505-16006
13-17	93505-16006
10-11	93603-07073
11-11	93603-08072
11- 2	93603-17070
15- 3	93604-10011
12-25	93604-12037
15- 5	93604-14012
15- 7	93604-14012
7-15	93605-09095
6- 4	93605-10090
7- 5	93615-12088
27-25	93700-06001
28- 9	93700-06001
36- 3	94135-19104
36- 3	94135-19126
38- 3	94140-18100
38- 3	94140-18127
36- 4	94235-19034
38- 4	94240-18024
36- 6	94335-19026
36- 5	94418-19069
38- 5	94421-18067
5-16	94562-19104
7- 3	94563-16052
6-21	94563-16054
38-27	94575-30105
5-17	94662-19001
38-28	94675-30011
3-18	94701-00044
25-18	97101-06025
44-18	97101-08015
29- 9	97101-08020
17-14	97101-08030
18-18	97101-08040
6-32	97101-08050
24- 4	97101-08065
24- 5	97101-08070
12- 7	97101-08085
18-17	97101-08110
18-16	97103-08140
3-13	97111-08085

NUMERICAL INDEX

Ref No.	Parts No.
26-20	97201-05008
25- 4	97201-08015
43- 5	97201-08015
28-11	97201-08040
4-14	97201-14025
29-20	97203-08015
30- 9	97203-08050
30-10	97203-08065
26-17	97206-05008
34-25	98501-03006
34-28	98501-04008
39-11	98501-04008
30-20	98501-04010
40-29	98501-04010
22-13	98501-04012
22-43	98501-04012
24-26	98501-04015
34-13	98501-04018
39- 8	98501-05010
13-25	98501-05012
22-24	98501-05014
15- 9	98501-05040
25-22	98501-06010
40-12	98801-05100
40-18	98801-05100
39-10	98801-05200
10-12	98801-06100
29-13	98801-06100
29-19	98801-06100
37- 5	98801-06100
41-19	98801-06100
43- 8	98801-06100
1-12	98801-06200
11-16	98801-06300
32- 8	98801-06300
33-16	98801-06300
25- 8	98801-08100
31-23	98801-08100
38-39	98801-08100
42-18	98801-08100
44-13	98801-08100
27- 7	98801-08300
38-31	98801-08300
24-12	98801-10100
24-14	98801-12100
22-51	98801-12200
41-13	98803-05100
29-33	98803-06100
27-29	98803-06300
18-14	98803-08200
30-12	98803-08700
1- 8	99801-08200
Ref No.	Parts No.