MOTORCYCLE SERVICE NEWS


NUMBER 304

PAGE 1 of 1

YAMAHA INTERNATIONAL CORPORATION
BUENA PARK, CALIFORNIA 90620
DATE 12/6/72

TX750 OIL TANK LEVEL, Checking Instructions

Attached are five Oil Level Check Instruction Decals, P/N LIT-11190-03-73. Install one decal on each TX750 not so equipped. Order additional decals via standard procedure.

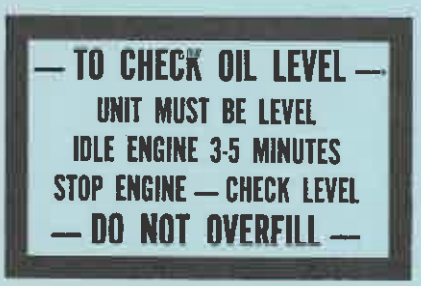



The check valve between oil tank and pump (Parts List, Ref. #11-27~28) prevents drainage into crankcase when engine is not running. If valve malfunctions, a t e m p o r a r y condition known as "wet-sumping" will occur.

A tank level check under wet sump condition will read low or "Empty". If oil is added, excess will discharge out breather.

Level check procedure:

1. Place unit on main stand on level ground.
2. Start engine.
3. Let engine idle 3-5 minutes.
4. Shut engine off.
5. Check oil tank level immediately.

NOTE: Dip stick should be removed, cleaned, and reinserted completely into seat, then checked. If unit is fresh out of crate, and oil level shows low after 3-5 minutes idling, restart and idle for additional 3-5 minutes; check level and top off as required.

# # # #